



Extended Manual for DB25-D & GD-88 Radioddity Radioddity

V2.0, July 2022

ž

bout F	f Contents Radioddity	11
Dise	Radioddity	
2 Rev	ision history of this document	13
	duct safety and RF exposure for portable radios	
3.1	Notes on the use of the radio	
3.2	Maintenance and Cleaning	
	ntenance	
	aning	
	at is in the box?	
4.1	Bill of materials for Radioddity DB25-D 💷	
4.2	Bill of materials for Radioddity GD-88	
	pare radio for operation	
5.1	Radioddity DB25-D preparation and mounting	20 20
5.2	Radioddity DB25-D Antenna connection	20 21
5.2 5.3	Radioddity DB25-D power supply options	27 27
	bile Operation	
	e Station Operation	
	lace fuse	
5.4	Radioddity GD-88 Preparation	
	unt GD-88 Antenna a	
	rge the battery pack	
	all Radioddity GD-88 battery pack	
	all Radioddity GD-88 hand strap and belt clip	
5.5	Accessories connection	
	ernal speaker/headset and microphone	26
Rad	ioddity DB25-D Speaker-Microphone	20 27
5.6	ioddity DB25-D Speaker-Microphone 🗂	
	s description & function applications	
5.7	Radioddity GD-88 radio controls	
5.8	Radioddity DB25-D display	- A A
5.9	Radioddity GD-88 display	
5.10	Status Icons	
Trai	nsmit / Receiving Icons	
	Indicators	
5.11	Keypad operations	
Kev	s and ENC (channel Selector) operation	
-	Main functions description	
Con	חשמי functions	
Ana	log Functions \odot	40
	tal Functions 🛈	
-	Using the numeric keypad	
	nanumerical input of characters	
-	grammable Function keys	

v2.0

6 Ba	sic Operation	43
6.1	Turning the radio On/Off	43
6.2	Adjust Volume	43
6.3	Adjust Squelch \odot	43
6.4	Switch VFOs	44
6.5	Busy Channel Lockout 🗢	44
6.6	Wide/ Narrow Band \odot	
6.7	CTCSS / DCS ⊖	44
6.8	Channel Selection	45
6.9	Switch between VFO and Channel Mode	45
6.10	VFO Frequency Set	46
6.11	Zone / Channel Selection	46
6.12	Monitor 🗢	46
6.13	Permanent Monitor 🗢	
6.14	Repeater / Talk Around 💷	47
6.15	Emergency Alarm 🕕	47
6.16	Scan On/Off	47
6.17	Roaming On / Off	48
6.18	1750Hz Pilot tone \odot	48
6.19	Promiscuous Mode 🕕	48
7 Usi	ing the radio menu	49
7.1	Accessing the menus and operations	50
8 Pla	cing a PTT Call	51
8.1	High / Low power	51
8.2	Select the transmitting VFO	51
8.3	Receive and Answer to a digital radio call ${ m I}$	51
8.4	Initiate a digital radio call 💷	
8.5	Receive and Answer to an analog radio call $\overline{\bigcirc}$	53
9 Spe	ecial DMR functions 🔍	54
	note monitor	
	note Kill	
Rad	dio Detection $^{\textcircled{1}}$	55
Rad	dio Revive 🚇	55
	I Alert	
	S 🕕	
	cord 🛈	
	MF	
End	cryption 🛈	56
	e radio Menu functions in detail	
	Contacts 🚨	
	ntact list 🗾 🕕	
Ne	w Contact 🏜 💷	58
Ma	nual Dial 🙆 🛈	59
	m Contacts 🗐 🕕	
Ha	m Group Contacts 📴 🕕	60
	Message 🙆 🕕	
INE	twork support for short messages	61

CreateMsg 🚺 🕕	62
Common Messages CommMsg 🔽 🕕	63
Inbox 🖳 🔍	63
Outbox 🔜 🛈	64
Draftbox 🕒 🕕	
10.3 Call Log 📞 🕕	
Dialed Calls (DialedNumbs) 🔄 🕕	
Received Calls 🔮 🕕	66
Missed Calls 🔽 💷	67
10.4 Scan 🔽	
Scan 🔄	
Scan List 😂	
Scan Mode 😂	
Roam Setting 💟	
Precautions for roaming	
10.5 Zones & Channel 🔒	
10.5 Zones & Chunner	
Language	73
Keypadlock 🔒	
Backlight \min 🖉	
LED indicator (LEDs) 🗖 DisplayMode 🧮	
VOX 👱	
Channel Sw 🖸	
Factory Reset 📴	
ABRepeat 🔜 🖬	77
10.7 Parameters 🖻	
тот 🔮	
Power 🧏	
Slot/Repeat 🦲 🕕	
Sleep Mode 🖉 🖢	80
Encryption (ENC Level) 🔟 🕕	81
Squelch Level (SQ level) 🛣 🗢	
Wide / Narrow Band (Bandwidth) 🙆 😑	
Busy Channel Lockout (BCLO) 🚨 🗢	
Signaling 🔤 😔	82
CTCSS Phase Reverse (Ctcss Tail) 🚾 😔	83
10.8 Tone Set 🗾	
Profiles 🚾	83
Key Tone (KeyTone) 🛒	84
Power Tone 📴	84
Message Tone (MsgTone) 🗟 🛈 Private Call Ring Tone (PCallTone) 💁 🕕	84
Private Call Ring Tone (PCallTone) 🛂 🕕	84
Group Call Ring Tone (G Cal <u>l T</u> one) 🚰 🕕	85
Alert Ring Tone (AlertTone) 📓 🕕	85
FM Call Tone / Power On Tone 📕 💷	86
10.9 Appendix 🗟	
···· ··· ···· ···· ···· ····	

GPS 💟	
FM Radio 🥌	
Time 👼	
DTMF 🏧 💷	
Headset+Speaker 🛜	
APRS 🗐	
10.10 Record — ①	
10.10 Record 🗖 🕕 10.11 Device Info 🖺	
10.12 Channel Edit 🙆	
11 Prepare for using the CPS	
11.1 Install device driver	
11.2 Install CPS	
11.3 Start CPS	
Special functions	
Safe factory settings to a file	
Connect to the radio	
Read codeplug from DB25-D or GD-88	
Read codeplug from DB25-D or GD-88 Safe codeplug to file	
Write codeplug to DB25-D or GD-88	102
Open existing codeplug	
FactoryReset	103
12 Using the CPS to make changes to your settings	
12.1 Device Info	
Factory Number	
Serial Number	
Model Number	
Firmware Version	106
Version Data	
Frequency Range	
The Latest Update	
Firmware ID 🛄	
12.2 Basic Parameters	and the second sec
Radio Name	
Language	
TOT	
Busy Channel Lockout	
VOX	
VOX Sensitivity	
Power-saving	108
Power Saving Ratio	
Save power startup time	
Scanmode	
End-tone types	
Squelch (A) Level Θ	
Sauelch (B) Level 😔	
Radio ID 🖲	
Radio ID 🖲 Rolling Code	

v2.	0
-----	---

Backlight ON/OFF	111
Keylock	111
Roaming	
Roaming Mode	113
RSSI Set	113
Connect Check Timer	
Connect Repeater Check Timer	114
Connect Time	114
Record Set 🕕	
12.3 Common Menus	
12.4 Prompt Tone	
Profiles	
SMS prompt 💷	
Private Call Tone ^①	116
Group Call Tone 🕕	
Roaming restart prompt	117
Repeater lock prompt	
Keytone	
Keytone volume	
Low Battery Alert tone	
Low Battery Alert volume	
Boot ringtone	
Call hang up 🕕	
12.5 Indicator	
All Indicators	
TX Indicator	
RX Indicator	
Scanning Indicator	
Low battery Indicator	
12.6 Preset Keys	
Long Press Duration	
Available Function for the Preset Keys	
12.7 Mic Gain	
MIC Gain 1 ON/OFF	
MIC Gain 1	
MIC Gain 2 ON/OFF	
MIC Gain 2	
12.8 Quick Msg	
12.9 DMR Service ①	
Remote monitor duration ^①	
Remote Monitor Decode 🕕	
Remote Kill Decode	
Radio Detection (1)	
Radio Revive 🔍	
Call Alert (1)	
Group Call Hang Time ①	
Private Call Hang Time $\textcircled{1}$	131

v2.	0
-----	---

	Import Delay 🕕	131
	DTMF Duration (On-time) 💷	132
	DTMF Interval (Off-time) 💷	132
	DTMF Volume 🕕	132
	DTMF code 💷	132
	GPS	
	GPS interval	134
	GPS interval GPS channel	134
	Mandown 🖢	134
	Mandown Interval	
	Mandown Angle 🕯	
	Mandown Alarm Duration	
	Inactive Time	
2	Pre-alarm Time	
	Response transmission interrupt	
	Scrambling frequency	
	Keylock Password On/Off	
	Keypad Password	
	12.10 APRS	
	Analog APRS 😇	
	Digital APRS ①	
	Manual TX Interval[s] 으	
	APRS Auto TX Intervals[s]	
	Beacon	
	Latitude (degrees)	
	Longitude (degrees)	
	TX Freq [MHz] 으	
	TX QT/DQT ☉	
	Transmit Delay 🗢	
	Prewave Time 🗢	
	Transmit Power 으	
	APRS Tone 🗢	
	APRS Tone $\overline{\bigcirc}$ Destn SSID $\overline{\bigcirc}$	140
	Destn Call Sign 🗢	
	Your SSID	
	Your Call Sign $\overline{\bigcirc}$	
	APRS Symbol Table	
	APRS Map Icon	
5	APRS Signal Path $\overline{\bigcirc}$	143
	Your Sending Text $\overline{\bigcirc}$	
	No	
	Report Channel	
	APRS TG	144
	Report Slot 🚇	144
	Call Type ①	144
	Call Type ^① PTT ^① 12.11 Encryption ^①	144
	12.11 Encryption ^①	145

v2	.0
	•••

12.12 Contacts 💷	145
Contact list 🛈	
Ham contacts 💷	147
Ham groups 🕕	149
12.13 🔹 Digital Alarm List 🕕	151
12.14 Scan List	152
Scan List	152
Scan List Talkback	153
Scan TX Mode	153
Appointed Channel	153
Optional Channel	154
Selected Channels	154
12.15 RX Group 🕕	155
12.16 Zone [Channel]	155
Zone name	155
13 Setup of channels	156
13.1 Z-1	156
13.2 CH mode	156
13.3 CH Name	156
13.4 RX Freg	156
13.5 TX Freq	157
13.6 Power	157
13.7 Only RX	157
13.8 Alarm	157
13.9 Prompt	157
13.10 PCT (Private Call Type) 🕕	158
13.11 RX TS 💷	158
13.12 TX TS 🔍	
DMR use with simplex hotspot ^① 13.13 RX CC (Color Code) ^①	159
13.13 💦 RX CC (Color Code) 💷	159
13.14 TX CC 🔍	160
13.15 Msg Type 🕕 13.16 TX Policy 🕕	160
13.16 TX Policy 🕕	160
13.17 RX Group 🕕	161
13.18 Encryption List 🕕	161
13.19 Scan List	161
13.20 Contacts 🕕	
13.21 EAS (Emergency Alarm System) 🕕	162
13.22 Relay Monitor	162
13.23 Relay mode 🕯	162
Crossband analog to analog	163
Crossband digital to analog Crossband analog to digital	164
Crossband analog to digital	165
Crossband digital/analog to analog	166
Crossband analog/digital to digital	167
Crossband digital to digital	
Digital Same Frequency Repeater	169

v2.0)
------	---

13.24	Bandwidth 🗢	170
13.25		
Sup	oported CTCSS frequencies	170
Sup	ported DCS codes	171
Sup	oported DCS-I values (reverse DCS)	171
13.26		172
13.27		
13.28	TX SQ ⊖	172
13.29	TX QD/DQT (TX CTCSS/DCS) ⊖	173
13.30	APRS	173
14 Firı	mware Update	174
14.1	Firmware update	174
14.2	Install program for firmware update	174
14.3	Perform Firmware update	174
	ease notes	179
15.1	Firmware Release notes for DB25-D	179
15.2	Firmware Release notes for GD-88	179
15.3	CPS Release notes	180
16 Qu	ickstart for common use cases	
16.1	Simplex analog FM operation with other station	
16.2	Duplex analog FM operation with a local analog FM-repeater	
16.3	Analog FM operation including analog APRS	
16.4	Simplex digital DMR operation with other station	
16.5	Simplex digital DMR operation with Single-HAT hotspot	
16.6	Duplex digital DMR operation with Dual-HAT hotspot	
16.7	Digital DMR operation with digital repeater	
and the second sec	nnectivity	
17.1	Power connector of DB25-D	
	HF Antenna connector of DB25-D	
17.3		
17.4	RJ45 Speaker-Microphone connector of DB25-D	
17.5	K1 connector of DB25-D	
17.6	HF Antenna connector of GD-88	
17.7	Battery connector of GD-88	
17.8	K1 connector of GD-88	
18.1	chnical specifications	
18.2	General specifications of the DB25-D	
18.2	Receiver of the DB25-D Transmitter of the DB25-D	194 10 <i>1</i>
18.3	General specifications of the GD-88	
18.5	Receiver of the GD-88	
	Transmitter of the GD-88	196
19 Cer	Transmitter of the GD-88	197
19 Cei 19.1	FCC part 90 approval for DB25-D	
19.2	FCC part 90 approval for GD-88	
19.3	CE certificate for DB25-D	
19.4	CE certificate for GD-88	
, , , , ,		



About Radioddity

'You, our friend, and customer, are our focus'

At Radioddity, customers are important to us. As a customer, your time and money are important to you. When you buy radios online, you face a dilemma: buy from a reputable website at a high price, or try to save money by choosing a dealer who may or may not offer quality goods, service, and advice. At Radioddity.com, you do not have to choose between low prices and a secure shopping experience. Whether you are buying from us for the first time or a seasoned amateur radio operator, we always hope that with our products, prices, content, and sources, you will find exactly what you need. In recent years, Radioddity has better met the needs of wireless device buyers by creating a secure shopping experience. We do this by offering the highest quality products at an affordable price and providing you with first-class service. You deserve no less.

Our promise: to give you the best shopping experience

Strong partnerships enable us to offer you the latest technology and outstanding value for money under the Radioddity brand name. Our thoughtful and responsive customer service teams help us deliver on our promise to you and meet your everyday needs even better.

Whether providing you with the latest and greatest DMR and analog radios, accessories, and related products, providing outstanding technical support, or by working with the leaders of the amateur radio industry to develop helpful content to assist you with your purchase: Your concerns are our concerns.

We want to connect you with high quality radios at low prices. If, in your opinion, we do not honor this promise in any way, please let us know by e-mail: ddity

<u>support@radioddity.com</u>

Copyright© 2021-2022 by Radioddity

All right reserved. This manual or any portion thereof may not be reproduced or used in any manner whatsoever without the written permission of the publisher, except for the use of brief quotations embodied in critical reviews and certain other noncommercial uses permitted by copyright law. For permission requests, write to the publisher. Idity dity

1 Disclaimer

This document is intended as an enhanced version of the manual that comes with the radio. It does describe all those details, that are required to know in order to get the most out of your Radioddity DB25-D or GD-88. If you find anything that needs correction or should be added, please let us know at:

support@radioddity.com.

For those new to DMR we advise to look at the document our engineers prepared for them. Check the corresponding blog-entry for more details.

https://www.radioddity.com/blogs/all/radioddity-getting-on-air-with-your-dmr-radio

Those of you already familiar with analog and DMR operations, may just jump into our chapter on 'Quickstart for common use cases' starting on page 181.

However, and although this manual is quite comprehensive, we do advise you to read it all through. Especially DMR-operations may fail very easy if not all needed parameters are set up as required.

In case something does not work as you'd expect it to, restart with a fresh and new codeplug that only contains the minimum data required for the functionality you think that is failing. If you still cannot get it working as expected, such minimal codeplug and precise step by step instructions on how to reproduce your issue makes it much easier for our support staff to get your issue sorted out. Our support is available via <u>support@radioddity.com</u> only.

Windows^M, Linux^M and OS X^M are the properties of their respective owners. Should any trademark attribution be missing, mistaken or erroneous, please contact us as soon as possible for rectification.

Not all functionality is available in both operating modes of the radio and for both radios. For easier identification of those functionality, we used the following icons:



Described functionality is only available for digital DMR channels

Described functionality is only available for analog channels

The described function/feature is only available for the Radioddity DB25-D.

The described function/feature is only available for the Radioddity GD-88.

Parameter names, as displayed on the screen of the Radioddity DB25-D are written **bold&italic**.

2 Revision history of this document


We are constantly trying to update our manuals according to changes resulting of new firmware or CPS versions. If you miss any aspect in this document or believe that something has been described incorrectly or in a misleading way, please feel free to give us feedback at <u>support@radioddity.com</u>. We will try our best to make the next version of this document of even more added value for you.

Revision	Changes	released
V2.0	 Additional chapters and parameters for the Radioddity GD-88 Differentiation between Radioddity DB25-D and Radioddity GD-88 wherever required Rearrangement of some chapters/parts Minor additions and corrections 	2022-07-01
V1.1	 Added release notes for new firmware more precise description on how to use the promiscuous mode replaced 'band' by 'VFO' to be more precise when referring to one of the two VFOs (A and B) Minor additions and corrections 	2022-03-11
V1.0	 Initial version which now has the original manual (that comes with the radio) merged with our previous Addendum resulting in this extended manual for the Radioddity DB25-D 	2022-02-01
Ra	dioddity Rad	ioddit

Radioddity

Radioddity

Product safety and RF exposure for portable radios

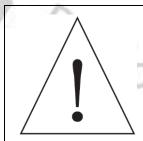

5.

Before using the radio, please read this manual carefully. It contains important instructions for the safe and proper use of the radio and operating instructions for compliance with the limits of RF energy exposure in accordance with applicable national and international standards.

3.1 Notes on the use of the radio

Please read the following quick start guide, as failure to comply with these rules can be dangerous or in violation of the law.

- 1. Observe local regulations before using this radio, as improper use may violate the law.
- 2. Turn off the radio before approaching flammable or potentially explosive atmospheres.
- 3. Do not charge or replace the battery in flammable or potentially explosive atmospheres.
- 4. Turn the radio off before you come near any areas with explosives.
 - Do not use a radio whose antenna is damaged, as touching the damaged antenna may result in injury.
- 6. Do not try to disassemble the radio; any maintenance work should be carried out by qualified technicians.
- 7. To prevent electromagnetic interference issues, turn the radio off in locations that have signs displaying similar instructions to 'Do not use wireless devices' or 'Turn cell / mobile phones off' such as inside hospitals and healthcare facilities.
- 8. Do not place the radio in the area of airbag deployment in vehicles so equipped.
- 9. Do not store the radio in direct sunlight or hot areas.
- 10. When transmitting with the radio, keep the antenna at least 5cm away from your body or face.
- 11. If the radio emits any smoke or burning smells, switch the radio off immediately and disconnect it from the car's battery and contact your dealer.
- 12. Do not transmit for long periods as this may damage the radio or cause it to become hot enough to cause injury.

3.2 Maintenance and Cleaning

To ensure the best performance and prolong working life, please acquaint yourself with the following for maintenance and cleaning.

Maintenance

Please do not scratch or puncture the device with hard or sharp object.

Please do not place the device under direct solar radiation or in an environment which can corrode electronic circuits.

Please do not carry the device by its antenna or headset or programming cable.

Please make sure the Speaker-Microphone / K1 plug is covered when not in use.

Opening or modifying the device will void any warranty.

Any firmware not intended to be used with the device will void any warranty.

Cleaning

Radioddity

- 1. Please clean your device regularly by using a dry clean cloth or soft brush to wipe the dust off the surface.
- 2. The keypads, control knob and housing of the device may become dirty from use. Please use nonwoven wipes to clean them. Do not use chemicals to clean it such as detergent, alcohol, spray, or petroleum products, on the device surface or printed labels. Chemicals can damage the housing, display, and remove the printing on the labels. Before powering on the radio, please make sure the device is dry completely.

Radioddity

4 What is in the box?

Thank you for choosing a Radioddity DB25-D or Radioddity GD-88 radio. We recommend that you first check the delivery contents listed in the following tables and keep the packaging for later storage. If something is missing or damaged, please contact your dealer immediately.

4.1 Bill of materials for Radioddity DB25-D



Radioddity Extended manual for Radioddity DB25-D & GD-88



Bill of materials for Radioddity GD-88



Radioddity Extended manual for Radioddity DB25-D & GD-88




Notes: Further accessories for your radio are available at: https://www.radioddity.com/ dioddity loddity


5.1 Radioddity DB25-D preparation and mounting

For sake of your own and passenger's safety, please find a safe and convenient position in order to prevent any damage caused by moving car. Check about suitable and allowed positions with the manufacturer of your car. Choose a mounting location within the driver's reach that allows a view of the radio and the road ahead. The small size makes this more of a possibility than larger under dash radios. Typical under dash installations rely on devices with direct functions and controls. 2 step controls are harder to perform while keeping your eyes on the road. You can consider installing the radio in front of the front passenger seat below the panel section or the car trunk. This will prevent your knees and legs crashing the radio in case of an emergency brake. You should install it with good ventilation and avoiding the direct sunlight. Keep it away from locations with inflating airbags.


- Install the mounting bracket to the car using self-taping screws and flat washers (2 pcs of each kind).
 - Screws can be put upside down (under the dashboard mounting) or upwards the mounting bracket.
 - When installing the mounting bracket, please make sure the screw side edge with slots on the bracket are facing backwards.

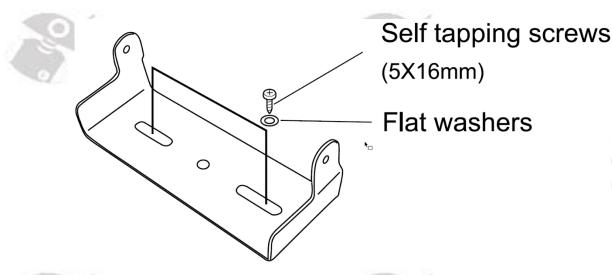

- 2. Next take the radio body and mount it between the two side wings of the mounting bracket. Secure the radio body to the mounting bracket using the two supplied M4 x 10mm Rack mounting screws including their fixed washers.
- Please make sure all the screws are tight to prevent the radio's firm hold from being lost due to vibrations in the car.

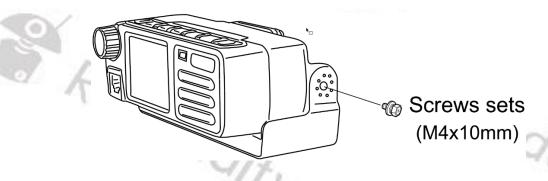


4. With the rotatable fixed point on the left and right sides of the Mounting Bracket, it can tilt the main body at an appropriate angle.

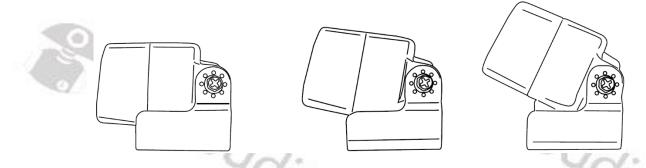

5.2 Radioddity DB25-D Antenna connection

Before operation, you must first install a properly matched antenna for the optimal transmit coverage. The radio will have best performance if the appropriate antenna is properly installed. A low loss coaxial feeder line with 50 Ω impedance is used to match the input impedance of the radio. If the transmission impedance of the feeder line is less than 50 Ω the antenna connection will reduce the effectiveness of the antenna system, and will cause interference to the nearby radio and television receivers, radio receivers and other electronic devices, and even damage the radio.

Notes: If transmitting without an antenna or other matched load line, it could damage the Radioddity DB25-D. The antenna must be connected to the radio before transmitting. All base stations should be equipped with lightning arrester to reduce the risk of fire, electric shock, or radio damage.

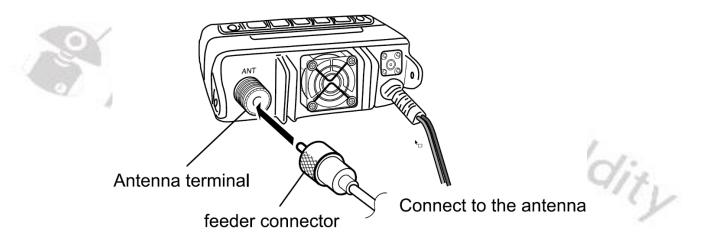

© Radioddity 2022

🗩 Radioddity DB25-D power supply options 坷

Mobile Operation


5.3

The radio comes with a cigarette-style plug. After connecting a proper antenna this allows immediate use within a car but due to often bad electrical connections between the cigarette lighter socket and the cigarette plug, we recommend to use a fused, but direct wiring to the car's battery.

The vehicle battery must have a nominal rating of 12 V. Never connect the Radioddity DB25-D to a 24V battery. Be sure to use a 12 V vehicle battery that has sufficient current capacity. If the current to the DB 25-D is insufficient the display may darken during transmission or transmitting output power may drop excessively.

Notes: If the car battery is not fully charged or when the engine is switched off but the battery is still not fully charged, the battery may discharge and there will not be enough power to start the car. Please avoid using the radio in such situations.

- 1. Route the DC power cable supplied with the Radioddity DB25-D directly to the vehicle's battery terminals using the shortest path from the transceiver We suggest you do not use the cigarette lighter socket as some cigarette lighter sockets introduce an unacceptable voltage drop that may cause the radio to turn off or reboot when starting a transmission. The entire length of the cable must be dressed so it is isolated from heat, moisture, and the engine secondary (high voltage) ignition system/cables. If you use a noise filter, the metal parts of the car shall be fitted with an insulator to prevent it from touching the car.
- 2. After installing the cable, in order to avoid the risk of damp, please use heatresistant tape to tie together with the fuse box. Do not forget to reinforce the whole cable.
- 3. Confirm the correct polarity of the connections, then attach the power cable to the battery terminals: Red connects to the positive (+) terminal and black connects to the negative (-) terminal.
- 4. Reconnect any wiring removed from the negative terminal.
- 5. Connect the DC power cable to the transceiver's power supply connector. Press the connectors firmly together until the locking tab clicks. Additional clip-on ferrites applied to the power cable and close to the radio will prevent any HF radiation to enter the power supply lines.

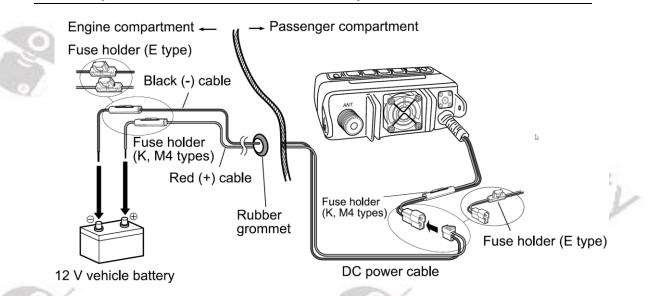


Notes: If you use the Radioddity DB25-D for a long period and the vehicle battery is not fully charged or when the car engine is OFF, the car battery may become discharged and will not have sufficient power left to start the vehicle. Avoid using the Radioddity DB25-D in these conditions.

Base Station Operation

In order to use the Radioddity DB25-D for fixed station operation you will need a separate 13.8 V DC power supply (not included). Please contact your local dealer about it. The recommended current capacity of your power supply should be at least 5 A.

Notes: Before connecting the DC power to the Radioddity DB25-D, be sure to switch the DC power supply OFF. Do not plug the DC power supply into an AC outlet until you make all connections.

- 1. Make sure that both, the Radioddity DB25-D and DC power supply are off.
- 2. Connect the DC power cable to the regulated DC power supply and ensure that the polarity is correct. (Red: positive; Black: Negative}. Use the supplied DC power cable to connect the Radioddity DB25-D to a regulated power supply. Do not substitute a cable with smaller gauge wires.
- 3. Connect the radio's DC power connector to the connector on the DC power cable. Press the connectors firmly together until the locking tab clicks. Additional clip-on ferrites applied to the power cable and close to the radio will prevent any HF radiation to enter the power supply lines.

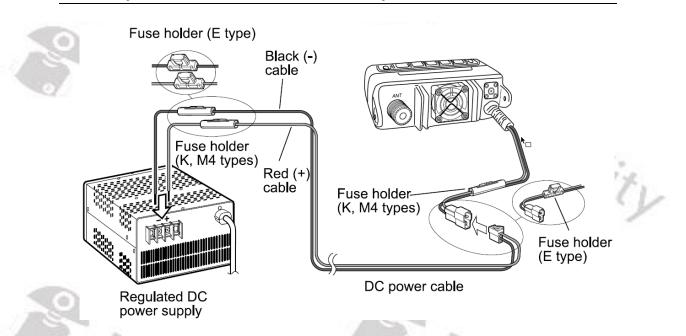

4. Connect a properly matched dual-band (2m/70cm) antenna to the radio's antenna port.

Replace fuse

Radioddity

If the fuse is blown, please find out the cause and then solve the problem. After the problem is fixed then replace the fuse. But if after re-installation the fuse is still blown, please disconnect the power cord and contact the local authorized dealer or authorized service center for assistance.

Fuse position	Fuse rated current
Radio (in DC cable)	5 A
DC power cord	0 10 A

Notes: Please use only the specified type and the rated value of the fuse; otherwise, it might damage the radio.

Radioddity

5.4 Radioddity GD-88 Preparation

Before using the Radioddity GD-88 for the very first time, please make sure that the supplied antenna has been mounted to the radio and that the supplied battery has been fully charged and mounted to the radio.

Mount GD-88 Antenna

- 1. Screw the threaded SMA-m end of the antenna into the top antenna SMA-f port on the main body.
- 2. Tighten the antenna clockwise.

Notes: If transmitting without an antenna or other matched load line, it could damage the Radioddity DB25-D. The antenna must be connected to the radio before transmitting. Do not hold the antenna with your hand, as this will reduce the radio performance.

Charge the battery pack

When the battery is used for the first time, a low battery alarm may alert. Please turn the radio off and charge the battery firstly.

Notes: Please only use the designated battery pack and charging equipment for charging.


Please charge as follows:

- 2. Plug the power supply connector into the jack on the back of the charger.
- 3. Plug the charger power supply into a power outlet.
- 4. Install the battery or the radio (turned off!) with the battery into the charger.
- 5. Observe the charger LED indicators to know the current charging status:

	Charger LED	Current Status	
1	Red	Charging	
6	 Green 	Standby (No load) or fully charged	
D			-
No	Pale	Nadi	
	19/0	9910	
	QN.	-0	QN.
	417.	0	417
	9		Y

Install Radioddity GD-88 battery pack

Slide in the battery with its two noses sliding into the notches underneath the blank metal piece on the backside of the radio. Firmly push it down on its lower loddity end. Finally close the battery latch (22) until you hear a 'click'.

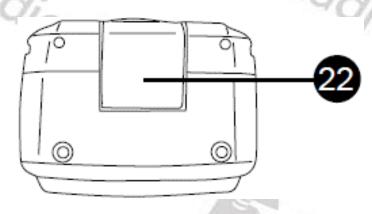


To remove the battery, turn off the radio, clip open the battery latch and then remove the battery by lifting it up, starting with the bottom side. Next carefully move it off the upper metal. Avoid breaking the battery noses.

Install Radioddity GD-88 hand strap and belt clip

- 1. Take out the hand strap and mount it to the radio using the eyelet just above the blank metal piece on the backside of the radio.
- 2. Take out the belt clip and two screws from the equipped bag.
- 3. Align the belt clip mounting holes with the threaded holes on the main unit, insert screws, and carefully tighten the screws to hold the belt clip.
- 5.5 Accessories connection

External speaker/headset and microphone

adioda Please connect a speaker with 8 Ω impedance or a suitable headset. A 2.5 mm mono TRS plug or a K1-style plug with a 2.5 mm and 3.5 mm TRS plugs can be used to connect an external speaker.

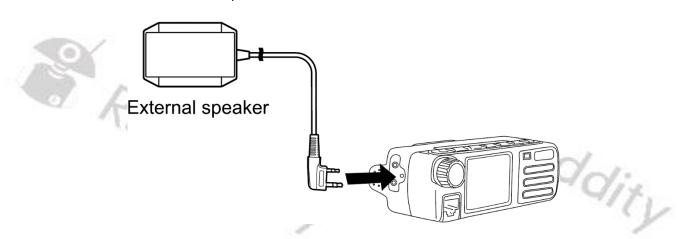


The radio has two jacks (K1 style) for speaker and microphone. Please refer to the instructions to determine how to use an external speaker or headset and microphone accessory. On the Radioddity DB25-D those are on the left side and covered by a small door that's fastened to the radio with a screw. On the Radioddity GD-88 those ports are on the right side and covered by a rubber cover.

Notes: More details on this K1 style connector are to be found in Chapter 17.5 K1 connector on page 191.

Radioddity DB25-D Speaker-Microphone

Please insert the provided Speaker-Microphone (with built-in speaker) to the RJ45 jack on left side of the radio to make voice communication. Press the connector until you hear a click sound from the locating plate in place.

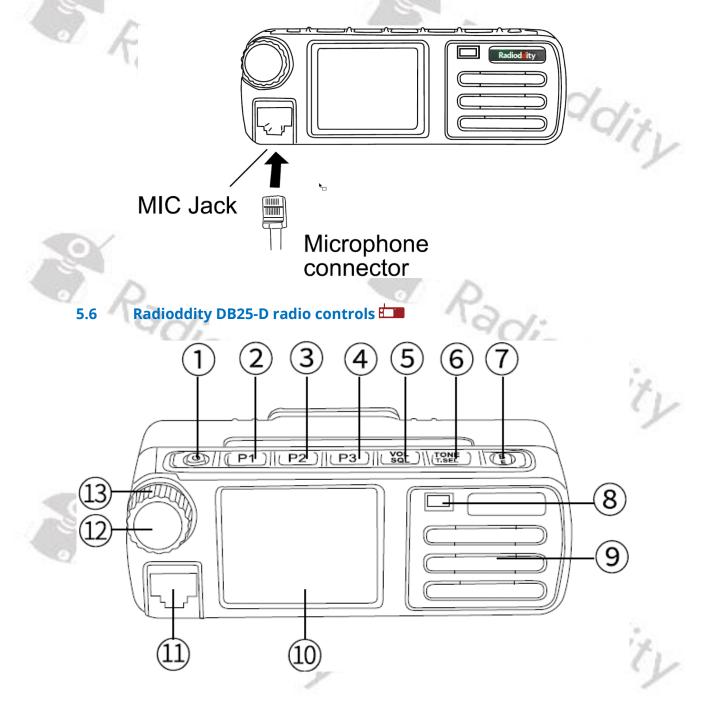

Parts description & function applications

10 JK		
No.	Part Name	Function description and applications
1	لى] Power	Press and hold it for more than 3 sec to turn the radio
1	Switch	on or off.
2	P1	Programmable function key 1
3	P2	Programmable function key 2
4	P3	Programmable function key 3
5	[VOL/SQL] key	 Short press to set the volume of the VFO with the ' icon. In analog mode, long press to set the squelch level of the VFO with the ' icon.
6	[TONE/T.SEL]- key	 In analog mode, short press and rotate it to select the signaling type of the VFO with the '-' icon. 2) After selecting the signaling type, long press it to change the signaling code / frequency. TX/RX signaling code/frequency can be set.
7	[B/E] key	 In Standby, short press to switch between VFO A and VFO B. The VFO with the '-' icon is the main VFO for transmitting or menu set. For operating the VFO with the '-' icon, in menu mode, short press to return to the previous level, and long press to exit menu mode. In Standby, long press to enter the Channel-Edit mode of the main VFO with the '-' icon.
8	LED indicator	Used to indicate the RX/TX status, etc.
9	Speaker	Used to receive audio from others
10	TFT display	Display various working states, and combine with visual icons for easy use and operation
11	RJ45 (MIC) connection port	Connect the original Speaker-Microphone to this port
12	[Menu]-key [OK]-key [Select]-key	 In standby, short press to access the menu of the main VFO with the '>' icon In the current menu mode, short press to be [Menu]-key or [OK]-key for parameter selection and confirmation.
13	ENC selection knob	In standby, rotate the knob to operate and set frequency, channel, menu selection and parameters etc. of main VFO with '' icon.

Notes: For convenient use, there are programmable [P]-keys for definition of various functions.


		14	
0	No.	Part Name	Function description and applications
	14	SP/MIC jacket	 For external accessories connection, such as earpiece, speaker. Connect the programming cable here to get connection with the PC for data programming.
	15	Mounting Bracket	For fixing the radio at some place.



Radiod <mark>d</mark> ity	Extended manu	al for Radiod <mark>d</mark> ity DB2	5-D & GD-88	v2.0
2	16	17)	18	(19)
<u>_</u>			(20)	

	2	
No.	Part Name	Function description and applications
16	Antenna port	Install the external antenna to this port. In TX testing, please install a dummy load to replace the antenna. The antenna or dummy load should be with 50 Ω impedance.
17	Heat Sink	Cool the internal power tube to avoid too high temperature to damage the related components
18	GPS antenna port	Install the GPS antenna to this port for GPS receiving.
19	Rack mounting screws	Loosen the left and right screws to set the correct viewing angle, then re-fasten them.
20	External power cable	Carefully check the polarity (Red: +, Black: -) and power ratings (13.8 V DC +/- 15%) of the power supply before connecting to the radio.
	adioc	dity "dioddit

Radioddity Radioddity

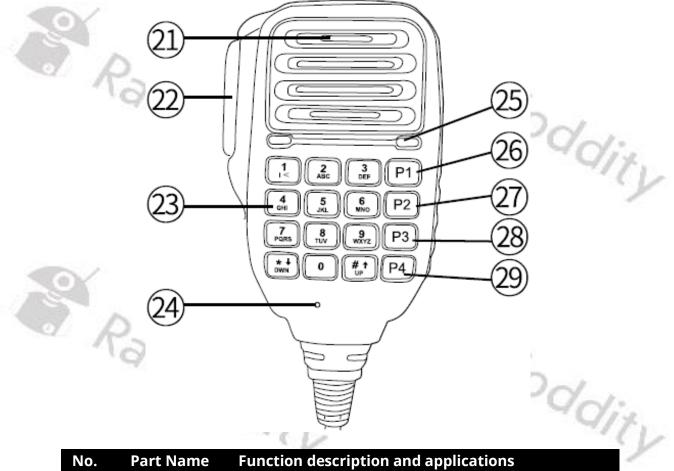

	No.	Part Name	Function description and applications	1
	21	The Speaker-	Used to receive audio from others (Audio output]
	21	Microphone	options can be set from the menu option)	
_	22	[PTT]-key	Press and then speak in to the microphone to]
	22	[РТТ]-кеу	transmit; Release it to receive.	
8	23	Numeric	Used to input frequency / channel number, alias, ID,	
	25	Keypad	and SMS	
7.4	24	MIC	Speak to the microphone when pressing the [PTT]-key	1
	24	WIIC	to transmit; (3-5 cm away from the mouth)	
		LED indicator of	In transmitting, LED lights red; if operating on	
	25	the Speaker-	Speaker-Microphone keypad, LED light will be always	
		Microphone	on.	7.
	26	MIC P4	Programmable function key 4	1
	27	MIC P5	Programmable function key 5	1
	28	MIC P6	Programmable function key 6]
	29	MIC P7	Programmable function key 7	


Notes: For convenient use, there are programmable [P]-keys for definition of various functions.


5.7 Radioddity GD-88 radio controls

1

0

3

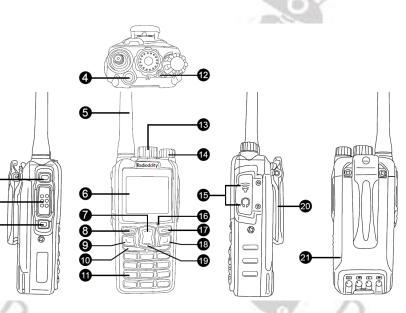

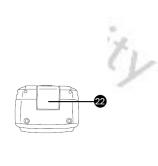


		and prod
No.	Part Name	Function description and applications
1	[P1]	Programmable function key 1
2	IDTTI	Press and then speak in to the microphone to
2	[PTT]	transmit; Release it to receive.
3	[P2]	Programmable function key 2
4	[P3]	Programmable function key 3
		Install the supplied dual-band antenna to this port. In
	Antonno	TX testing, please install a dummy load to replace the
5	Antenna	antenna. The antenna or dummy load should be with
2		50 Ω impedance.
6		Display various working states, and combine with
0	TFT display	visual icons for easy use and operation
7	[Up]-key	Increase (Up) the frequency, channel, menu, etc.
	and:	1) In standby, short press to access the menu of the
	[Menu]-key /	current VFO
8	[Select]-key /	2) In the current menu mode, short press for
0	[OK]-key	parameter selection and confirmation.
	[UK]-Key	3) Long press (3sec) to input the channel number and
		call up the desired channel
	[P4]	
9		Programmable function key 4
10	Speaker	Used to receive audio from others
27	Numeric	Used to input frequency / channel number, alias, ID,
11	Keypad	and SMS
12	LED indicator	Used to indicate the RX/TX status, etc.
	"Or	Operate VFO A/B according to CTRL display and used
13	Channel	to set frequency, channel, menu selection and
	selector [ENC]	parameters
L	1	

Radioddity Extended manual for Radioddity DB25-D & GD-88

No.	Part Name	Function description and applications
14	Power switch /	1) Turn the radio On/Off
14	Volume control	2) Choose the proper volume level for your needs
2 1	0	1) For external accessories connection, such as
15	Speaker / Mic	earpiece, speaker.
	jack	2) Connect the programming cable here to get
	"Or	connection with the PC for data programming.
16	Microphone	Speak to the microphone when pressing the [PTT]-key
10	Microphone	to transmit (3-5 cm away from the mouth)
		1) In standby, short press to choose the desired VFO
	[A/B]	A or B (CTRL will be displayed on the left in the
17	CTRL (VFO A/B)	middle line of the corresponding VFO.
17	selection / Back	2) In menu operation, use as the return key.
2	key / Edit key	3) In standby, long press to enter the settings of the
		currently selected channel.
	[VFO	1) In standby, short press to choose the desired VFO
12 1	A/B TX	A or B for transmitting. ' PTT ' will be displayed on
18	selection]	the left in the bottom line of the VFO selected for
	Key	transmitting
		2) In standby, long press to switch between Channel
		Display Mode and VFO Mode for the current
		operating VFO (indicated my ' CTRL ' on the left in
		the middle line of that VFO)
19	[Down]-key	Decrease (Down) the frequency, channel, menu, etc.
20	Belt clip	Used to clamp the radio to a belt
21	Battery pack	Used to provide power to the radio
22	Battery latch	Used to fasten the battery to the radio unit
5 /	Battery latch	Used to fasten the battery to the radio unit

Radioddity

Radioddity

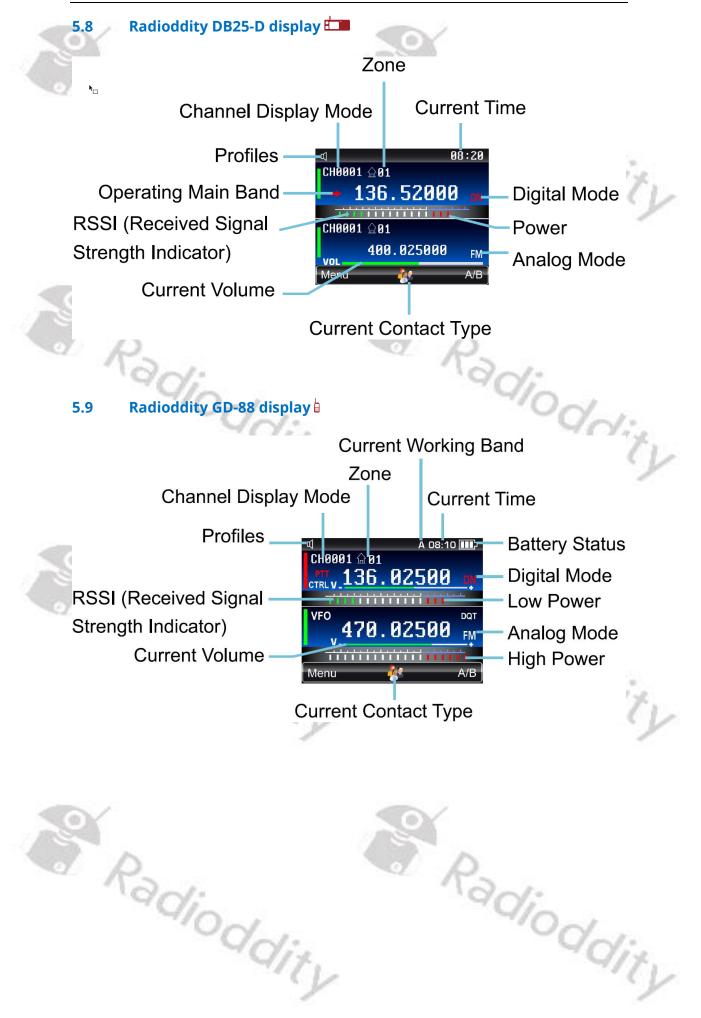

lcon	Icon description	Functional description
	High Power	6 red bars indicate high power
	Low Power	3 red bars indicate low power
	Standby	White bars indicate the radio being in Standby Mode
·····	RSSI	In RX mode, the more green bars, the stronger the signal
ĉ	Keylock	Appears when the keypad is locked
	Battery Status	The more bars, the larger the remaining battery capacity and vice versa
((·, ·))	Monitor	Appears when analog monitor is on
	Promiscuous	Appears when Promiscuous mode is on
Ŷ	VOX	Appears when VOX is on
? ?	GPS	Appears when GPS is on (red, if not sufficient GPS satellites received; green
26 26	GPS 📮	as soon as GPS position found)
0	Scan	Appears when SCAN is on
\triangle	Emergency Mode 🕕	Appears when the radio is in emergency mode.
Ē	Encryption 💷	Appears when Encryption is on
QT	CTCSS 🗢	Appears when CTCSS is on
DQT	DCS 💬	Appears when Normal DCS is on
DQI	DCS-I 😔	Appears when Reverse DCS is on
厶	Prompt Tone on	Appears when profile is in standard mode
¥ ¥	Prompt Tone Off	Appears when profile is in silent mode
I→I	Talk Around 💷	Appears when the radio is in Talk Around Mode
•••) ((-	Roaming	Appears when Roaming is on
• •) (e	Roaming Lock	For locking current channel in Roaming

Radioddity Extended manual for Radioddity DB25-D & GD-88

v2.0

lcon	lcon description	Functional description
\square	Offset Frequency	Appears when RX frequency is higher
	Negative direction	than TX frequency
\square	Offset Frequency	Appears when TX frequency is higher
U U	Positive direction	than RX frequency
DNO	11	Indicates the current VFO is working in
DN 🥣	Digital Mode	digital mode
	YOU	Indicates the current VFO is working in
FM	Analog Mode	analog mode
	1	The current VFO is in digital/analog
DN	Digital/Analog Mode	auto RX mode. Digital Mode is for main
	0 0	TX
		The current VFO is in analog/digital
DN	Analog/Digital Mode	auto RX mode. Analog Mode is for main
	0 0	TX
		The VFO with this icon indicates that
	Operating VFO 🛄	the current VFO can make a call or is
100		operable and settable
10		Indicates that the current VFO is
CTRL	Operating VFO	operable and settable
		Indicates the VFO that will be used to
PTT	Transmitting VFO 🖥	transmit
1		
<u>ru</u>	Time Slot 1 💷	Indicates the working slot of current
	Time church	frequency or channel
	Time Slot2 💷	
$\sim \land$	7	Indicates the working zone of current
<u>1</u>	Zone	frequency or channel
1	Variable Frequency	Indicates working in frequency mode,
VFO	Variable Frequency Mode	frequency can be input via numeric
100	wode	keypad
	SMS	Appears when received a new message.
	SIVIS	Appears when received a new message.
Α	Operating VFO A 🛓	Appears when 'CTRL' stays on VFO A
В	Operating VFO B 🛱	Appears when 'CTRL' stays on VFO B
	· · · · · · · · · · · · · · · · · · ·	
$A/R \rightarrow B/T$	VFO A/B	VFO A for receiving and
	Repeat Mode	VFO B for transmitting
A/TR ↔ B /TR	VFO A/B	VFO A or B for receiving and
	Repeat Mode	VFO B for transmitting
$B/R \rightarrow A/T$	VFO A/B	VFO B for receiving and
	Repeat Mode 🗎	VFO A for transmitting
100	oddity	ad.
	0.	"adioddi
	O ale	- Oct
	~ Qix	~0/
	-1012	
	1	

Transmit / Receiving Icons

The following icon appears on the radio screen to indicate the radio status.

Mode	Туре	lcon	Radio status
	Private call		Sending a Private Call
	Private call	C</td <td>Receiving a Private Call</td>	Receiving a Private Call
	Crown Call		Sending a Group Call
	Group Call	*	Receiving a Group Call
1	All Call *	~ €() →	Sending an All Call *
A	All Call	*	Receiving an All Call *
\bigcirc	adia	🖳 🔪 📥	Sending an analog transmission
\bigcirc	100) – 🖡 🐧 🛶	Receiving an analog transmission

LED Indicators

	LED indicator	Radio status	
	•	Receiving	
)	•	Transmitting	
90	Fast Flashing green	Scanning	1-
	Fast Flashing red	Low battery alert	Oda.
Кеура	ad operations		City

5.11 **Keypad operations**

Please follow the key operation described below to simplify the instructions and avoid unnecessary duplication.

Instruction	Operation					
Press the [XXX] button	Short press the button and release it quickly					
Press and hold [XXX] button	Long press and hold down the button for 3					
	seconds or more					
Rotate the [ENC] knob Use [▲/▼]-keys on GD-88	Select set options					
Dross and hold nower switch	Press and hold the power switch for more					
Press and hold power switch	than 3s to turn the DB25-D On or Off 🛄 🥢					

tu

Keys and ENC (channel Selector) operation

The following keys can be used to quickly achieve the desired function.

Key	Status	Operation	Description							
С С	Standby	Long Press (3 sec)	Power On /Off							
	Standby	Short Press	Access to the Menu							
[ENC]	Standby	Long Press	[Keylock] or [Unlock]	۴.						
	ln Menu Mode	Long Press	[Confirm] or [Menu]	9						
	Standby		Select channel, frequency, and other parameters							
[ENC]	In Menu Mode	Rotate	Select Menu and other setting parameters							
[ENC]	Channel	Rolale	Select programming items or other							
D	Edit Mode		parameters							
16	Edit (SMS)		Move the editing position of the blinking							
			cursor to the left or right							
[D1]	Standby	Short Press	Preset function based on configuration							
[P1]	Standby	Long Press	Preset function based on configuration							
1001	Charadhu	Short Press	Preset function based on configuration	7						
[P2]	Standby	Long Press	Preset function based on configuration	.]						
1001	CL	Short Press	Preset function based on configuration	~						
[P3]	Standby	Long Press	Preset function based on configuration							
	a	Short Press	Preset function based on configuration							
[P4]	Standby	Long Press	Preset function based on configuration							
[VOL/SQL]		Short Press	For adjusting the output volume							
	Standby	Long Press	In analog mode, adjust the squelch level							
R		Short Press	In analog mode, choose signaling type							
[TONE / T.SEL]	Standby	Long Press	To select signaling code / frequency after selecting the signaling type, and thereafter short press of [TONE/T.SEL] to choose signaling code / frequency for RX / TX	1						
	Standby	Short Press	Select the operated VFO A/B to make a call or menu operation	9						
[B/E]	Stanuby	Long Press	Operations for Channel/VFO-Attributes, storage, and other parameters							
X	Menu Mode	Short Press	Back to the previous level							
[MIC P4]	Ctandby	Short Press	Preset function based on configuration							
	Standby	Long Press	Preset function based on configuration							
[MIC P5]	Char II	Short Press	Preset function based on configuration							
Han a star	Standby	Long Press	Preset function based on configuration							
[MIC P6]	0	Short Press	Preset function based on configuration							
	Standby	Long Press	Preset function based on configuration	÷.,						
[MIC P7]	a	Short Press	Preset function based on configuration	12						
	Standby	Long Press	Preset function based on configuration							

5.12 Main functions description

Common functions

Function							
runction	Description						
Zone	A zone Is a group of channels. Support end users to build and expand zones by themselves.						
VFO Mode	In VFO mode, the user can directly input the required frequency using the numeric keyboard of the Speaker-Microphone						
Channel	Support end users to build and expand channels by themselves. Memory is handled dynamically						
Power	The power level is for the transmission output power level of the current channel, which can be set to high or low power.						
Emergency Alarm	Emergency alarm has the highest priority.						
Scan	When the terminal scans a signal on a channel, It will stay on the channel to listen, to understand the current activity status of the relevant team members.						
VOX	If VOX is On, when the voice is detected to reach the transmission condition by the microphone, it will be transmitted automatically. The user can initiate a call without pressing the [PTT]-key.						
Busy Channel Lockout	sy Channel Busy channel lockout (BCL) prohibits transmission and						
тот							
1000	Keypad lock is used to lock keys to prevent Inadvertent key operation. The radio may be set to automatic or manual lock						

Radioddity Radioddity

Analog Functions \odot

Function	Description
Analog channel call	An analog call is a call on an analog channel.
Narrow / Wide	Working bandwidth for the radio
Band	(Narrow band: 12.5 kHz, Wide band: 25 kHz)
Squelch Level	It is the signal strength required to adjust the received signal. Normally the higher squelch level, the higher received signal strength is required. Settable squelch level is from O - 9. Level O is normally open, and there is background sound from the speaker once the radio is on. Level 9 is the highest and the required received signal strength is the strongest.
Busy Channel	If it is ON, when received the carrier signal, it is prohibited to
Lockout	transmitting when pressing the [PTT]-key.
Monitor	Monitor allows the user to open the receiver squelch manually to listen to on-channel signals.
CTCSS	CTCSS code for RX radio must be same as TX radio, so that the audio can be received successfully
DCS	DCS code for RX radio must be same as TX radio, so that the audio can be r11ceived successfully

Digital Functions (1)

Function	Description							
Private call	Private call is a one-to-one call.							
Group call	Group call is a one-to-many call.							
All call	All call is a call to all contacts on the current digital channe Not used by ham operators.							
Talk Around	When the repeater fails to work or the radio exceeds the coverage of the repeater, it can communicate off-line (RX & TX at the same frequency) to communicate							
Roaming Setting	Roam Mode, RSSI Set, Connect Check Timer, Connect Recheck Timer, Connect Timer							
Roaming	When the radio moves from one site to another, it will automatically find the next available site through roaming.							
Recording	rding Record any received and/or transmitted audio							
DTMF RX/TX reminder	Used as the TX PTT prompt tone and RX prompt tone before receiving the voice.							
TDMA direct mode	TDMA direct mode Is used to divide a direct channel (simplex) into two Time Slots lo allow efficient channel usage. Multiple parties may share the channel without interference depending on slot setting.							
49								

5.13 Using the numeric keypad

The numeric keypad of the Speaker-Microphone 💷 / the radio 🏻 📋 can be used to input frequency/channel numbers, user alias or ID or SMS. Most characters require pressing a key for several times.

Alphanumerical input of characters

to inp requir						-											۶r	ali	ias	0	r	ID	O	r S	5M	S.	N	10:	st	ch	aracters	
	1	5	7	Ç	2	ï	6			2													1	9	7	C	7	1	-			
Alpha	nı	Im	e	ric	al	ir	ıp	ut	of	cł	na	ra	cto	ers	5															(70	in.
Keypad	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	Note	Y
1 <u>1</u>	,	o	?	i	:	;	、	"	"	"	,	()	«	>																"PY" input mode	
1×	•	,	,	?	!	-	()	@	/	:	_	;	+	&	%	*	=	<	\rangle	\$	[]	{	}	۲	<	،	#		"AB" / "ab" input mode	
480	A	В	С																													
3	D	E	F																													
4	G	Н																														
5	J	Κ	L																													
6	М	Ν	0																													
PORS	Ρ	Q	R	S																												1.8
8	Т	U	V																													CL
9 WEN2	W	Х	Y	Ζ																												1

Note: in the digital editing mode, a short press of this key enters the value of "0", while long press enters the symbol "+" in the digital, English and Chinese editing mode.

Note: in the digital, English and Chinese editing mode, a short press of this key enters the "*" symbol, and a long press enters a "space".

Note: in the editing mode of Numbers, English and Chinese, a short press of this key inputs the symbol "#", while a long press switches between the editing input mode of English, Numbers, Chinese (pinyin) (" AB "in upper case," ab" in lower case," 12 "in figure," PY "in Chinese pinyin)

Programmable Function keys

0

* 1

1

There are more than 25 different functions that may be assigned to the Preset Buttons ([P]-keys). For more details on how to program the Preset Buttons, please check chapter 0

Preset Keys on page 121.



v2.0

Basic Operation

6.1 Turning the radio On/Off

- ON: Make sure the power supply is connected correctly, long press the [IJ] key
 Image: or turn the volume knob is clockwise until you hear a 'click' to power on the radio till a 'Beep sound' is heard (if turned on). After power on, the Radioddity logo and 'Powering On' text is shown on the display. The radio is now in standby-mode.
- *OFF*: Long press the [U] key is or turn the volume knob counterclockwise until

you hear a click to power off the radio.

Adjust Volume

6.2

R

For adjusting the volume on your Radioddity DB25-D, short press the [VOL/SQL]-key, after the volume level is displayed in the upper right of the active VFO, rotate the [ENC] button clockwise (increase) or counterclockwise (decrease) to adjust the volume. Alternatively press the ENC-knob and keep it depressed whilst then turning the knob to adjust the speaker volume. The green volume scroll bar in the middle of the display will change according to the volume level. The volume setting applies to both VFOs A and B.

For adjusting the volume on your Radioddity GD-88, turn the volume knob clockwise (increase) or counterclockwise (decrease) to adjust the volume. The green volume scroll bar of the selected VFO will change according to the volume level. The volume settings for each VFO A and B may be set independent from each other.

6.3 Adjust Squelch \odot

The '->' icon displayed left to the channel name of the upper VFO A or the lower VFO B indicates the selected VFO. The squelch level for both VFOs, A and B may be set separately by accessing the menu or long press the [VOL/SQL]-key. In general, higher squelch levels do require the received signal strength to be stronger. Settable squelch level range is from '0, 1 - 9'. Level 0 is normally open, and there is background sound from the speaker once the radio is on. Level 9 is the highest level and the required received signal strength is the strongest.

'**CTRL**' displayed left to the channel name of the upper VFO A or the lower VFO B indicates the selected VFO. The squelch level for both VFOs, A and B may be set separately by accessing the menu. In general, higher squelch levels do require the received signal strength to be stronger. Settable squelch level range is from '0, 1 - 9'. Level 0 is normally open, and there is background sound from the speaker once the radio is on. Level 9 is the highest level and the required received signal strength is the strongest.

v2.0

Switch VFOs

6.4

In Standby Mode, press the [B/E]-key to switch between VFOs A and B for operation and settings. The current operable and settable VFO shows the '-' icon left to the channel name.



Notes: If single VFO display is selected 🗀 , you will see either VFO A or VFO B.

In Standby Mode, press the [A/B]-key to switch between VFOs A and B for operation and settings. The current settable VFO shows '**CTRL**' on the left side in the middle line, whereas the current operable VFO is indicated by '**PTT**' left to the channel name and can be changed using the [VFO A/B TX selection]-key.

CHZ	逾 81	2:28 ை பிரி
v	SFR_TS2	DN
CH1	@01	山 山
CTRL PTT v	SFR_TS1	DN
Menu		A/B
		Ulx
		-//1

6.5 Busy Channel Lockout 🔿

When the '----' icon or '**CTRL**' is shown left to the channel name you may set the Busy Channel Lock of the currently selected VFO A or B separately to On or Off by accessing the menu. If it is 'On', when receiving a carrier signal, it is prohibited to transmit when pressing the [PTT]-key.

6.6 Wide/ Narrow Band 🖂

When the '-' icon is shown left to the channel name you may set the bandwidth of the currently selected VFO A or B separately by accessing the menu.

6.7 CTCSS / DCS \odot

When the '
' icon or '**CTRL**' is shown left to the channel name you may set the CTCSS and DCS signaling of the currently selected VFO A or B separately by accessing the menu.

 In standby, press the [Menu]-key to access the menu and choose '*Parameters*' → '*Signaling*'.

 In standby, long press the [B/E] in or [A/B]- key to access the Channel-Attributes, and choose '*RX/TX signaling*'.

CL.

- 3. In standby, press the [TONE/T.SEL]-key, and then choose the required signaling. This is only possible with the Radioddity DB25-D
 - (1) **Choose the signaling type**: single click the [TONE/T.SEL]-key to choose from QT , DQT, DQI or none. The signaling icon will display at the upper right of the current VFOs channel.
 - (2) **Choose the signaling code / frequency**: long press the [TONE/T.SEL]-key to display the current signaling code/frequency at the upper right of current VFOs channel, rotate the [ENC] button to choose the desired signaling code/frequency and press the [Menu]-key to confirm your selection. Or press the [TONE/T.SET]-key to set RX (R:XXXX) or TX (T:XXXX) signaling code/ frequency.

6.8 Channel Selection

6.9

The desired working channel can be selected as follows:

- 1. When the '→' icon or '**CTRL**' is shown left to the channel name of VFO A or B, rotate the [ENC] knob or use the [▲/▼] to select the desired channel.
- 2. When the '>' icon or 'CTRL' is shown left to the channel name of VFO A or B, input the desired channel number by using the numerical keypad.
- 3. When 'CTRL' is shown left to the channel name of VFO A or B. press the [Menu]-
- key for 3 seconds. A dialog box and total channels of current zone pops up, to enter the desired channel number through the numerical keypad.

Switch between VFO and Channel Mode

In Standby Mode, when the ' \rightarrow ' icon is shown left to the VFO A or B, access the 'MENU \rightarrow Local Set \rightarrow DisplayMode' and choose **VFO Mode** as Display Mode.

In Standby Mode, when the '**CTRL**' is shown left to the VFO A or B, long press the *P* [VFO A/B TX selection]-key to switch the display mode between *VFO Mode* and *Channel Mode*.

Radioddity Radioddity

6.10 **VFO Frequency Set**

In Standby Mode, when the '-' icon or 'CTRL' is shown left to the VFO A or B and the current VFO is in VFO mode, the desired frequency can be entered through the numeric keypad. For example, for 446.050000MHZ, directly input:



[4] [5] [5] [5] [5] [0] [0] [0] [0]

using the numeric keyboard of the Speaker-Microphone.

Notes: The current frequency can be increased / decreased in 6.25 kHz steps by turning the [ENC] knob. For more details on editing a channel please refer to chapter 10.12 Channel Edit 🙆 on page 93.

Zone / Channel Selection 6.11

When the '>' icon or 'CTRL' is shown left to the current VFO A or B, the following two methods can be used to select the desired zone, channels switching and zone name modification or editing. 11V

- 1. Programming one of the keys for the [Zone] switching feature.
- Select the [Zone] item by accessing 'Menu → Zone&Channel'

Monitor \odot 6.12

In Standby Mode or before pressing the [PTT]-key to transmit, press the preset [Monitor]-key to monitor channel activity, or receive weak signals, or confirm whether the current channel is free. An active Monitor- or Permanent Monitorfunction is indicated by the symbol $\overset{\text{def}}{\rightarrow}$ on the top most display line.

6.13 Permanent Monitor \odot

In Standby Mode, press the preset [Permanent Monitor]-key to continuous monitor the current channel activity. Permanent Monitor is same as Monitor feature, which is allowing you to monitor the channel to make sure it is not occupied before transmitting; their difference is once Permanent Monitor is on, the radio will always be in this monitor mode, till you exit it. An active Monitor- or Permanent Monitor-function is indicated by the symbol 4 on the top most display Radioddity Radioddity line.

6.14 Repeater / Talk Around 🕕

When the repeater fails to work, or the radio exceeds the coverage of the repeater but within the call range of other radio users, press the preset [Repeater / Talk Around]-key or actively set 'Menu \rightarrow Parameters \rightarrow Slot/Repeat \rightarrow Repeat/off' to 'Talkaround' and press the [PTT]-key to continue the communication. This is the so-called Talk Around function.

6.15 Emergency Alarm ①

The emergency alarm function is mainly used in an emergency situation. Pressing the preset [Emergency Alarm On/Off]-key will make an emergency alarm call or stop sending an emergency alarm call.

There are 3 Emergency Alarm modes supported:

- 1. Emergency Alarm
- 2. Emergency Alarm & Call
- 3. Emergency Alarm & Voice

An alarm is a type of non-voice signaling that can trigger a prompt to another radio. This function refers to the alarm behavior of the radio after it is activated. The following types of alarms are possible:

Disable The radio will not send an alarm signal.

Standard The radio can send the alarm signal with voice & visual prompts.

The radio sends alarm signaling without audio or visual prompts, and will not alert to any received audio.

Mute with voice The radio sends alarm signaling without audio or visual prompts, but can send signal to the eligible channels.

Notes: Not used within amateur radio networks

6.16 Scan On/Off

Mute

When the $' \rightarrow '$ icon or '**CTRL**' is shown left to the current VFO A or B, turn scan On/Off by the following two ways.

1. Turn scan On/Off by programming a [Scan On/Off]-key.

2. Actively select 'Menu → Scan → Scan -> Scan On/Off' to turn it On or Off.

6.17 Roaming On / Off

If necessary, turn roaming On or Off by the following two ways.

- 1. Turn roaming On/Off by programming a [Roaming On/Off]-key.
- 2. Actively select 'Menu → Scan → Scan -> RoamScan On/Off' to enable/disable roaming.

Notes:	Make sure the 'Scan List' is pre-selected before turning on the 'Scan' or
	'Roaming' feature. Otherwise, none of the scan types will be enabled.
	The radio will work in VFO A as default when 'Roaming' is enabled.
	When 'Roaming' is enabled, the radio will start to scan all repeater channels
	in the 'scan list' (TX/RX with different RX- and TX-frequency), and the non-
	repeater channels in the 'scan list' (RX/TX with same frequency) will not be
	scanned. If there is no repeater channel in the scan list, the radio will exit the
	roaming after scanning the current 'scan list';
1	When 'Scan' is enabled, the radio will open all the receivable channels in the
	'scan list'.

6.18 1750Hz Pilot tone 🔿

Analog repeaters often do require to be activated by sending a 1750 Hz pilot tone to the repeater.

To do so, define one of the programmable [P]-keys for [1750Hz]. Whenever you press that preset key the 1750 Hz pilot tone will be send.

6.19 Promiscuous Mode ①

If you haven't assigned a proper RX-group to the selected channel, you may still monitor all activity that is taking place on the specified channel and its assigned Time Slot by means of activating the so-called Promiscuous mode.

To do so, define one of the programmable keys for [Promiscuous]. Whenever you press that preset key promiscuous mode will be turned On/Off. Active promiscuous mode is indicated by the () icon left to the Time Slot icon of a digital channel. If VFO A and VFO B both have been selected a digital channel, promiscuous mode is active for both VFOs.

Only those traffic that is been received from the currently selected digital channel and its assigned Time Slot will be monitored. If you do want to monitor both Time Slots, setup one channel with Time Slot 1 and another channel with Time Slot 2. Select one of those channels for VFO A and the other one for VFO B. Now activate promiscuous mode. Both VFOs will now be in promiscuous mode. As soon as there is traffic been identified by one of the VFOs, those will be heard. Only one VFO can be heard at the very same time.

Notes: If you are unable to assign 'Promiscuous' to your Radioddity GD-88, then you are not using our latest CPS. The old CPS is not capable of assigning it.

7 Using the radio menu

Set various functions and parameters by accessing the main menu and submenu of the radio. The menu function options supported by the Radioddity DB25-D and GD-88 are shown in the table below.

The user-defined [P]-key programming keys are function shortcut keys, for specific functions and may be pre-programed using the Radioddity CPS.

lcon	Main Menu Item	Available setting Items								
	Contacts	Contact List ^① , New contact ^① , Manual Dial ^① , Ham contacts ^① , Ham Group Contacts ^①								
SMS	Message 🕕	Create Msg ^① , Comm Msg ^① , Inbox ^① , Outbox ^① , Draftbox ^①								
C,	Call Log 🕕	Dialed Numbs (1), Received Calls (1), Missed Calls(1)								
	Scan	Scan (On/Off), Scan List, Scan Mode, Roam Setting								
	Zone&Channel	Zone List, Chn List								
۲	Local Set	Language 🗔 , Keypad Lock, Back Light, LEDs, Display Mode, VOX, Channel Sw, Factory Reset, ABRepeat 🕯								
O	Parameters	TOT, Power, Slot/Repeat ⁽¹⁾ , Sleep Mode ⁽¹⁾ , EncLevel ⁽¹⁾ , Sq Level ⁽²⁾ , Band ⁽²⁾ , BCLO ⁽²⁾ , Signaling ⁽²⁾ , Ctcss Tail ⁽²⁾								
[]	Tone Set	Profiles, Key Tone, Power Tone , Msg Tone , P Call Tone , G Call Tone , Alert Tone , FM Call Tone / PowerOn Tone								
	Appendix	GPS, FM Radio, Time, DTMF ^① , Headset+Speaker, APRS								
	Record 💷	Record Set $^{(1)}$, Record List $^{(1)}$, Clear Record $^{(1)}$, Space Info $^{(1)}$								
	Device Info	Radio ID ^① , RX Group List ^① , CH contact ^① , Version.								
	Channel Edit Mode	Edit the parameters of the current VFOs channel or activated VFO-mode.								

7.1 Accessing the menus and operations

Access the main menu and submenu options to set or browse various parameters (like message checking, editing, and sending, etc.) through the following operations and steps. Some of the menus may be enabled or disabled using the Radioddity CPS.

lcon	description
	Indicates an On (green) /Off (red) switch
0 🗖 / 🔘	Indicates a selected and executed items
	Indicates to enter the next submenu option

- 1. In Standby Mode, press the [Menu]-key to access the menu
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to select the desired 'Main Menu' item, and press the [Select]-key to enter the submenu
- 3. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to select the desired submenu item, and press the [Select]-key to enter

or

1. Rotate the [ENC] knob or use the [▲/▼]-keys to select and set the current parameter and press the [Select]-key to confirm the setting and return to the adioddity previous level.

or

- 1. Press the [Select]-key to select 'On' or 'Off'.
- 2. Press the [Back]-key to return to the previous level.
- 3. If needed, continue to browse other menus by repeating the above steps or return to the 'Main Menu' for other operations.

Notes: No matter where the \rightarrow ' icon or '**CTRL**' is shown left to the current VFO A or *B*, the setting for some of the parameters applies to both VFOs. For more details, please check chapter 5.12 Common functions on page 39. <u>cu</u> dioddity adioddity

To ensure an optimal transmission, hold the Microphone in a vertical position at one to two inches (2.5 to 5.0 cm) away from the mouth. Noisy environments may require a closer distance or lifting up your voice.

In order to compensate network latency times, leave a short pause after pressing the [PTT]-key but before beginning your actual voice communication. After your communication and before releasing the [PTT]-key, do the very same again. In order to allow other stations to join a conversation, also do not start your transmission immediately after the other station did release its PTT.

8.1 High / Low power

In Standby Mode, if needed, when the ' \rightarrow ' icon or '**CTRL**' is shown left to the current VFO to be set, change radio output power by one of the following two ways:

- 1. Press the preset [High/Low Power option]-key to switch between high and low power. The 'red' indicator at the bottom of the screen of the current VFO will change according to the set power level.
- 2. Access 'MENU \rightarrow Parameters \rightarrow Power' through the menu to set the output power level of the radio. After setting, the 'red' indicator at the bottom of the screen of the current VFO will change according to the set power level.

Notes: High power allows further communication distances. Low power allows closer communication distances. If you use your radio with a hotspot, set it to low power. For more details, please check also chapter 13.6 High / Low power on page 157.

8.2 Select the transmitting VFO

In Standby Mode, long press the [B/E] and or [A/B]- key to switch between VFO A and B for the desired transmission, and the current transmitting VFO will have the '-' icon or '**CTRL**' is shown left to the current VFO.

8.3 Receive and Answer to a digital radio call ①

Private calls, Group calls, and All calls can be made to the preset contacts on the current digital channel (All call rights need to be allowed by the Radioddity CPS), and the methods for initiating and receiving all types of calls are the same. Each digital channel can be preset using the Radioddity CPS with a 'transmission contact' for Private Call, Group Call or All Call contact. Analog Calls do not require a Contact or RX-Group.

C	Operation method		
Call Type	Make a call	Receive a Call	
Private Call ①	In Standby Mode, press the [PTT]-key to initiate the call. When a Private Call is initiated, the screen displays:	When a Private Call is received, the screen displays:	
V	When a Group Call is initiated, the screen displays:	When a Group Call is received, the screen displays:	
Group Call 💷			
41	When an All Call is initiated, the screen displays:	When an All Call is received, the screen displays:	
All Call [*] 🕕			

*) Not used within amateur radio networks

If the 'Tx Begin Tone' and 'TX End Tone' for Private and Group Calls are activated (currently only possible at the radio itself), when pressing the [PTT]-key of the Speaker-Microphone to make a call, a short prompt tone will be heard indicating that the call is in progress. You can speak into the MIC. Upon release of the [PTT]-key, a short beep sound will be heard indicating that your radio is now is ready for receiving.

If 'Rx Begin Tone' and 'Rx End Tone' for Private and Group Calls are activated (currently only possible at the radio), when the other station transmits, you will hear a short prompt tone indicating that the current channel is in receiving mode. As soon as the other station ends its transmission, you will hear a short beep, indicating that the channel is now idle again and waiting for your answer.

Notes: For more details, please check chapter 10.8 Tone Set 🖬 on page 83.

8.4 👘 Initiate a digital radio call 🕕

If necessary, a call can be initiated by any of the following ways.

- 1. Rotate the [ENC] knob or use the [▲/▼]-keys to select any of the preset channels, and then press the [PTT]-key of the Speaker-Microphone to initiate the call.
- 2. Access the 'Contact' list through the menu, or press the preset [Contact]-key to access the Contact list. Then select the desired contact by rotating the [ENC] knob, and finally press the [PTT]-key of the Speaker-Microphone to initiate the call.
- 3. Access 'Contacts' through the menu and select 'Manual Dial' to input the user DMR ID using the numeric keypad of Speaker-Microphone within the dialog box popping up on the radio screen. This is used for Private Calls only.

Notes: For more details, please check chapter 10.1 Contacts 💷 on page 57.

8.5 Receive and Answer to an analog radio call \odot

Radioddity

Rotate the [ENC] knob or use the $[\blacktriangle/ \bigtriangledown]$ -keys to select any of the preset analog channels, and then press the [PTT]-key of the Speaker-Microphone to initiate the call to all users. The TFT display screen shows \checkmark \checkmark . When receiving a call from other operators on the current analog channel or when the Monitor function is activated, the TFT display screen shows \checkmark

Notes: If the transmitter is configured for CTCSS or DCS encoding, the other station can successfully decode the audio only if using the same CTCSS/DCS code. For more details, please check chapter 13.25 CTCSS sub audio and DCS signaling on page 170.

Radioddity

9 Special DMR functions ⁽¹⁾

Radioddity

Radioddity

Radioddity

Use our Radioddity CPS software to enable/disable and preset any of the Preset Buttons with one of the following functions.

Notes: For more details on how to program the Preset Keys, please check chapter 0

Radioddity

Radioddity

Radioddity

Remote monitor

Preset to prohibit the radio from being remotely monitored by others or allow other users to remote monitor for the set time for continuing to keep the MIC and transmitter on (Time range is from 10s - 120s).

Notes:	To avoid misuse, we advise to disable that parameter using the CPS.				
	Remote monitor duration	108 -			
	Remote Monitor Decode	Off 🔹			

Remote Kill 🕕

Preset to prohibit the radio from receiving 'Remote Kill' command sent by other users; or allow the other users to receive and process the 'Remote Kill' command to disable the radio. This function can be used to disable the radio when it is stolen or lost.

Notes:	To avoid misuse, we d	ndvise to disable th	at parameter using the CPS.	
	Remote Kill Decode	Off	•	

Radio Detection 🕮

Preset to prohibit or allow the radio from being remotely detected whether the radio is in communication range or active state without any prompt.

Notes:	To avoid misuse, we ad	vise to disable that parameter using	the CPS.
	Radio Detection Decode	Off	ddi.

Radio Revive ⁽¹⁾

Preset to restrict the radio from receiving 'Radio Revive' command sent by other users; or allow the radio to receive and process the 'Radio Revive' command to activate it remotely. This function can be used to enable the radio when it is lost and found.

Call Alert

Preset to prohibit or allow the radio from receiving alert tone to ask for calling back when you are free.

GPS

Turn on/off GPS and position report feature to report the position information to the preset designated channel and TalkGroup at the preset intervals.

Record

Preset to prohibit or allow the recording for any of receive, transmit, receive + transmit voice.

DTMF ①

Preset to prohibit sending DTMF tones or allow to send a DTMF prompt tone when pressing the [PTT]-key to transmit in order to achieve the effect of phone ring.

Encryption ^①

Radioddity

Radioddity

Preset to encrypt the voice transmission of the digital channels. But the encryption is a software-based AES 128 scrambling solution for preventing eavesdropping. The receiver radio must have same encryption method, level, alias, and value as the transmitter radio to decrypt the encrypted voices from each other.

Notes: Within amateur radio networks, Encryption is not used as it is not allowed. For more details, please check chapter 10.7 Parameters 2 on page 78.

Radioddity

Radioddity

10 The radio Menu functions in detail

The various functions, applications and parameter configurations of the radio can be checked and set by menus, if those have been enabled using the Radioddity CPS.

10.1 Contacts

The contacts provide the 'address book' for the radio. Each entry corresponds to an alias or ID used to initiate a call, as well as operations and advanced DMR functions.

Contact list 🗖 🕕

1. Press the preset [Contacts]-key to access the menu.

or

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to select *Contacts* ³ and press the [OK]-key to enter.
- Rotate the [ENC] knob or use the [▲/▼]-keys to select the Contact list → press the [OK]-key to confirm → select the desired contact

(1) Press the [PTT]-key to initiate a call

(2) Press the [Select]-key to choose from the following options, depending on Calltype of selected contact

Contact of call type Group Call

(1)SendMsg → press the [Select]-key → Edit SMS → rotate the [ENC] knob or use the [▲/▼]-keys to choose the option of SendMsg (Send Message), InsertComMsg (Insert Common Message), Save or Exit Editor → press the [Select]-key to confirm → return back to the previous level.

(2)Edit (contact) → Press the [Select]-key → rotate the [ENC] knob or use the $[\blacktriangle/▼]$ -keys to choose the option of *Number*, *Name*, *Type* or *Save* → press the [Select]-key to input the number and name or Save → press the [OK]-key to confirm → return to the previous level.

Contact of call type Private Call

- (1)Application → press the [Select]-key → Rotate the [ENC] knob or use the [▲/▼]-keys to choose either *Radio Check, Call Alert, Remote Mon.*(Monitor), *Radio Disable* or *Radio Enable* → press the [Select]-key to send → 'OK' or 'Fail' text pops up on the screen → press the [Back]-key to return to the previous level.
- (2)Edit (contact) → Press the [Select]-key → rotate the [ENC] knob or use the $[\blacktriangle/ ♥]$ -keys to choose either *Number*, *Name*, *Type* or *Save* → press the [Select]-key to input the number, name, or type (Call Type) and press the [OK]-key to confirm and return to the previous level → finally select *Save* → press the [OK]-key to confirm → 'Contact Saved' pops up on the screen → return to the previous level.
- (3)Delete \rightarrow press the [Select]-key \rightarrow 'Are you sure?' pops up on the screen \rightarrow press the [OK]-key to confirm the deletion or press the [Back]-key to cancel the deletion \rightarrow return back to the previous level;
- (4)SendMsg → press the [Select]-key to Edit a SMS → rotate the [ENC] knob or use the [▲/▼]-keys to choose either SendMsg (Send Message), InsertComMsg (Insert Common Message), Save or ExitEditor → press the [Select]-key to confirm the selected option → return to the previous level.
- (5)Detail -> press the [Select]-key to show any details for that contact as found in the Ham contacts

New Contact 🛃 🕕

1. Press the preset [Contacts]-key to access the contact

or

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to select **Contacts** and press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *New Contact*, press the [Select]-key to choose from one of the following options:
- (1)**Number** \rightarrow press the [Select]-key \rightarrow input the numbers using the numeric keypad of the Speaker-Microphone \rightarrow press the [OK]-key to confirm \rightarrow return back to the previous level.
- (2) Name → press the [Select]-key → edit interface → input the characters using the numeric keypad of the Speaker-Microphone → press the [OK]-key to confirm → return back to the previous level.

(3)**Type** \rightarrow rotate the [ENC] knob or use the [\blacktriangle/∇]-keys to choose a Call Type either **Group Call** or **Private Call** \rightarrow press the [OK]-key to confirm \rightarrow return back to the previous level

(4) **Save** \rightarrow press the [OK]-key to confirm \rightarrow Return back to the previous level. oddity

Manual Dial 🙆 🛈

1. Press the preset [Contacts]-key to access the contact

or

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to select **Contacts** ¹ and press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to select the Manual Dial, press the [Select]-key to enter the interface for keying in the ID.
- 3. Input the ID using the numeric keypad of the Speaker-Microphone.

(1) Press the [PTT]-key to initiate a call;

- (2) Press the [OK]-key and Rotate the [ENC] knob or use the [▲/▼]-keys to make following options:
 - **Application** \rightarrow press the [Select]-key \rightarrow Rotate the [ENC] knob or use the [▲/▼]-keys to choose either *Radio Check*, *Call Alert*, *Remote Mon.*(Monitor), *Radio Disable* or *Radio Enable* → press the [Select]-key to send \rightarrow 'OK' or 'Fail' text pops up on the screen \rightarrow press the [Back]-key to return to the previous level.
 - **SendMsg** \rightarrow press the [Select]-key to Edit a SMS \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose either **SendMsg** (Send Message), *InsertComMsg* (Insert Common Message), *Save* or *ExitEditor* → press the [Select]-key to confirm the selected option \rightarrow return to the previous level.

Ham Contacts 🖾 🕕

The Radioddity DB25-D and GD-88 can permanently store up to 300.000 HAM contacts within its internal memory.

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/ \mathbf{\nabla}]$ -keys to select **Contacts** and press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to select the Ham Private Contacts, press the [Select]-key to enter the Ham Private Call Contacts List.

TV

3. Choose the desired private contact by rotating the [ENC] knob, the selected contact ID number will display at the top left of the screen and the serial No of the contact displays at the upper right.

or

Long press and hold the [MENU]-key for 3 seconds, a dialogue window pops up.

- Input the first few digits of the private contact ID to search using the numeric keypad of the Speaker-Microphone → press the [OK]-key to confirm → the display shows the search results → rotate the [ENC] knob or use the [▲/▼]-keys to choose the desired ID.
- 4. Press the [PTT]-key to initiate a private call or press the [Select]-key, rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose from the following options:
 - (1) Application → press the [Select]-key → Rotate the [ENC] knob or use the [▲/▼]-keys to choose either Radio Check, Call Alert, Remote Mon.(Monitor), Radio Disable or Radio Enable → press the [Select]-key to send → 'OK' or 'Fail' text pops up on the screen → press the [Back]-key to return to the previous level.
 - (2) SendMsg → press the [Select]-key to Edit a SMS → rotate the [ENC] knob or use the [▲/▼]-keys to choose either SendMsg (Send Message), InsertComMsg (Insert Common Message), Save or ExitEditor → press the [Select]-key to confirm the selected option → return to the previous level.

(3) **Details** \rightarrow press the [Select]-key \rightarrow the display shows ID, nick name, name, city, province, country etc. information \rightarrow press the [Back] to return to the previous level.

Notes: The '128 Bytes' records mode must be selected firstly before writing Ham Private Contacts list to the radio, so that all details like name, city, province, country, etc. information will be imported. However, the import of that data requires a long writing time (about an hour). Make sure the radio keeps normal power supply during the writing process (GD-88: Fully charge the battery before starting the write-process). If '16 Bytes' records mode is selected before writing Ham Private Contacts list, only the contact ID and Nick name will be imported. This mode has a shorter writing time of just about 15 minutes. Make sure the radio keeps normal power supply during the writing process.

Ham Group Contacts 🖾 🕮

1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to select *Contacts* [■] and press the [Select]-key to enter.

- Rotate the [ENC] knob or use the [▲/▼]-keys to select the Ham Group Contacts, press the [Select]-key to enter the Ham Group Call Contacts. Up to 20,000 HAM group contacts can be added.
- 3. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose from the following options:
 - (1) Ham Rx Group \rightarrow press the [Select]-key to turn the option ON / Off.
 - (2) Choose the desired HAM group contact by rotating the [ENC] knob, then the selected contact ID number will be displayed at the top left of the screen.
 - (3) Long press and hold the [MENU]-key for 3 seconds, a dialogue window pops up on the interface.
 - Input the first few digits of the private contact ID to search using the numeric keypad of the Speaker-Microphone \rightarrow press the [OK]-key to confirm \rightarrow the display shows the search results \rightarrow rotate the [ENC] knob loddity or use the $[\blacktriangle/\nabla]$ -keys to choose the desired ID.
- 4. Press the [PTT]-key to initiate a group call.
- 5. Press the [Back]-key to return to the previous level.

Message 🙆 🕕 10.2

The Radioddity DB25-D and GD-88 can receive and send text messages (SMS) from and to other radios. Those are text messages within the DMR network. Sending/receiving of text messages to/from normal mobile phone networks is not supported.

Various options can be used to send SMS messages.

Notes: Hold and long press the '#' key for 3 seconds to change the Input modes in writing and editing messages and other processes. The input modes are AB (uppercase), ab (lowercase), 12 (numerical digits) and PY (Chinese). In the process of searching contacts or inputting ID numbers to send SMS, a call is initiated whenever the [PTT]-key is pressed.

Network support for short messages

Not all DMR-based networks do support sending such short text messages. Some networks may require additional settings for your account. As an example, the currently largest DMR network, Brandmeister network, requires the brand of radio associated with the DMR ID to be assigned. For your Radioddity DB25-D or GD-88 set it to 'Chinese Radio'.

However, the DMR network does not guarantee a SMS will be successfully delivered.

SelfCare Settin	gs		
	Brand	Chinese Radio ~	
	APRS Interval	ETSI Hytera / Kenwood Me orola	
	APRS Icon	Chinese Radio	Y

CreateMsg 🔲 🕕

1. Press the preset [SMS]-key to access the menu.

or

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to select *Message* and press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to *CreateMsg* and press the [Select]-key to enter the message editing interface.
- 3. After editing, press the [OK]-key to choose from one of following options:
 - (1) **SearchLinkman** \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/ \bigtriangledown]$ -keys to choose the contact \rightarrow press the [PTT]-key of the Speaker-Microphone to initiate a call or press the [Select]-key to send the message \rightarrow 'MSG SENDING' pops up on the screen \rightarrow press the [Back]key to return to the previous level.
 - (2) WriteNumber → input the contact number using the numeric keypad of the Speaker-Microphone → press the [OK]-key to send the → 'MSG SENDING' pops up on the screen → press the [Back]key to return to the previous level.
 - (3) InsertComMsg (Insert Common Message) → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the desired message → press the [OK]-key → the inserted text is added to the text → edit or press the [OK]-key to return to the previous level.
 - (4) Save → press the [Select]-key to save the message to the Draftbox → return to the previous level.
 - (5) **ExitEditor** \rightarrow press the [Select]-key to return to the previous level.

Common Messages CommMsg 💟 🕕

Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to select *Message* and press the [Select]-key to enter.

- Rotate the [ENC] knob or use the [▲/▼]-keys to select *CommMsg* and press the [Select]-key to enter the common message list or 'Empty! Do you want Add?' text pops up on the screen.
- 3. In common message list → rotate the [ENC] knob or use the [▲/▼]-keys to select the desired message → press the [Select]-key and choose from one of the following options:
 - **Display** → Press the [Select]-key to display the full message → Press the [Back]-key to return to the previous level.
 - AddCommMsg → press the [Select]-key → input the message using the numeric keypad of the Speaker-Microphone → press the [OK]-key → choose either Save or ExitEditor → press the [Select]-key → return to the previous level.
 - Edit → press the [Select]-key → edit the message using the numeric keypad of the Speaker-Microphone → press the [OK]-key → choose either Save or ExitEditor → press the [Select]-key → return to the previous level.
 - Delete → press the [Select]-key → 'Are you sure?' pops up on the screen → press the [OK]-key to confirm deletion or press the [Back]-key to cancel the deletion → return back to previous level.
 - Send → Press the [Select]-key → edit SMS and press the [Select]-key to either Search a contact or WriteNumber to manually key in the receiver ID using the numerical keypad of the Speaker-Microphone → press the [OK]-key to send the message → return to the previous level.

Notes: If there are no Common Messages, you should pre-program those using the Radioddity CPS software first or add them into 'CommMsg'.

Inbox 🔽 🕕

- Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to select *Message* and press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to *lnbox*, and press the [Select]-key to choose from one of the following options:
 - (1) Inbox list → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the received message → press the [Select]-key to display the full message → press the [Select]-key to perform one of the following options:

- v2.0
- Reply → press the [Select]-key → edit SMS → rotate the [ENC] knob or use the [▲/▼]-keys to choose an option of either SendMsg, InsertComMsg or ExitEditor → press the [Select]-key to confirm the selected option.
- Forward → Press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose an option of either Search or WriteNumber → Press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the contact or input the ID number using the numeric keypad of the Speaker-Microphone → Press the [OK]-key to send the SMS.
- Edit → press the [Select]-key to make changes to the message → Press the [OK]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose from one of the options of either SearchLinkman, WriteNumber, InsertComMsg or Save.
- Delete → 'Are you sure?' pops up on the screen → press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion → return back to previous level.
- (2) **Delete All** \rightarrow 'Are you sure?' pops up on the screen \rightarrow press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion \rightarrow return back to previous level.

Outbox 🗳 🕕

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to select **Message** and press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to **Outbox** and press the [Select]-key to choose from one of the following options:
 - (1) Outbox list → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose one of sent messages → press the [Select]-key to display the full message → press the [OK]-key to choose from one of the following options:
 - Search → rotate the [ENC] knob or use the [▲/▼]-keys to search the contact → press the [PTT]-key to initiate a call or press the [Select]-key to send the message → the message sending status pops up on the screen.
 - WriteNumber → input the contact number using the numeric keypad of the Speaker-Microphone → press the [OK]-key to send the message → the message sending status pops up on the screen.
 - InsertComMsg (Insert Common Message) → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the desired message → press the [OK]-key → the inserted text is added to the text → edit or press the [OK]-key to return to the previous level.

- v2.0
- Save → press the [Select]-key to save the message → return to the previous level.
 - **Delete** \rightarrow 'Are you sure?' pops up on the screen \rightarrow press the [OK]-key to confirm deletion or press the [Back]-key to cancel the deletion \rightarrow return back to previous level.
- **ExitEditor** \rightarrow press the [Select]-key to return to the previous level
- (2) Delete All \rightarrow 'Are you sure?' pops up on the screen \rightarrow press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion \rightarrow return back to previous level.

Draftbox 🕒 🕕

- Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to select *Message* and press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to *Draftbox*, and press the [Select]-key to choose from one of the following options:
 - (1) Draftbox list → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the message → press the [Select]-key to display full message → press the [OK]-key to perform the following options:
 - Search → rotate the [ENC] knob or use the [▲/▼]-keys to search the contact → press the [PTT]-key to initiate a call or press the [Select]-key to send the message → the message sending status pops up on the screen.
 - WriteNumber → input the contact number using the numeric keypad of the Speaker-Microphone → press the [OK]-key to send the message → the message sending status pops up on the screen.
 - InsertComMsg (Insert Common Message) → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the desired message → press the [OK]-key → the inserted text is added to the text → edit or press the [OK]-key to return to the previous level.
 - **Save** \rightarrow press the [Select]-key to save the message \rightarrow return to the previous level.
 - Delete → 'Are you sure?' pops up on the screen → press the [OK]-key to confirm deletion or press the [Back]-key to cancel the deletion → return back to previous level.
 - **ExitEditor** \rightarrow press the [Select]-key to return to the previous level
 - (2) Delete All \rightarrow 'Are you sure?' pops up on the screen \rightarrow press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion \rightarrow return back to previous level.

Call Log 📞 🕕

10.3

Information for recent dialed calls, received calls and missed calls can be checked by users thru Call Log menu. Call logs help to manage the recent call activities.

Dialed Calls (DialedNumbs)

Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to select **CallLog** and press the [Select]-key to enter.

Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to **DailedNumbs** and press the [Select]-key to choose from the following options:

- (1) DialedNumbs list → press the [Select]-key → Rotate the [ENC] knob or use the [▲/▼]-keys to choose the number/contact → press the [Select]-key to choose between the following options:
 - **View** → Press the [Select]-key to check the dialed number → Press the [Back]-key to return to the previous level.
 - TimeOfCall → press the [Select]-key to display the call time and duration information → press the [Back]-key to return to previous level.
 - SendMsg → Press the [Select]-key to edit the message → Press the [OK]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose option of either SendMsg, InsertComMsg, or ExitEditor → Press the [Select]-key to confirm the selected option → Return to the previous level.
 - Delete → 'Are you sure?' text pops up on the screen → press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion → return back to previous level.
- (2) **Delete All** \rightarrow 'Are you sure?' text pops up on the screen \rightarrow press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion \rightarrow return back to previous level.

Received Calls 😉 🛈

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to select **CallLog** and press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to **ReceivedCalls** and press the [Select]-key to choose from the following options:
 - (1) **ReceivedCalls** list \rightarrow press the [Select]-key to enter \rightarrow rotate the [ENC] knob or use the [\blacktriangle/∇]-keys to choose the number/contact \rightarrow press the [Select]key to choose from the following options:

- **View** \rightarrow Press the [Select]-key to check the dialed number \rightarrow Press the [Back]-key to return to the previous level.
- **TimeOfCall** \rightarrow press the [Select]-key to display the call time and duration information \rightarrow press the [Back]-key to return to previous level.
- **SendMsg** \rightarrow Press the [Select]-key to edit the message \rightarrow Press the [OK]key \rightarrow rotate the [ENC] knob or use the [\blacktriangle/∇]-keys to choose option of either **SendMsg**, **InsertComMsg**, or **ExitEditor** → Press the [Select]-key to confirm the selected option \rightarrow Return to the previous level.
- **Delete** \rightarrow 'Are you sure?' text pops up on the screen \rightarrow press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion \rightarrow return back to previous level.

(2) **Delete All** \rightarrow 'Are you sure?' text pops up on the screen \rightarrow press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion \rightarrow return back to previous level. 10/10

Missed Calls 🔽 🛈

- Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\land / \bigtriangledown]$ -keys to select *CallLog* and press the [Select]-key to enter.
- Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to *MissedCalls* and press the [Select]-key to choose from one of the following options:
 - (1) **MissedCalls** list \rightarrow press the [Select]-key to enter \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose the number/contact \rightarrow press the [Select]key to choose from the following options:
 - **View** \rightarrow Press the [Select]-key to check the dialed number \rightarrow Press the [Back]-key to return to the previous level.
 - TimeOfCall → press the [Select]-key to display the call time and duration information \rightarrow press the [Back]-key to return to previous level.
 - **SendMsg** \rightarrow Press the [Select]-key to edit the message \rightarrow Press the [OK]key \rightarrow rotate the [ENC] knob or use the [\blacktriangle/∇]-keys to choose option of either **SendMsg**, **InsertComMsg**, or **ExitEditor** → Press the [Select]-key to confirm the selected option \rightarrow Return to the previous level.
 - **Delete** \rightarrow 'Are you sure?' text pops up on the screen \rightarrow press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion \rightarrow return back to previous level.
 - (2) **Delete All** \rightarrow 'Are you sure?' text pops up on the screen \rightarrow press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion \rightarrow return back to previous level.

Scan 🔯 10.4

Scan, Scan list, Scan Mode and Roaming of the radio can be enabled or disabled by following options. adioddity

Scan

- 1. Press the preset [Scan On/Off]-key to turn the scan On or Off
- Hold and long press the Radioddity GD-88 [▲/▼]-key to turn on scan, and press any key to turn if off

or

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\land / \lor]$ -keys in order to select **Scan** \square and press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to **Scan** and press the [Select]-key to enter.
- 3. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose from the following options:
 - (1) **Select List** \rightarrow press the [Select]-key to enter \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose the desired scan list \rightarrow press the [Select]-key to confirm the selection \rightarrow 'Set OK!' pops up on the screen \rightarrow return to the previous level.
 - (2) Scan On/Off → press the [Select]-key to turn it On or Off.
 - (3) RoamScan On/Off → press the [Select]-key to turn it On or Off.

Scan List 🗎

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys in order to select *Scan* 2 and press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to **Scan list** and press the [Select]key to enter.
- 3. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to the desired scan list and press the [Select]-key to enter the list.
- 4. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys for below options:
 - (1) Choose one of the channels, press the [Select]-key to choose from the following options:

- **Set Prior** \rightarrow press the [Select]-key to set the channel to be priority \rightarrow 'Prior is Set' pops up on the screen \rightarrow return to the channel list, where the current channel is additionally marked with a P.
- **Cancel Prior** \rightarrow press the [Select]-key to cancel the priority channel \rightarrow 'Cancelled' pops up on the screen \rightarrow Return to the channel list, where the 'P' letter disappears on current channel.
- **Channel Del** \rightarrow press the [Select]-key to delete the channel from the scan list \rightarrow Return to the channel list.
- (2) **Channel Add** \rightarrow press the [Select]-key \rightarrow select zone \rightarrow select channel to be added \rightarrow press (OK) to confirm your selection \rightarrow return to previous level. **Zone list** \rightarrow rotate the [ENC] knob or use the [\blacktriangle/∇]-keys to choose the Zone \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the [\blacktriangle/∇]-keys to choose the desired channel \rightarrow press the [Select]-key to add the selected adioddity channel and return to the scan list.

Scan Mode 🕥

1. Press the preset [Scan Mode]-key to choose the scan mode.

or

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys in order to select *Scan* \square and press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to **Scan Mode** and press the [Select]-key to enter.
 - (1) Carrier when the radio receives a HF carrier signal while scanning, it will stay at the current channel for a short time until the carrier signal disappears and continue to scanning.
 - (2) Time when the radio receives a HF carrier signal while scanning, it will stay at the current channel for a preset short period (time range is 5...20 sec) and continue with scanning once the preset period is up.
 - (3) **Search** when the radio receives a HF carrier signal while scanning, it will stay at the current channel and exit the scanning, unless you restart it.

Notes: Before any scan mode is selected, please make sure the 'Scan List' is preset in advance, otherwise the scan feature is unable to be activated. When the scan is On, the radio will start to scan all the receivable channels in the list. Toddity Oddity

Roam Setting 氢

Roaming and Roam Mode can be enabled or disabled by the following two ways:

1. Press the preset [Roam On/Off]-key to turn the roaming On/Off.

or

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys in order to select *Scan* ☑ and press the [Select]-key to enter.
- Rotate the [ENC] knob or use the [▲/▼]-keys to *Roam Setting* and press the [Select]-key to choose from one of the following options:
 - (1) Roam Mode → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose from one of the modes Auto, Manual or RSSI → press the [Select]-key to confirm the selection and return to the previous level.

Roaming Mode	
- 4	Description
Auto	Once searching an available repeater from the scan list, the radio will lock to the current available repeater and pause auto roaming. Then, it will connect with the available repeater according to the preset Connect Check Timer. If the connection fails after the preset Connect Time is used up, it will restart the strong signal Auto roaming search.
Manual	Users can manually roam to the next available repeater. Once it is on, all repeater channels in the scan list will be waken up to search the nearest available repeaters until finds an available one. Every time the nearest available repeater is found, a Connect Recheck Timer (Repeater Check Timer) will be enabled. Users can also lock the repeater by short pressing the [OK/Select]-key. The next available repeater is not necessarily the one with the largest RSSI value in the channels of the scan list.
RSSI (Strong Signal Roaming)	Once a repeater in the channels of the scan list with RSSI more than preset RSSI threshold value is searched by RSSI mode, the radio will lock to the current channel and pause the strong signal auto roaming. Then it will connect with the current repeater according to the preset Connect Check Timer. If the connection fails after the preset Connect lime is used up, it will restart the strong signal Auto roaming search.

Threshold values:	Maximum:	- 90 dBm
-100	Minimum:	- 125 dBm
9	Increment:	-1 dBm
	4/7.	

Notes: The received signal strength (RSSI threshold value) is settable. If the RSSI mode is enabled and the searched repeater RSSI value is more than the preset threshold, the repeater's transmitting signal coverage will be automatically recognized as good, and then the radio will suspend RSSI roaming. The stopped repeater is not necessarily the one with the largest RSSI value in the channels of the scan list.

(3) **ConnectChk Timer** \rightarrow press the [Select]-key to display the current time value (second) \rightarrow rotate the [ENC] knob or use the $[\Delta/\nabla]$ -keys to adjust the desired connect check time \rightarrow press the [OK]-key to confirm the modification \rightarrow 'Set Ok!' pops up on the screen and return to the previous level.

Timer values:	Maximum:	255s
	Minimum:	0s
	Increment	1s

Notes: When the nearest available repeater is searched by Manual Roaming, the radio will immediately start timing according to the preset dwell time value. If the available repeater is not confirmed by pressing the [OK]-key within the preset time, once the timer reaches the preset time, the radio will stop roaming; or restart roaming to find the next available repeater.

(4) **ReChkTimer** \rightarrow press the [Select]-key to display the current time value(second) \rightarrow rotate the [ENC] knob or use the [\blacktriangle/∇]-keys to adjust the desired recheck time \rightarrow press the [OK]-key to confirm the modification \rightarrow 'Set Ok!' pops up on the screen and return to the previous level.

Maximum:	255s
Minimum:	0s
Increment	1s
	Minimum:

Notes: When the available repeaters are searched by Auto roaming or RSSI roaming, the radio is confirmed to lock at the currently available repeater and the roaming is paused. Then, the radio will transmit signals at regular intervals based on the preset Connect ReCheck timer to connect with the current repeater. If it fails to connect with the currently available repeater in preset Connect timer of transmission (set on the Connect timer table), the radio will restart Auto Roaming or RSSI Roaming to search any nearest available repeater.

(5) **ConnectTime** \rightarrow press the [Select]-key to display the current connect time \rightarrow rotate the [ENC] knob or use the [\blacktriangle/∇]-keys to adjust the desired connect times \rightarrow press the [OK]-key to confirm the modification \rightarrow 'Set Ok!' pops up on the screen and return to the previous level. adioddii

Timer values:	Maximum:	10s	5
-10,	Minimum:	1s	
	Increment	1s	

Notes: No matter which roaming mode is selected, in searching, each repeater channel in the scan list will try to connect with nearby available repeaters based on the preset Connect times. If the pause channel fails to find the available repeaters within the preset Connect times, it will continue to scan the next repeater channel from the list till it finds an available one.

Precautions for roaming

- 1. Before any roaming mode is selected, please make sure the 'Scan List' is preset in advance, otherwise the scan feature is unable to be activated.
- 2. When the roaming is activated, the radio will confirm the activation with 'OK' been shown on the display and the icon for scanning/roaming being initially displayed in white color. It then starts to scan all repeater channels (TX/RX channels with different TX- and RX-frequencies) only. It will not scan channels with same TX/RX frequency. As long as the scanning does not hit any of the repeaters listed in the roaming list, the screen will remain black.
- 3. When the roaming is activated, if there are no TX/RX channels with different TXand RX-frequencies (repeater channels) in the scan list, after scanning the current selected scan list, it will exit the roaming function.
- 4. In roaming searching, if VFO A is indicated with '>' icon or 'CTRL' when [PTT]key is pressed, the radio will stop roaming and return back to preset Scan reply/transmit Mode to initiate a call. It will continue to roam after the [PTT]-key is released.
- 5. When roaming is on, the radio defaults to scan in the main VFO (VFO A). When the main VFO (VFO A) is in roaming, channel selection is prohibited. However, menu accessing and setting of main VFO (VFO A) can still be made by selecting VFO A.
- 6. When the main VFO (VFO A) is in roaming, channel and VFO operation and menu accessing and setting of VFO B still can be made by selecting VFO B.

Zones & Channel 료 10.5

The following two ways can be used to select and switch in Zones and channels:

1. Press the preset [Zone switch]-key to switch in zones and channels.

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to select **Zone & Channel** [□] and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys for the desired zone and press the [Select]-key to enter.
- 3. Rotate the [ENC] knob or use the [▲/▼]-keys for the desired channel and press the [Select]-key to choose from the following options:
 - (1) **Select** \rightarrow press the [Select]-key \rightarrow change to the selected zone and channel \rightarrow return to the standby interface.
 - (2) **Modify Name** \rightarrow press the [Select]-key \rightarrow modify the channel name \rightarrow press the [OK]-key to confirm and return to the previous level.

Local Set 🕲 10.6

or

If the basic operation and functions of the menu are allowed by software to set and check, below functions are available thru accessing the Local Set 🙆 menu.

Language 💹 🖽

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose *Local Set* @ and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose the Language and press the [Select]-key to enter.
- 3. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose the desired Language and press the [Select]-key to change.
- 4. 'Lang is Set' pops up on the screen and return back to the previous level.

Keypadlock

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/ \nabla]$ -keys to choose *Local Set* @ and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose *KeypadLock* and press the [Select]-key to enter.
- 3. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose the option of *AutoLock* SW or ManualLock SW and press the [Select]-key to switch it On / Off. Jit V
- 4. Press the [Back]-key to return to the previous level.

Backlight 🖄

1. Press the preset [BackLight Auto/On/Off]-key.

or

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/ \nabla]$ -keys to choose *Local Set* @ and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose **BackLight** and press the [Select]-key to choose from the following options:
 - (1) **BL switch** \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose option of **BL ON**, **BL OFF** or **Auto** \rightarrow press the [Select]key to confirm \rightarrow return to the previous level.
 - (2) **Brightness** \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the $[\land / \lor]$ -keys to select desired brightness between 0 and 6 \rightarrow press the [OK]key to confirm \rightarrow 'Lightness is Set' pops up on the screen \rightarrow return to the previous level.
 - (3) **DelayTime** \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to select a value between 10 and 60 \rightarrow press the [OK]-key to confirm \rightarrow 'Set OK!' pops up on the screen \rightarrow return to the previous level.

LED indicator (LEDs) 👼

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/ \nabla]$ -keys to choose *Local Set* @ and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose *LEDs* and press the loddity [Select]-key to enter.
- 3. Press the [Select]-key to switch it On or Off.
- 4. Press the [Back]-key to return to the previous level.

Notes: If the LED indicator is OFF, it will not light in receiving and transmitting. If the LED indicator is On, it will light in receiving and transmitting.

DisplayMode 🗮

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/ \nabla]$ -keys to choose *Local Set* @ and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose **DisplayMode** and press the [Select]-key to enter. TV

- 3. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose from the following options:
 - (1) **CHN+Name** \rightarrow press the [Select]-key for the display to show the channel number and the name associated to it \rightarrow 'DispMode is Set' pops up on the screen \rightarrow return to previous level.
 - (2) **CHN+FREQ** \rightarrow press the [Select]-key for the display to show the channel number and the frequency assigned to it \rightarrow DispMode is Set' pops up on the screen \rightarrow return to previous level.
 - (3) **CHN** \rightarrow press the [Select]-key for the display to show just the channel number \rightarrow DispMode is Set' pops up on the screen \rightarrow return to previous level.
 - (4) **VFO Mode** \rightarrow press the [Select]-key \rightarrow VFO Mode is activated -> return to standby screen.

Notes: This may also be accomplished by assigning a function key to [VFO] and pressing that function key. For more details, please check chapter 0 Preset Keys on page 121.

(5) **S/D Mode** \rightarrow Press the [Select]-key to switch it On or Off \rightarrow press the

[Back]-key to return to the previous level



Notes: For single VFO display, the switch should be to its On-position (green). For dual VFO display, the switch should be to its Off-position (red).

Padioddity 1. Press the preset [VOX On/Off]-key to turn it On / Off.

vox

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose *Local Set* (and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *VOX* and press the [Select]-key to choose from the following options:
 - (1) **Vox Switch** \rightarrow press the [Select]-key to turn it On or Off.
 - (2)**Vox Level** \rightarrow press the [Select]-key \rightarrow Rotate the [ENC] knob or use the $[\blacktriangle/ \nabla]$ -keys to choose the desired level between 1 and 12 \rightarrow press the [Select]-key to confirm \rightarrow 'Level is Set' pops up on the screen \rightarrow return to the previous level.
 - (3)**Vox Delay** \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/ \nabla]$ -keys to choose the desired level between 1 and 4 seconds \rightarrow press the [Select]-key to confirm \rightarrow 'Vox is Set' pops up on the screen -> return to the previous level.
- **Notes**: If VOX is on, when the audio amplitude reaches the preset level, the radio will automatically initiate a call without pressing the [PTT]-key. The higher the sensitivity level, the smaller the required audio amplitude to trigger VOX. The lower the sensitivity level, the higher the required audio amplitude to trigger VOX.

Channel Sw 🧕

If the radio is in idle state, you may the channel to be used may be selected by means of the [ENC] knob. Therefore, the *Channel Sw* needs to be turned On

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Local Set* ④ and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose **Channel Sw** and press the [Select]-key to choose from the following options:
 - (1) **Channel Sw** \rightarrow press the [Select]-key to turn it On or Off.

Notes: Whenever the channel switch is Off, rotating the [ENC] knob may not be used to select a channel or choose a frequency.

Factory Reset

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Local Set* ④ and then press the [Select]-key to enter.
- Rotate the [ENC] knob or use the [▲/▼]-keys to choose *Factory Reset* and the display shows 'Are you sure restore factory settings?' after pressing the [Select]-key.

3. Press the [OK]-key to confirm the factory reset, or press the [Back]-key to cancel.

Notes: If you restore the factory settings, the radio will be restored with those settings that have previously been saved using the **Radioddity** CPS as your radios factory settings. All data will be overwritten by those as saved for the factory reset procedure. For more details, please check chapter 11.3 FactoryReset on page 103.

ABRepeat 📰 🕯

The Radioddity GD-88 comes with two totally independent VFOs. This allows the radio to also operate as a repeater. Crossband-, cross mode- as well as hybridand even digital-repeating are all possible. In general, there are two channel definitions required to use the repeating functionality.

1. Press the preset [Relay On /Off]-key to turn the repeater-functionality of the GD-88 On or Off.

or

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Local Set* ④ and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *ABRepeat* and press the [Select]-key to choose from the following options:
 - (1)**A/B RepeatSw** \rightarrow Press the [Select]-key to switch repeater-mode On or Off for the currently selected channel \rightarrow press the [Back]-key to return to the previous level
 - (2) A/B ListenSw → Press the [Select]-key to turn monitoring of the currently selected channel On or Off → press the [Back]-key to return to the previous level. The parameter is only evaluated by the radio firmware if A/B RepeatSw is turned On.
 - (3) **A RepeatMode** → Press the [Select]-key to choose for VFO-A from
 - **OFF** The currently selected channel is not in repeater-mode.
 - **Tran_Rx** The currently selected channel is supposed to be part of a repeater-setup and RX is only enabled if the channel is in repeater-mode.
 - **Tran_Tx** The currently selected channel is supposed to be part of a repeater-setup and TX is only enabled if the channel is in repeater-mode.

TV

TranRxTx The currently selected channel is supposed to be part of a repeater-setup and RX and TX are both enabled if the channel is in repeater-mode.

(4) **B RepeatMode** → Press the [Select]-key to choose for VFO-B from

- **OFF** The currently selected channel is not in repeater-mode.
- *Tran_Rx* The currently selected channel is supposed to be part of a repeater-setup and will act as the RX input channel.
- *Tran_Tx* The currently selected channel is supposed to be part of a repeater-setup and will act as the TX output channel.
- **TranRxTx** The currently selected channel is supposed to be part of a repeater-setup and may act as RX input and as TX output channel.

10.7 Parameters 🕑

If it is allowed by software, TOT, Power Setting, Repeater Setting, High / Low Power, Time Slot, Repeater settings, Power Saving mode, etc. can be set and/or checked through the Parameters menu.

тот 🥙

The Call Time is for limiting the time of each call, which can be used to avoid affecting the normal communication of other users due to a long-lasting transmission of the radio.

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Parameters* ^D and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *TOT* and press the [Select]-key to enter.
- 3. Rotate the [ENC] knob or use the [▲/▼]-keys to choose the *Call Time(s)* between Off, 20...500 sec. and press the [OK]-key to confirm.
- 4. 'Calltime is set' pops up on the screen and the radio returns to the previous level.

TOT time: Maximum: 500s Minimum: 20s Increment: 10s Radioddity

Power 春

1. Press the preset [High/Low Power option]-key to switch the power between high and low.

or

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Parameters* 2 and then press the [Select]-key to enter.
- Rotate the [ENC] knob or use the [▲/▼]-keys to choose *Power* and press the [Select]-key to choose between *High Power* and *Low Power* and press the [Select]-key to confirm.
- 3. 'Power is set' pops up on the screen \rightarrow return to the previous level.

Slot/Repeat 💹 🕕

The Slot/Repeat setting is set according to the channel type of the currently selected channel (Repeater with different TX/RX frequencies or TX and RX being both the same frequency).

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Parameters* ¹⁰ and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose from the following options:

If the currently selected channel is setup with different RX/TX frequencies (typically repeater):

(1) *Slot/Repeat* → press the [Select]-key to enter

- rotate the [ENC] knob or use the [▲/▼]-keys to choose between either
 Slot 1 or *Slot 2* → press the [Select]-key to confirm → 'Set OK!' pops up on the screen → return to the previous level.
- *Repeat/Off* → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose either *Repeater mode* or *Talkaround* → press the [Select]-key to confirm → 'Set OK!' pops up on the screen → return to the previous level.

Notes: For more details, please check chapter0

Radioddity

Repeater / Talk Around ⁽¹⁾ on page 47. The functionality may also be accomplished by pressing the preset [Scan On/Off]-key to turn the scan On or Off.

If the currently selected channel is setup with *same RX/ TX frequencies* (*typically hotspot*):

(1) *Slot/Repeat* → press the [Select]-key to enter

Rx Time Slot → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose option of either ON, Slot 1 or Slot 2 → press the [Select]-key to confirm → 'Set OK!' pops up on the screen → return to the previous level.



Tx Time Slot \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/ \bigtriangledown]$ -keys to choose option of either **ON**, **Slot 1** or **Slot 2** \rightarrow press the [Select]-key to confirm \rightarrow 'Set OK!' pops up on the screen \rightarrow return to the previous level.

Notes: Most simplex (same RX and TX-frequency) hotspots do not support the TDMA Time Slot technique and thus require the **Rx Time Slot** and **Tx Time Slot** both to be set to On.

Fullduplex repeaters in general do use the very same Time Slot for TX as well as for RX. That 's why there is no differentiation of **Rx Time Slot** and **Tx Time Slot** for those.

Sleep Mode 🛞 🛔

As the Radioddity GD-88 is powered by a battery with limited capacity, it is advisable to make best use of the battery's capacity. Therefore, the radio has special functionalities for saving power and lengthen the battery life.

When the radio is on standby and without any operations, it can be set a delay time for entering sleep mode automatically.

Users can set the duty cycle (waketime : sleep time) of the power-saving mode. The smaller the ratio, the lower the power consumption. A higher ratio may result in a receiving delay or missed calls. So, it is suggested to set the duty cycle based on its actual use. The set duty cycle is only effective when sleep mode is turned On.

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Parameters* and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *SleepMode* and press the [Select]-key to choose from the following options and procedures:

(1) **SIpMode Sw** \rightarrow press the [Select]-key to turn it On or Off.

Ity

- (2) **Delay Time** \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/ \bigtriangledown]$ -keys to choose the delay time between 10 and 60 seconds \rightarrow press the [OK]-key to confirm \rightarrow 'Set OK!' pops up on the screen and returns to the previous level.
- (3) **Duty cycle** \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose one of the options **1:1**, **1:2** or **1:4** and press the [Select]-key to confirm \rightarrow 'Set OK!' pops up on the screen and returns to the previous level.

Encryption (ENC Level) 🚺 🛈

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose **Parameters** and then press the [Select]-key to enter.
- Rotate the [ENC] knob or use the [▲/▼]-keys to choose the desired encryption level of either *None*, *Low*, *Mid* or *High* and press the [Select]-key to confirm.
- 3. 'Set Ok!' pops up on the screen and returns to the previous level.
- Notes: If it is allowed by CPS software, enabling this function will help to prevent other users from eavesdropping without authorization. However, encryption is not a necessary requirement for receiving and transmitting. The receiver radio must have the same AES 128 encryption method, level, alias, and values as the transmitter radio to decrypt the encrypted voices from each other.
 Amateur radio networks do not allow to use encryption.

Squelch Level (SQ level) 🛣 🖂

- Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Parameters* and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose the *SQ Level* and press the [Select]-key to enter.
- 3. Rotate the [ENC] knob or use the [▲/▼]-keys to select the desired *Level 1...12* or normally open (*Level 0*), and press the [Select]-key to confirm.
- 4. 'Sq level is set' pops up on the screen and the radio returns to the previous level.

Wide / Narrow Band (Bandwidth) 💁 🖂

- 1. Access the menu, press the [Menu]-key and Rotate the [ENC] knob or use the [▲/▼]-keys to choose *Parameters* 2 and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose **Band** and press the [Select]-key to enter.

- 3. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to select the desired **Narrow** bandwidth or **Wide** bandwidth and press the [Select]-key to confirm.
- 4. 'Set Ok' pops up on the screen and the radio returns to the previous level.

Busy Channel Lockout (BCLO) 📥 🖂

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Parameters* 2 and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose **BCLO** and press the [Select]-key to enter.
- 3. Press the [Select]-key to turn the **Busy** Channel Lockour **On** or **Off**, or press the [Back]-key to return to the previous level.

Signaling 🔤 🖂

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Parameters* 2 and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *Signaling* and press the [Select]-key to enter.
- 3. Rotate the [ENC] knob or use the [▲/▼]-keys to select the choose from the following options and procedures:
 - (1) *RX Subaudio* \rightarrow press the [Select]-key to choose from the following options:

Signaling off \rightarrow press the [Select]-key to turn off the CTCSS/DCS code \rightarrow 'Set Ok' pops up on the screen and returns to the previous level.

- CTCSS → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the CTCSS code → press the [Select]-key to confirm → 'Set Ok' pops up on the screen and returns to the previous level.
- DCS → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the DCS code → press the [Select]-key to confirm → 'Set Ok' pops up on the screen and returns to the previous level.
 - **DCS Reverse** \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the [\blacktriangle/ ∇]-keys to choose the DCS Reverse code \rightarrow press the [Select]-key to confirm \rightarrow 'Set Ok' pops up on the screen and returns to the previous level.

(2) **TX Subaudio** \rightarrow press the [Select]-key to choose from the following options:

- **Signaling off** \rightarrow press the [Select]-key to turn off the CTCSS/DCS code \rightarrow 'Set Ok' pops up on the screen and returns to the previous level.
- **CTCSS** \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the [\blacktriangle/ ∇]-keys to choose the CTCSS code \rightarrow press the [Select]-key to confirm \rightarrow 'Set Ok' pops up on the screen and returns to the previous level.
- DCS → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the DCS code → press the [Select]-key to confirm → 'Set Ok' pops up on the screen and returns to the previous level.
- DCS Reverse → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the DCS Reverse code → press the [Select]key to confirm → 'Set Ok' pops up on the screen and returns to the previous level.

CTCSS Phase Reverse (Ctcss Tail) \square \bigcirc

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Parameters* ² and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *CtcssTail* and press the[Select]-key to enter.
- 3. Choose one of the options *55Hz*, *120*°, *180*° or *240*° and press the [Select]-key to confirm.
- 4. 'Set OK!' pops up on the screen and returns to the previous level.

10.8 Tone Set 🗾

If It is allowed by the Radioddity CPS software, set and check the prompt tones by accessing the Tone Set menu.

Profiles 🔢

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Tone Set* 🖸 and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose **Profiles** and press the [Select]-key to enter.
- 3. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *General* or *Silent*, and press the [Select]-key to confirm the selection.
- 4. 'Profile is set' pops up on the screen and returns to the previous level.

TL

lity

Key Tone (KeyTone) 🗒

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Tone Set* 🖸 and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *KeyTone* and press the [Select]-key to choose from the following options and procedures:
 - (1) **KeyRingSW** \rightarrow press the [Select]-key to turn it on or off.
 - (2) KeyRingStat → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the Key Tone level between 01 and 13→ press the [OK]-key to confirm → 'Keytone is set' pops up on the screen and returns to the previous level.

Power Tone

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose **Tone Set** and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *PowerTone* and press the [Select]-key to choose from the following options and procedures:
 - (1) **LowBatToneSW** \rightarrow press the [Select]-key to turn it on or off.
 - (2) LowBatTone → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the Low Battery Tone level between 01 and 13→ press the [OK]-key to confirm → 'Tone is set' pops up on the screen and returns to the previous level.

Message Tone (MsgTone) 🗟 🛈

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Tone Set* 🖸 and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *MsgTone* and press the [Select]-key.
- Rotate the [ENC] knob or use the [▲/▼]-keys to choose the Message Tone ring type between *Off*, *Ring 1*, *Ring 2*, *Ring 3*, *Ring 4* and *Ring 5* → press the [Select]-key to confirm → 'RingType is set' pops up on the screen and returns to the previous level.

Private Call Ring Tone (PCallTone) 🚮 🕕

1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose **Tone Set** 🖸 and then press the [Select]-key to enter.

v2.0

- v2.0
- Rotate the [ENC] knob or use the [▲/▼]-keys to choose *PCallTone* and press the [Select]-key to choose from the following options and procedures:
 - (1) **PCallSW** \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/ \bigtriangledown]$ -keys to choose from one of the options of **Rx Begin Tone**, **Rx End Tone**, **Tx Begin Tone** or **Tx End Tone** \rightarrow press the [Select]-key to tick or untick the option \rightarrow press the [Back]-key to return to the previous level.
 - (2) PCallTone → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the Private Call Tone ring type between Off, Ring 1, Ring 2, Ring 3, Ring 4 and Ring 5 → press the [Select]-key to confirm → 'Tone is set' pops up on the screen and returns to the previous level.

Group Call Ring Tone (G Call Tone) 🖾 🛈

- 3. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose **Tone Set** . and then press the [Select]-key to enter.
- 4. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *GCallTone* and press the [Select]-key to choose from the following options and procedures:
 - (1) **GCallSW** \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/ \lor]$ -keys to choose from one of the options of *Rx Begin Tone*, *Rx End Tone*, *Tx Begin Tone*, *Tx End Tone* \rightarrow press the [Select]-key to tick or untick the option \rightarrow press the [Select]-key to confirm or the [Back]-key to return to the previous level.
 - (2) GCallTone → press the [Select]-key → rotate the [ENC] knob or use the [▲/▼]-keys to choose the Group Call Tone ring type between Off, Ring 1, Ring 2, Ring 3, Ring 4 and Ring 5 → press the [Select]-key to confirm → 'Tone is set' pops up on the screen and returns to the previous level.

Alert Ring Tone (AlertTone) 🗳 🕕

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Tone Set* and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *AlertTone* and press the [Select]-key to enter.
- 3. Rotate the [ENC] knob or use the [▲/▼]-keys to choose the Alert Ring Tone between *Off, Ring 1, Ring 2, Ring 3, Ring 4* and *Ring 5* → press the [Select]-key to confirm.
- 4. 'Tone is set' pops up on the screen and returns to the previous level.

FM Call Tone / Power On Tone 🔟 🛈

1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\land / \bigtriangledown]$ -keys to choose **Tone Set** \blacksquare and then press the [Select]-key to enter.

2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose *FM Call Tone / Power* dity **On Tone** and press the [Select]-key to enter.

Press the [Select]-key to turn the PwrOnTone On or Off.

Appendix 🛃 10.9

If it is allowed by CPS software you may set and check GPS, FM Radio, Time, DTMF, HeadSet+Speaker and APRS by accessing the Appendix menu.

GPS Ϋ

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/ \nabla]$ -keys to choose **Appendix** subscripts and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose **GPS** and press the [Select]-key to choose from the following options and procedures:

(1) **GPS Switch** → press the [Select]-key to turn GPS On or Off;

(2) GPS Serial Data \square / Upload SW $\downarrow \rightarrow$ press the [Select]-key \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose from one of the options of **GPGGA**, **GPGSA**, **GPGSV**, **GPRMC** → press the [Select]-key to tick or untick the option \rightarrow press the [Back]-key to return to the previous level.

Notes: All these options should be checked for APRS to work as expected. GPGGA: Global Positioning System Fix Data GPGSA: GPS DOP and active satellites GPGSV: GPS Satellites in view GPRMC: Recommended minimum specific GPS/Transit data

- (3) **GroupInfo** \rightarrow press the [Select]-key to enter the following options and procedures:
 - **GPS Map** \rightarrow press the [Select]-key to display the rough distance between the Radioddity DB25-D or GD-88 and other stations \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose between *GroupMap* and *Location* \rightarrow press the [Back]-key to return to the previous level.
 - **GPS RXMsgs** \rightarrow press the [Select]-key to display the list of received APRS messages \rightarrow rotate the [ENC] knob or use the [\blacktriangle/∇]-keys to choose the received message \rightarrow press the [Select]-key to display the full APRS data (date, time, longitude, latitude, altitude, speed) that had been received \rightarrow press the [Back]-key to return to the previous level.

- GPS Location → press the [Select]-key to display the location information (date, time, longitude, latitude, altitude, speed) of the Radioddity DB25-D or GD-88 → rotate the [ENC] knob or use the [▲/▼]-keys to check GPS / GL received satellites information and signal strength (white: empty signal, red: weak signal, light blue: available signal) → press the [Select]-key to return to the previous level.
- **Clear RXMsg** → press the [Select]-key to delete the received messages and return to the previous level.
- (4) **GPS Upload Chn** → press the [Select]-key to check **Zone**, **Chn** and **SendGap** information → press the [Back]-key to return to the previous level.

(5) **Calibrator** \rightarrow press the [Select]-key to choose from the following options:

- **Auto** \rightarrow press the [Select]-key to turn the Auto-function On / Off.
- Manual → press the [Select]-key → Display Time zone and offset compared to UTC (Coordinated Universal Time) → rotate the [ENC] knob or use the [▲/▼]-keys to choose the desired time zone → press the [Select]-key to confirm → return to the previous level.
- **Notes**: GPS needs to be allowed by software. Some GPS functions must be preset by software before use. For some GPS functions the radios' location must be identified successfully before use. Some GPS functions require other users to have GPS functionality and their location been successfully identified as well before use. The GPS Distance calculation or the use of some functions is for reference only, which may cause errors due to some unexpected or environmental reasons.

FM Radio 📾

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose *Appendix* and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *FM Radio* and press the [Select]-key to display the FM radio frequency information.
- 3. Rotate the [ENC] knob or use the $[\blacktriangle/ \nabla]$ -keys to manually select the FM radio frequency or seek the FM radio frequency automatically.
- 4. Press the [Back]-key to exit the FM radio mode and return to the previous level or press the [OK]-key to choose from the following options and procedures:
 - (1) Save \rightarrow press the [Select]-key to save the current FM radio channel.
 - (2) **FMList** \rightarrow press the [Select]-key to display the list of saved FM radio frequencies \rightarrow rotate the [ENC] knob or use the [\blacktriangle/∇]-keys to choose the

desired frequency \rightarrow press the [Select]-key to select one of the following options:

- Delete → press the [Select]-key to delete the current FM radio frequency or press the [Back]-key to cancel.
- *Play* → press the [Select]-key to play the current FM radio frequency or press the [Back]-key to cancel.
- (3) **TuneMode** → press the [OK]-key to choose from the following options and procedures:
 - **Manual** \rightarrow press the [Select]-key to select the manual tuning mode \rightarrow 'Mode is set' pops up on the screen and returns to the previous level.
 - **Auto** \rightarrow press the [Select]-key to select the automatic tuning mode \rightarrow 'Mode is set' pops up on the screen and returns to the previous level.

Time 👪

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose *Appendix* and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *Time* and press the [Select]-key to choose from the following options and procedures:
 - (1) **Date** \rightarrow press the [Select]-key to display the date and year \rightarrow rotate the [ENC] knob or use the [\blacktriangle/∇]-keys to change the cursor position (between year, month and day) or input the desired date and year using the numeric keypad of the Speaker-Microphone \rightarrow press the [OK]-key to confirm \rightarrow 'Date is set' pops up on the screen and returns to the previous level.
 - (2) *Time* → press the [Select]-key to display the time → rotate the [ENC] knob or use the [▲/▼]-keys to change the cursor position (minutes and hours) or input the desired time using the numeric keypad of the Speaker-Microphone → press the [OK]-key to confirm → 'Time is set' pops up on the screen and returns to the previous level.
 - (3) **DateForm** \rightarrow press the [Select]-key \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose the desired date form (**Y/M/D**, **M/D/Y** or **D/M/Y**) \rightarrow press the [Select]-key to confirm \rightarrow 'Date is set' pops up on the screen and returns to the previous level.
 - (4) **Use GPS datetime** → press the [Select]-key to turn date and time synchronization with received GPS data On or Off.

Notes: **Use GPS datetime** is effective only when GPS function is on and successfully positioned.

DTMF 👑

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Appendix* and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose **DTMF** and press the [Select]-key to choose from the following options and procedures:
 - (1) **DTMF Switch** \rightarrow press the [Select]-key to turn it on or off.
 - (2) DTMF Volume → press the [Select]-key to display the current local volume → Rotate the [ENC] knob or use the [▲/▼]-keys to adjust the volume between Off, 01...12 → press the [OK]-key to confirm → 'Set OK!' pops up on the screen and returns to the previous level.

Notes: The specified DTMF code tone is only used as an alert tone to the local radio and reminds the user to receive the call. The DTMF code must be preset by CPS software. Notes: For more details, please check chapter 12.9 DTMF Volume on page 132 and 12.9 DTMF code 0 on page 132

Headset+Speaker 🗟

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose *Appendix* and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *Headset+Speaker* and press the [Select]-key to enter.
- Rotate the [ENC] knob or use the [▲/▼]-keys to choose from one of the options of OFF in, LoudSpeaker, MicroSpeaker in, Loud+Mic Spkr in, Spk+HeadSet or Headset and press the [Select]-key to confirm.
- 4. 'Set Ok!' pops up on the screen and returns to the previous level.

Notes: If Off is selected, there is audio output from the external speaker, but no audio output from the Speaker-Microphone.
If LoudSpeaker mode is selected, there is only audio output from the external speaker
If MicroSpeaker is mode is selected, there is audio output from the Speaker-Microphone, but no audio output from the external speaker.
If Loud+Mic Spkr is mode is selected, both the external speaker and the Speaker-Microphone have audio output. This mode is the recommended audio output mode to be used with the Radioddity DB25-D.
If Spk+HeadSet (factory default) mode is selected, there is audio from the Radioddity GD-88 speaker and the plugged in headset accessory.
If Headset mode is selected, there is no audio output from the Radioddity GD-88 speaker, but audio output from the inserted headset.

v2.0

APRS 📀

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose *Appendix* and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the [▲/▼]-keys to choose *APRS* and press the [Select]-key to choose from the following options:
 - (1) APRS Type → press the [Select]-key to change the modes for APRS signaling → rotate the [ENC] knob or use the [▲/▼]-keys to choose the desired APRS Type from either None, Analog APRS, DMR APRS or DMR+Analog APRS -> press the [OK]-key to confirm your selection -> 'Set OK!' pops up on the screen and returns to the previous level.
 - (2) **Analog APRS** \rightarrow press the [Select]-key to change the parameters for analog APRS \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose the desired parameter \rightarrow press the [Select]-key to select one of the following options :
 - PTT Upload → press the [Select]-key to change the behavior on PTT-press
 → rotate the [ENC] knob or use the [▲/▼]-keys to choose the desired
 Upload mechanism from either Close, TX Start or TX End → press the
 [Select]-key to confirm → 'Set OK!' pops up on the screen and returns to
 the previous level.
 - Upload Power → press the [Select]-key to change the output power for APRS upload → rotate the [ENC] knob or use the [▲/▼]-keys to choose between Low Power and High Power → press the [Select]-key to confirm → 'Set OK!' pops up on the screen and returns to the previous level.
 - Upload Frequency → press the [Select]-key to display the current transmit frequency → rotate the [ENC] knob or use the [▲/▼]-keys to position the cursor within the input field → input the frequency using the numeric keypad → press the [OK]-key to confirm → 'Set OK!' pops up on the screen and returns to the previous level.
 - Upload Path → press the [Select]-key to display the current Upload Path → rotate the [ENC] knob or use the [▲/▼]-keys to position the cursor within the input field → input the desired Upload Path using the numeric keypad of the Speaker-Microphone → press the [OK]-key to confirm → 'Set OK!' pops up on the screen and returns to the previous level.
 - Upload Text → press the [Select]-key to display the current Upload Text
 → rotate the [ENC] knob or use the [▲/▼]-keys to position the cursor within the input field → input the desired Upload Text using the numeric keypad of the Speaker-Microphone → press the [OK]-key to confirm → 'Set OK!' pops up on the screen and returns to the previous level.
 - (3) **DMR APRS** \rightarrow press the [Select]-key to change the parameters for digital APRS \rightarrow rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose the desired parameter \rightarrow press the [Select]-key to select one of the following options :

APRS Message → press the [Select]-key to display the list of received APRS messages → rotate the [ENC] knob or use the [▲/▼]-keys to choose the received message → press the [Select]-key to display the full APRS data (date, time, longitude, latitude, altitude, speed) that had been received → press the [Back]-key to return to the previous level.

Notes: If yet no APRS message had been received, 'Commsg empty' pops up on the screen and returns to the previous level.

- **Delete APRS Msg** \rightarrow 'Are you sure?' pops up on the screen \rightarrow press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion \rightarrow return back to previous level.
- (4) **Timer** \rightarrow press the [Select]-key to select the interval for regular APRS beacon transmissions \rightarrow Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose in 30s intervals between **OFF**, **30s** and up to **7650s** and press the [OK]-key to confirm \rightarrow 'Set OK!' pops up on the screen and the radio returns to the previous level.
- (5) Beacon → press the [Select]-key to change the location source to be used for the beacon transmission → rotate the [ENC] knob or use the [▲/▼]-keys to choose the desired source between Preset Beacon and GPS Beacon → press the [OK]-key to confirm your selection -> 'Set OK!' pops up on the screen and returns to the previous level.

10.10 Record 🗖 🕕

If it is allowed by CPS software to set and check recording list, clear record, space info about recording by accessing the Record menu.

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the [▲/▼]-keys to choose **Record** and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to make following options:
 - (1) *Record Set* → press the [Select]-key -+ Rotate the [ENC] knob or use the [▲/▼]-keys to choose between the options *RX record SW* and *TX record SW* → press the [Select]-key to turn the selected option On or Off → press the [Back]-key to return to the previous level.
 - (2) Record List → press the [Select]-key to display the recording list → rotate the [ENC] knob or use the [▲/▼]-keys to choose the desired recording (they are named as follows: <ascending number>_<R/T><DMR_ID>) and press the [Select]-key to choose from the following options:
 - *Play* → press the [Select] to play the selected recording → return to the previous level after finishing playing.

- **Delete** \rightarrow press the [Select]-key \rightarrow 'Are you sure?' pops up on the screen \rightarrow press the [Ok]-key to confirm the deletion or press the [Back]-key to cancel the deletion and return to the previous menu level
- **Information** \rightarrow press the [Select]-key to display the detailed information of the recording.
- (3) *Clear record* \rightarrow press the [Select]-key \rightarrow 'Are you sure?' pops up on the screen \rightarrow press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion and return to the previous level.
- (4) **Space Info** \rightarrow press the [Select]-key to display the total recorded time and total recordable time information \rightarrow press the [Back]-key to return to the previous level.

Notes: Up to 198h of recording time is possible, depending on the remaining memory allocation of the radio.

Device Info 🛄 10.11

If it is allowed by CPS software, set and check Radio ID, Rx Group List, CH Contact (channel contact) and Version by accessing Device Info menu.

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose **Device Info** and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose from the following options:
 - (1) **Radio ID** \bigcirc \rightarrow press the [Select]-key to display the Radio ID (DMR ID) \rightarrow input the desired ID with the numeric keypad of the Speaker-Microphone \rightarrow press the [OK]-key to save \rightarrow 'Set OK!' pops up on the screen and returns to the previous level.
 - (2) *RXGrouplist* \bigcirc press the [Select]-key to display the RX-group list (name in top line) and its members of the currently selected channel \rightarrow Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to check details \rightarrow press the [Back]-key to return to the previous level.
 - (3) **CH contact** \bigcirc press the [Select]-key to display the contact information (ID, Name, Call Type) of the contact associated with the currently selected channel \rightarrow press the [Back]-key to return to the previous level.
 - (4) Version \rightarrow press the [Select]-key to display the Model Number (DB25-D), Firmware Version, Frequency Range (F136-174,F400-480) and Version Date and time \rightarrow press the [Back]-key to return to the previous level. ddity

dit,



dioddity

v2.0

10.12 Channel Edit 🚳

It is supported to check and modify the parameters of Channel or VFO mode by accessing the **Channel Edit** 2 mode.

1. In Standby Mode, press and hold the [B/E]-key for 3 seconds to enter the *Channel Edit* **O** mode.

or

- 1. Access the menu, press the [Menu]-key and rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to choose **Channel Edit** 0, and then press the [Select]-key to enter.
- 2. Rotate the [ENC] knob or use the $[\blacktriangle/\nabla]$ -keys to select the one of the listed parameters.
- 3. Press the [Select]-key to light up the cursor and enter the editing mode.
- 4. Rotate the [ENC] knob or use the [▲/▼]-keys to choose the desired value and press the [Select]-key to confirm and save.
- 5. Press the [Back]-key to return to the previous level.

Notes: When accessing any sub menu, press the [Back]-key to return to the previous level. Radioddity

Radioddity

Parameter	Possible Values
Channel Attribution	Digital/Analog/RX:D/A-TX:A/TX:D/A-RX:D
RX Frequency	In the available range of the radio
TX Frequency	In the available range of the radio
FreqStep	5kHz/6.25kHz/10kHz/12.50kHz/25kHz/50kHz/100kHz
Power	High/Low
RXOnly	On/Off
Rx TimeSlot 💷	Slot 1/Slot 2
Tx TimeSlot 💷	Slot 1/Slot 2
Rx ColorCode 💷	015
Tx ColorCode 💷	015
Alarm* 🕕	Alarm:ON/Alarm:OFF
CallAlert* 💷	ON/OFF
PCallType* 💷	PATCS/OACSU
MsgType 🕕	PATCS/OACSU
Permission 🕕	Impolite/Polite to CC/Polite To all
Rx Group 💷	OFF/ <self-defined rx-groups=""></self-defined>
Encpty 💷	Enc:OFF/ <self-defined alias="" encryption=""></self-defined>
Contact 🕕	Contact:OFF/ <self-defined contacts=""></self-defined>
Emergency* 💷 🦳	Emergency:OFF// <self-defined alarm="" digital="" lists=""></self-defined>
Bandwidth 😔	Wide/Narrow
TxSubType ᅙ	Signaling Off/CTCSS/DCS/DCS Reverse
TxSubltem 它	The signal codes of CTCSS, DCS and DCS Reverse
RxSubType ᅙ	Signaling Off/CTCSS/DCS/DCS Reverse
RxSubltem ᅙ	The signal codes of CTCSS, DCS and DCS Reverse
ScanList	OFF/ <self-defined scanlists=""></self-defined>
Save2CurChn	Save setting to currently selected channel
Save2SelChn	Save settings after selecting target channel from list

*) Not available for digital VFO mode

Radioddity

Notes: FreqStep is only available for digital VFO mode

Radioddity

dity

11 Prepare for using the CPS

The most convenient way to setup your radio is my using the CPS supplied by Radioddity.

11.1 Install device driver

Quite likely, your Radioddity DB25-D or GD-88 came with a programming cable. This programming cable adds an additional virtual COM-port to your system. It does include a small chip that converts signals to and from the USB-side into serial signals to/from the K1 style connector.

As soon as you plug in the USB side of the cable to your PC, you should hear the 'USB device connected'-sound on your PC. In case your Windows system is not able to automatically install the required driver, you will see an entry, similar to

Other devices

within Windows device manager. However normally after a few seconds, Windows has automatically loaded and installed the required driver and you should see an entry, depending on the chip used within the programming cable, similar to

USB-Serial Controller

Ports (COM & LPT)
Prolific USB-to-Serial Comm Port (COM5)

In case the driver did not install automatically, we have prepared a download link on our Radioddity DB25-D and GD-88 support page.

Internally the signals of the cable are connected as follows:

Signal name	K1
Radio RXD	3.5 mm sleeve
Radio TXD	2.5 mm ring
GND	2.5 mm sleeve

You may also use this cable for most of our analog radios that come with a combined 2.5 mm and 3.5 mm TRS K1-style jack.

Notes: Only COM-port 1...8 are currently supported by the Radioddity CPS and IAP.

dit,

Install CPS 11.2

Download the current Radioddity CPS version for your radio from our Support area. After downloading, unpack the archive into a temporary directory of your dioddity choice. Navigate to the subfolder named 'Software'.

Name		
Name		
Documentation		
Firmware		
Software		
	12	

In there, you find the CPS-installer. Execute the installer with admin rights by invoking 'Run as administrator' to start the CPS installation process.

90:			901:	
Name	Date modified	Туре	Size	
DRS CPS_V0.0.1 00.05(0	07.00.2024.10.55	<u> </u>	12.450.458	Polis.
 Run as administrator Open with Code 	ß			- 9
Troubleshoot compatibilit Pin to Start	ty			
7-Zip CRC SHA			>	

Due to the fact, that the executable isn't signed, Windows may give you a popupwarning.

	00	-100/ J
	Windows protected your PC	× 90/2
	Microsoft Defender SmartScreen prevented an unrecognized app from starting. Running this app might put your PC at risk. <u>More info</u>	Y
	b	
Naq		dia
	Don't run	. dis
	- Cy	- Cy

Click on the underlined 'More info' and continue by clicking on 'Run anyway'.

R	Windows protected you		×
40	Microsoft Defender SmartScreen prevented starting. Running this app might put your PC	an unrecognized app from I at risk.	Qio .
	App: Radioddity DB25-D CPS.exe Publisher: Unknown publisher		dit
Y			
6		Run anyway Don't run	
To-	21		and a state

An additional confirmation dialog will follow, asking 'Do you want to allow this app from an unknown publisher to make changes to your device?'. Confirm this dialog by clicking 'Yes'.



Follow the standard installation procedure by mostly clicking on 'Next'.


Radioddity Extended manual for Radioddity DB25-D & GD-88

v2.0



During installation of the CPS, a shortcut had been placed on your desktop. Double click on that shortcut to start the CPS. As the e CPS has never been used before, it will be preloaded with certain default data. Whenever you start the CPS again, the last settings will automatically be preloaded. However, we do advise to regularly make backup copies of the current settings. Those settings are often also called 'codeplug'.



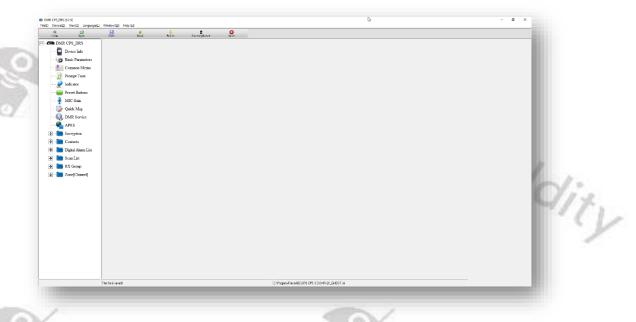

Within the bottom line of the CPS, you are presented a bunch of statistical data, such as: Number of Contacts, Number of Zones and Number of channels

Number of Contacts:10 Number of Zones:1 Number of channels:17 Space Occupation:18

Whenever changes to parameters have been made, the complete setting ('codeplug') must be written back to the radio. But we will come to that later. Radioddity

Radioddity

Special functions

Some of the computers keyboard function keys have been assigned special functionality within the CPS.

-		
Key	Function	
F1 (Turn Toolbar On/Off	~!
F2	Turn Navigation bar On/Off	Va
F3	Turn Status bar On/Off	- 41
F4	Font	
F5	Background Color	
F6	Font Color	
F7	English	
F8	Chinese	
F9	Stack-up	
F11	Tile horizontal	
F12	Tile Vertical	
Ctrl+O	Read codeplug from file (File \rightarrow Open)	
Ctrl+S	Write codeplug to file (File \rightarrow Save)	
Ctrl+X	Exit CPS (File \rightarrow Exit)	d
Ctrl+K	Radio COM-port (Device \rightarrow Comm)	YO
Ctrl+R	Transfer data from radio to CPS (Device \rightarrow Read)	
Ctrl+W	Transfer data from CPS to radio (Device \rightarrow Write)	

Safe factory settings to a file

Before you start making your first changes, transfer the data from your radio to your PC and safe them as 'factory settings' for later use. It is always advisable to have the original factory settings at hand.

Connect to the radio


Make sure, that your radio is connected with the supplied programming cable to your Windows machine. Start by clicking on 'Comm' within the toolbar.

🗊 DMF	CPS_DRS [9.2.9	9] - [DMR s	ervice]					
🜏 File(F) Device(D)	View(V)	Language(L)	Window(W)	Help (H)			
		E		8	1	•	ŧ	8
		Open	_	Save	Read	Write	FactoryReset	Exit
	24					- C	~~~	

You will then be presented a list of COM-ports identified on your Windows machine. This is required before any 'Read'- or 'Write'-Operation from/to the radio.

- C - X -

Qi

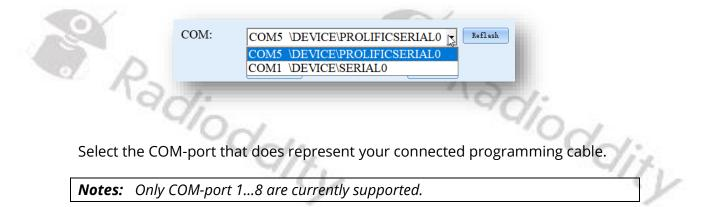

Read codeplug from DB25-D or GD-88

Ran

Radioddity

To read the current codeplug as stored on the radio, click on 'Read' within the toolbar to start the transfer of data from the Radioddity DB25-D or GD-88 to the PC.

Tar	V:				Nac	1:	
DMR CPS_DRS [9.2.9	9] - [DMR servio	ce]					1.10
File(F) Device(D)	View(V) Lar	nguage(L) Window(W)	Help (H)				1000
Comm	E) Open	F Save	r Read	2	 F actoryReset	Exit	\mathbb{O}_{i}
			12				11/
			1				

The radio will display 'Flash Read' whilst data is been transferred from the radio to the CPS.



adioddity As soon as all data has been transferred from the radio to the PC, the text 'Flash Read' will disappear.

Radioddity

v2.0

Safe codeplug to file

If this is the first time you used the READ-function, we advise to safe the data to a file of your choice, such as 'Factory setting of my radio'. To do so, click on the 'Save' button within the toolbar.

	40,	V			10,	~
DMR CPS_DRS [9	9.2.9] - [COM]					EV -
🗣 File(F) Device(D) View(V) Languag	ge(L) Window(W	/) Help (H)			11%
Comm	E) Open	📙 Save 🔓	n Ar Read	 🛱 FactoryReset	(X) Exit	10
			1			

A normal file dialog will follow that allows to specify the filename to be used.

Write codeplug to DB25-D or GD-88

Whenever you have made any changes to your current codeplug, using the CPS and want those changes to become active on the radio, you need to write the changed codeplug back to the radio. To do so, just click on the button, named 'Write' in the toolbar.



The Radioddity DB25-D or GD-88 will display 'Flash Write' whilst data is been Jioddity transferred from the CPS to the radio.



As soon as all data has been transferred from the CPS to the Radioddity DB25-D Radioddity or GD-88, the text 'Flash Write' will disappear. adioddity

Open existing codeplug

Codeplugs that have previously been saved to a file can be loaded into the CPS at any time. To do so, click on the 'Open' button within the toolbar.



A normal file dialog will follow.



The FactoryReset-functionality is slightly different to what you may be used to with other radios. Whilst it is activated on the Radioddity DB25-D or GD-88 itself, using 'MENU \rightarrow Local Set \rightarrow FactoryReset', the settings that will then be restored to the radio may be predefined using the FactoryReset-functionality within the CPS.

To do so, just open your favorite codeplug (the one you want to become the 'Factory-defaults' one) within the CPS. Then, instead of writing it to the DB25-D or GD-88 using the normal 'Write'-function, click on the 'FactoryReset' button within the toolbar in order to have the codeplug being written to the radio, similar to the normal 'Write'-function. But this time it will be saved to a special area within the radio memory for later use with the FactoryReset-function of the radio itself.

The radio will display 'Write Factory' whilst data is been transferred from the CPS adioddity to the Radioddity DB25-D or GD-88.



As soon as all data has been transferred from the CPS to the Radioddity DB25-D or GD-88, the text 'Write Factory' will disappear.

If you later on do activate the FactoryReset on the radio by using 'MENU \rightarrow Local Set \rightarrow FactoryReset', you will first be asked if you are sure to restore the factorydit settings. Jit V



Confirm by pushing the MENU-knob.

Radioddity

Radioddity

Now the settings previously stored as factory-defaults will be restored. You will see a couple of screens on your Radioddity DB25-D and Radioddity GD-88.



The complete process takes about 15 seconds, depending on the size of the factory-defaults codeplug you previously saved to the radio.

© Radioddity 2022

Radioddity

Radioddity

v2.0

12 Using the CPS to make changes to your settings

In total there are currently 16 menus, each of those will be explained in full detail within a own sub chapter of this manual. Some of those menus are needed just once whilst others are needed more often.

Our CPS (although it is the very same as for the Radioddity DB25-D) will present additional parameters as soon as a Radioddity GD-88 configuration has been read.

12.1 **Device Info**

This menu mainly refers to the general information of the device as provided by the manufacturer.

-				
2	Device Info Factory Number	1205465]	
	Serial Number	56479999]	
	Model Number	DR300UV]	di.
	Firmware Version	909E.D4.EARSAB.007		VIEV
	Version Date	May 12 2021		
	Frequency Range	F136-480	Mhz	
	The Latest Update	31.07.2021 12:43		
	Firmware ID	DRS-300UV]	
	~alodo	14.	~0/ ₀	1dia
Fact	ory Number	J.		y

Factory Number

With this number, Radioddity can track the selling country or area of the product.

Notes: Data will only be shown in the CPS after the codeplug has been read from the Radioddity DB25-D or GD-88 to the CPS.

Serial Number

A sequence of numbers and letters to identify the individual device. Every device has a unique serial number, that cannot be amended or edited.

Notes: Data will only be shown in the CPS after the codeplug has been read from the Radioddity DB25-D or GD-88 to the CPS.

Model Number

A number to indicate the radio type that cannot be amended or edited.

Notes: You may find other radios looking similar to the Radioddity DB25-D and even sharing the very same 'Model Number'. Be careful as to not use any firmware or CPS not downloaded from our website with your Radioddity DB25-D as this may void any warranty. Data will only be shown in the CPS after the codeplug has been read from the Radioddity DB25-D or GD-88 to the CPS.

Firmware Version

It refers to the program-controlled software version. It indicates the non-editable version of firmware.

Notes: Data will only be shown in the CPS after the codeplug has been read from the Radioddity DB25-D or GD-88 to the CPS.

Version Data

It is to indicate the date of firmware version from the manufacturer.

Frequency Range

Refers to the device working frequency range.

The Latest Update

To display the last programmed time and date.

Firmware ID

A unique number to indicate the radio's firmware.

Radioddity

Radioddity

Radioddity

dity

12.2 **Basic Parameters**

Before starting your first QSO with your new Radioddity DB25-D or GD-88, do not forget to setup your Radio ID (DMR ID) and your Radio Name (Call Sign). You find those parameters at the very top of the 'Basic Parameters'.

	-10	~1		-10-1
1	-Basic Parameter			
	Radio Name	DEPEND	Radio ID.	□ Rolling code
	Language	English 🝷	Backlight ON/OFF On •	417.
	TOT	60S -	Keylock Off -	
	Busy Channel Lockout	Off •	Roaming Off •	
	VOX	Off •	Roaming Mode Manual -	
	VOX Sensitivity	12 -	Rssi Set -90dBm -	
	Power-saving	On -	Connect Check Timer 10S •	
	Power Saving Ratio	1:1 -	Repeater Check Timer 108 -	
	Save power startup time	11S -	Connect Timer 1	
	Scan Mode	то •	Record Set Off -	
	End-tone types	55Hz -		
l	Squelch(A) Level	4 🗸		
	Squelch(B) Level	4 •		
	19/1-			3 / / /
	-10	~1		"Ocl
	-	UN	a	-Uni.
		- (J)	1-12	-012
		- 14	()_	
	Name		1	

Radio Name

This field represents the name of your radio. And the name can be found on the menu settings of your radio. It can be composed by numbers, symbols, letters, Chinese characters, space, and special characters etc., with a maximum of 16 characters. HAM operators would use their call sign.

Language

Users can select a preset language from the device setting as menu display language for the Radioddity DB25-D or GD-88. TITV

Options: English Chinese Default: English

TOT

TOT as abbreviation for Time-Out-Timer defines the longest time allowed for each Radioddity transmission.

Options: Maximum: 500s Minimum: 20s Increment: 10s Default: 300s

Busy Channel Lockout

In literature, this parameter is often abbreviated as BCL. Users are allowed to turn the Busy Channel Lockout on or off.

- Turn on the busy channel lockout. The radio will be forbidden to Options: On transmit when receiving signals to protect the call quality of other users on this frequency.
 - Off Turn off the busy channel lockout. The radio is allowed to transmit while receiving signals.
- **Default:** Off

VOX

Users are allowed to turn VOX on or off. With VOX turned on, once the microphone detects audio, the radio will automatically transmit.

Options: On Users don't have to press [PTT] to transmit. Off Users need to press [PTT] to transmit.

Default:

VOX Sensitivity

Off

This is used to adjust the VOX sensitivity level. There are 12 levels, where level 1 is the lowest and level 12 is the highest. It is recommended to choose a suitable level to avoid triggering of VOX accidentally or having difficulty to trigger VOX at all. Some elements, such as component type, using surroundings, speaking volume of the user and so on, should be considered so as to choose the most suitable Sadioddity level to achieve the best performance.

Options: Maximum: Minimum: Stepping:

12

Pitv

Default:

Power-saving

As the radio is operated by a battery with limited capacity, it is advisable to make best use of its capacity. Therefore, the Radioddity GD-88 has 3 additional parameters: 'Power-saving', 'Power Saving Ratio' and 'Save power startup time'. In order to activate the power-saving function, also called 'Sleep Mode', it needs to be turned to 'On'

Options: On Off Default: On

Power-saving mode (Sleep Mode) is activated Power-saving mode (Sleep Mode) is deactivated

dity

loddity

Power Saving Ratio

Users can set the duty cycle (waketime : sleep time) of the power-saving mode. The smaller the ratio, the lower the power consumption. A higher ratio may result in a receiving delay or missed calls. So, it is suggested to set the duty cycle based on its actual use. The set duty cycle is only effective when sleep mode is turned On. ity

Default: 1:1

Save power startup time

Radioddity

When the radio is on standby and without any operations, it can be set a delay time for entering sleep mode automatically.

Default: 10 s

Scanmode

Users can enable this function according to the working environment and actual needs to set scan mode, so as to improve scan efficiency.

Scan mode options	: CO:	Carrier Off scan: Once radio receives a scanned signal
		over the air, it will stay on that channel until signal
		disappears, and then continue to scanning.
	TO:	Time-Out scan: Once the radio receives a scanned
		signal over the air, it will stay on that channel for a
Section		preset time (5/10/15/20s). Once time is over, it will
O D		continue to scan.
To-4	SE:	Seek scan: Once the radio receives a scanned signal
YOI.		over the air, it will stay on that channel and stop
-10	$) \sim$	scanning until you re-activate to scanning.
default:	СО	di. Ydi.
	1000	4/7
Notes: Whilst VFO A	is sele	cted, VFO B will no longer be monitored during scanning.

is selected, VFO B will no longer be monitored during scanning. Whilst VFO B is selected, VFO A will no longer be monitored during scanning. The non-selected VFO is used for the scanning process.

End-tone types

Users can enable this function according to the working environment and actual needs to set the end-tone type after [PTT] has been released, so as to facilitate the dioddity receiver to turn off its speaker in advance.

End-tone options: 55HZ 120° 180° 240° Default: 55HZ

Squelch (A) Level \odot

When receiving a carrier signal and its strength reaches the preset squelch level, the audio circuit will be turned on. This setting is for the upper (A) channel).

Selection range:	Maximum value:	9	NON.
91	Minimum value:	1	9/0
- (Increment:	1	·00
	Squelch circuit off	0	(audio circuit normally open)
Default.		Δ	

jejaun.

Notes: The higher the squelch level value is set, the stronger the carrier signal needs to be.

Squelch (B) Level \odot

When receiving a carrier signal and its strength reaches the preset squelch level, the audio circuit will be turned on. This setting is for the lower (B) channel).

Selection range:	Maximum value:	9	~10~1
	Minimum value:	1	-40
	Increment:	1	~
	Squelch circuit off	0	(audio circuit normally open)
Default:		4	

to be.	alue is set, the stronger the carrier signal needs
Radi	Radi
-910~	9000
Qit.	Qir
9	

Radio ID 🕕

You can program a unique ID to identify your radio. The other radios can use that ID to call you. For example, to initiate a private call or send a text message.

ID editable range:	Max:	16776415
410	Minimum:	1
~	Increment:	1
Default:	4/7	<empty></empty>

Notes: If the radio is used for DMR amateur radio, this is the place to setup your DMR ID. Never ever use a DMR ID that is not assigned to you.

Rolling Code

This feature is for companies using larger quantities of the Radioddity DB25-D or GD-88. If the checkbox is ticked the specified 'Radio ID.' will get increased by one on each 'write' of the codeplug to the next radio.

Backlight ON/OFF

Users can enable this feature based on working environment and their actual needs. It will help to save battery power, and prolong battery life.

Options: Off Screen Background Light is on the darkest condition. On Screen lights on. Screen Background will turn off automatically if there is no Auto operation within 1 minute.

Keylock

	operati	on within 1 minute.
Default:	On	Radi
Keylock	~10d	de la contra de la
User can l	ock or unlock the	e keypads according to their actual needs.
Options :	Off	Turn off keylock feature.
01	Auto	Keypad will be locked automatically if there is no operation within 1 minute. Long press the Menu-key (normally the channel knob) to unlock the keyboard.
R	Manual	Long press the Menu-key (normally the channel knob) to lock or unlock the keyboard.
	Auto&Manual	Keypad will be locked automatically if there is no operation within 1 minute. Long press the Menu-key (normally the channel knob) to lock or unlock the keyboard.
Default:	Off	Y Y

qioddii

Roaming

Users can enable this function according to the working environment and their actual needs to specify if the radio should directly start roaming after booting up.

Options: Off Do not start roaming after booting up. On Start roaming after booting up.

Default: Off

Notes: The function may be assigned to one of the function keys. For more details, please check chapter 0 Preset Keys on page 121.

Precautions for roaming

- 1. Before any scan mode is selected, please make sure the **Scan List** has been preset in advance, otherwise it is not possible to activate scanning or roaming.
- 2. When roaming is activated, the radio will scan all repeater channels (TX/RX inter-frequency) only. It will not scan simplex channels with same TX/RX frequency.
- 3. When roaming is activated, if there is no TX/RX inter-frequency channel (repeater channels) in the scan list, after scanning the current selected scan list, it will exit the roaming function.
- 4. In roaming searching, if the [PTT]-key is pressed, the radio will stop roaming and return back to preset Scan reply/transmit Mode to initiate a call. It will continue to roam after [PTT] is released.
- 5. When roaming is on, the radio defaults to scan in the main VFO (VFO A). When the main VFO (VFO A) is in roaming, channel selection is prohibited. However, menu accessing and setting of main VFO (VFO A) still can be made by selecting the proper VFO, or by initiating a call on the active VFO.
- 6. When the main VFO (VFO A) is in roaming, channel and VFO operation and menu accessing & setting of VFO B still can be made by selecting the proper VFO. And VFO B can remain in standby or normal receiving mode, and can initiate a call on the active VFO.

Radioddity Radioddity

Roaming Mode

Users can enable this function according to the working environment and their actual needs.

options: Auto

Manual

Radiod

Strong RSSI Priority

Once searching an available repeater from the scan list, the radio will lock to the current available repeater and pause auto roaming. Then, it will connect with the available repeater according to the preset Connect Check Timer. If the connection fails after the preset Connect Time is used up, it will restart the strong signal Auto roaming search.

Users can manually roam to the next available repeater. Once it is on, all repeater channels in the scan list will be waken up to search the nearest available repeaters until an available one has been found. Every time the nearest available repeater is found, a Connect Re-check Timer (Repeater Check Timer) will be enabled. Users can also lock the repeater by short pressing the [OK/Select]-key. The next available repeater is not necessarily the one with the largest RSSI value in the channels of the scan list.

Once a repeater in the channels of the scan list with RSSI more than preset RSSI threshold value is searched by RSSI mode, the radio will lock to the current channel and pause the strong signal auto roaming. Then it will connect with the current repeater according to the preset Connect Check Timer. If the connection fails after the preset dioddity Connect Time is used up, it will restart the strong dity signal Auto roaming search.

Default:

RSSI Set

When the radio is set for 'Auto' roaming scan and scanned the largest RSSI value of the members of the [Scan/Roam list], it will lock to the current member channel with the largest RSSI value and stop the strong signal automatic roaming. Then the radio will trigger the 'Repeater Check Timer' for handshake confirmation with the current channel repeater based on the preset connect times. If a handshake is not confirmed with the repeater within the preset connect times, the radio will restart the strong signal automatic roaming search for a repeater with the largest RSSI in the member list.

RSSI values:

Recommendation:

Maximum: Minimum:

- 90 dBm - 125 dBm - 100 dBm



Notes: The received signal strength (RSSI threshold value) is settable. If the RSSI mode is enabled and the searched repeater RSSI value is more than the preset threshold, the repeater's transmitting signal coverage will be automatically recognized as good, and then the radio will suspend RSSI roaming. The stopped repeater is not necessarily the one with the largest RSSI value

in the channels of the scan list.

Connect Check Timer

When the nearest available repeater is searched by Manual Roaming, the radio will immediately pause at the repeater channel based on your preset connect check timer. If the available repeater is not confirmed by pressing the [OK]-key within the preset time, once the timer reaches the preset time, the radio will stop roaming; or restart roaming to find the next available repeater. adioddity

Recommendation:	\sim	60S
YOF.	Minimum:	0s
Timer values:	Maximum:	255s

Connect Repeater Check Timer

When the available repeaters are searched by Auto roaming or RSSI roaming and the radio confirmed to lock at the currently available repeater then the roaming is paused. Now, the radio will transmit signals at regular intervals based on the preset Connect ReCheck Timer to connect with the current repeater. If it fails to connect with the currently available repeater in preset Connect Time of transmission (defined by Connect Time), the radio will restart Auto Roaming or adioddity RSSI Roaming to search any nearest available repeater.

Timer values:

Recommendation:

0s 60S

255s

Maximum:

Minimum:

Connect Time

No matter which roaming mode is selected, in searching, each repeater channel in the scan list will try to connect with nearby available repeaters based on the preset Connect Time. If the pause channel fails to find the available repeaters ienc. Adioddity within the preset Connect Time, it will continue to scan the next repeater channel from the list till it finds an available one.

Connect Time:

10 Maximum: Minimum: 1 3 **Recommendation:**

Record Set

Users can enable this function according to the working environment and their actual needs to set recording functions.

Options: Off Close the recording.

Record the received voice whenever radio is receiving

Record the voice call whenever radio is transmitting


TX/RX Record the transmitting and receiving voice call

Default: OFF

12.3 Common Menus

RX TX

Users can disable or enable some menu options to show on the radio screen, to prohibit or allow users to check and operate the menu items from the radio screen menu. Users can tick '' the various boxes next to the option, to allow users to check or program the corresponding menu item.

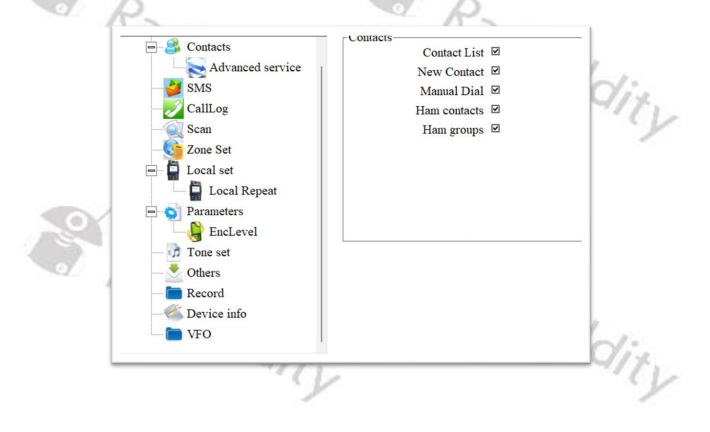

Radioddity Radioddity

TV

12.4 **Prompt Tone**

÷....

v

You can turn on or off all sounds and prompt tones thru this parameter, or just set partial prompt tones of specific radio parameters.

.9	α_i	.90	1
	Prompt Tone		0-1
	Profiles	Standard -	YON.
	SMS prompt	3 •	-41%.
	Private Call Tone	4 🗸	10
	Group Call Tone	5 🗸	
	Roamming restart prompt	3 •	
	Repeater selected prompt	3 •	
-	Keytone	On •	
SOY 1	Volume	10 •	
	Low battery alert tone	On •	
Q D	Volume	10 🔹	
10	Boot ringtone	On 🔹	1.
-	Call hang up	On •	10
			Od.
	MOI1		40is
	-CL		
	1		1

Profiles

Select a predefined audio profile.

Mode Options: Standard All prompt tones of radio parameters are on All prompt tones of radio parameters are off Silent Standard Default: dioda

SMS prompt ①

Once receiving a message, the message Tone will be heard if this option is selected.

Mode Options: off, 1~5 Default: 3

Private Call Tone 🛈

Once receiving a private call, the Private Call Tone will be heard if this option is in ddity selected.

Mode Options: off, 1~5 Default:

Vity

Group Call Tone 🕕

Once receiving a group call, the Group Call Tone will be heard if this option is selected. adioddity

Mode Options: off, 1~5 **Default:** 5

Roaming restart prompt

Users can select the 'Roaming restart prompt' option to play a prompt whenever the radio restarts roaming.

Mode Options: off, 1~5 Default: 3

Repeater lock prompt

Users can use the 'Repeater lock prompt' option to play this prompt when the radio scanned for a repeater and locked to it.

Mode Options: off, 1~5 Default: 3

Keytone

You can turn on or off 'Keytone' thru this parameter.

Options: On Turn on Keytone Turn off Keytone Off Default: On

Keytone volume

Radioddity You can increase or decrease the 'Keytone volume' thru this parameter.

Volume Range:	Maximum:	13
	Minimum:	1
	Increment:	1
Default:		10
1 1		
Ro	1	
190	11-	
	'O~	
	40	1:5
		UTL
		S

Low Battery Alert tone

After setting it to 'On', a low battery alert will be heard when the battery voltage is less than a factory preset battery power level, which reminds you to charge or dioddity change the battery pack.

Options: On Turn on Low Battery Alert Off Turn off Low Battery Alert On

Default:

Low Battery Alert volume

You can choose the volume of the 'Low Battery Alert' with this parameter.

Volume Rang	e: Maximum:	13
	Minimum:	1
P	Increment:	1
Default:	1.	10

Boot ringtone

Radioddit User could turn on or off the tone for radio power ON through this parameter.

Default:	On	
	Off	Turn off the power on prompt tone
Options :	On	Turn on the power on prompt tone

Call hang up 🕕

This parameter is only been evaluated in digital mode. Depending on the settings of 'DMR Service' -> 'Group call hang time' and 'Private call hang time', a sound will be played (if this parameter is set to on), whenever the corresponding time period has exceeded.

Default:	On	
	Off	Turn off Call hang up
Options :	On	Turn on Call hang up

Radioddity

2	P. P.	
	Indicator Set	
	All Indicators On -	dia
	TX Indicator On -	19
	RX Indicator On -	
Y	Scanning Indicator On -	
2.,	Low battery Indicator On	

All Indicators

You can activate or disable all working status indicators of the radio thru this parameter.

Turn on all working status indicators of the radio Options: On Turn off all working status indicators of the radio Off

Default: On

TX Indicator

dioda You can activate or disable the working status of the LED indicator for transmitting thru this parameter.

LED indicator is on when the radio is transmitting **Options**: On

Off LED indicator is off when the radio is transmitting

Radioddity Default: On

dity

RX Indicator

You can activate or disable the working status of the LED indicator for receiving a signal thru this parameter.

LED indicator is on when the radio is receiving Options: On Off LED indicator is off when the radio is receiving

Default: On

Scanning Indicator

You can activate or disable the working status of the LED indicator for scanning thru this parameter.

LED indicator is on and flashing when the radio is scanning Options: On LED indicator is off when the radio is scanning Off

Default:

Low battery Indicator

On

You can activate or disable the working status of the LED indicator for battery voltage being less than the preset battery power level with this parameter.

- Options: On LED indicator is on and flashing when the battery voltage is less than preset battery power level
 - Off LED indicator is off when the battery voltage is less than preset battery power level Radioddity

Default: On adioddity

Radioddity

12.6 **Preset Keys**

Users can define the keys within this menu. Depending on the radio either P1...P4 (Radioddity GD-88) or P1...P7 (Radioddity DB25-D) are available to be assigned with special functions.

-Preset Buttons	89	-01-	
Treset Datons	Long Press Duration	2.08	• 1/2.

Long Press Function	s	Short Press Functions
DTMF ON/OFF	•	Monitor •
GPS	•	High/Low Power option -
Contacts	•	Keylock •
Mandown ON/OFF	•	Backlight Auto/ON/OFF -
ion ditte		"Oddin
	DTMF ON/OFF GPS Contacts	GPS Contacts Mandown ON/OFF

Long Press Duration

You can trigger different functions depending on Long Press or Short Press of a Pkey. The minimum duration that identifies a long press is defined by this parameter.

Options: Longest: 5.0s Shortest: 0.5s Increment: 0.5s Default: 2.0s

adio Possible settings are as listed in the following paragraph.

Notes: Short Press: press and release quickly Long Press: press and hold for the 'Long Press Duration' time length

Available Function for the Preset Keys

Туре	Features	Description	
2	Undefined	Preset Key is not assigned to any special function	
1	High /Low	Allows users to switch between high power and low power	
- k	Power		
	Backlight	Turn on and off the radio screen backlight	
	Auto/ON/OFF	90	
	Keylock To lock or unlock the radio keypads		
	VOX ON/OFF To turn VOX feature of the radio On and Off		
	Zone Switch	To change from selected Zone to new Zone	

Туре	Features	Description
2.4	Scan On/Off	Enable or disable radio scanning feature
1	Scan Mode	Select the desired scan mode ´ (switch between SE, TO and
1	Scarrivioue	CO mode)
	Repeater /	Switch botwoon Donostor and Talk Around Modo
	Talk Around	Switch between Repeater and Talk Around Mode
	Emergency	Make an emergency alarm call or stop sending an
	Alarm	emergency call.
Ŭ	ON/OFF	Notes: Not used within HAM radio networks
	Encryption	Turn radio encryption On or Off.
	On/Off	Notes: Not allowed within HAM radio networks
		Access to contact list to make a call or activate any other
	Contacts	additional call feature
	SMS	Access to Message items
	51415	
	Radio Revive	Remotely revive a disabled (killed) radio. (Being available
-	2	only if enabled on target radio)
	Radio	Detect and confirm if the radio is within reach without
	Detection	sending any indication or making visual inspection. (Being
	Detection	available only if enabled on target radio)
_	-(Disable a target radio remotely, which can protect stolen
	Radio Kill	or missed radios being used by others. (Being available
-		only if enabled on target radio)
		Remotely activate Mic and Transmitter of a target radio,
	Remote	and create a call silently without sending any indication or
	Monitor	visual inspection message to the target radio, etc. (Being
		available only if enabled on target radio)
1		Turn On/Off the radio RX squelch circuit.
\sim	Monitor	Receive weak analog signals
	R	Permanent Monitor is same as Monitor feature, which is
1		allowing you to monitor the channel to make sure it is not
\bigcirc	Permanent	occupied before transmitting; their difference is once
\odot	Monitor	Permanent Monitor is on, the radio will always be in this
	.01	Monitor mode, till you exit it.
\bigcirc	1750Hz	To transmit a 1750 Hz signal. (analog pilot tone)
	DTMF On/Off	To turn DTMF on or off
~	Roam On/Off	To turn Roaming scan On or Off
	GPS	To turn GPS On or Off
	Record	
	On/Off	To turn recording On or Off
	Mandown L	
	On/Off	To turn the Mandown function On or Off
- 1		
	Relay	To turn the Repeater-mode On or Off
	On/Off	Y/O
	Relay	Yala Gal
	monitor 🗎	To turn Repeater monitoring On or Off
	On/Off	

Extended manual for Radioddity DB25-D & GD-88 Radioddity

Туре	Features	Description
	Promiscuous	Turn Promiscuous mode On or Off
k	Menu 🛄	Press assigned Preset Key to access the menu without pushing the channel knob
3	Up 亡	Emulating the microphones Up-Key
	Down 🛄	Emulating the microphones Down-Key
	Back	Emulating the back key of the radio base on one of the microphones programmable keys (P4P7)
\bigcirc	DQT/QT	Switch between QT, DQT and DQI and no signaling QT is the equivalent to CTCSS DQT is the equivalent to DCS DQI is the equivalent to DCS-inverted
Y	A/B	Emulating the B/E key of the radio base on one of the microphones programmable keys (P4P7))
h	Volume 亡	Emulating the Volume key of the radio base on one of the microphones programmable keys (P4P7))
$\overline{\bigcirc}$	VFO	Turn VFO mode On or Off

12.7 **Mic Gain**

You can turn the gain for the Microphone-signal on or off and set the MIC gain level of the Radioddity DB25-D or GD-88.

MIC Gain 1 refers to a microphone attached to the K1-socket of the radio and requires also MIC Gain 2 to be in its 'On'-position. MIC Gain 2 refers to the Speaker-Microphone that comes with the DB25-D and is connected via the front RJ45-Socket or the bult-in microphone of the GD-88.

	<u> </u>	R	
∟MIC Gain			do:
MIC Gain 1 ON/OFF	On	-	MON
MIC Gain 1	8dB	•	"qdi
MIC Gain 2 ON/OFF	On	•	4102
MIC Gain 2	8dB	•	· · · · ·

MIC Gain 1 ON/OFF

MIC Gain 1 is only active, if MIC Gain 1 and MIC Gain 2 are both turned on. Jioddity

Default:		4 Oix
	Off	Turn off MIC Gain 1 feature.
Options :	On	Turn on MIC Gain 1 feature.

dioddit

MIC Gain 1

The transmitted radio microphone audio level will be amplified in accordance with the setup gain ratio of 'MIC Gain 2' plus those of 'Mic Gain 1'.

Option:	Maximum:	20 dB
•	Minimum:	0 dB
	Stepping:	4 dB
Default:		8 dB

Notes: This option is effective ONLY when the status of the MIC Gain 1 and MIC Gain 2 are both 'ON'.

MIC Gain 2 ON/OFF

You can turn on or off the MIC Gain 2 feature of the microphone attached to the RJ45-socket at the front of the Radioddity DB25-D or the built-in microphone of the GD-88 and with the parameter turned 'On', the transmitted radio microphone audio level will be amplified in accordance with the setup gain ratio of ' MIC Gain 2'. It is advisable to align the gain for the same total volume level heard by the receiving station as other stations. Within the DMR Brandmeister network, the parrot functionality is excellent for checking the own volume level.

Default:	On	
	Off	Turn off MIC Gain 2 feature.
Options :	On	Turn on MIC Gain 2 feature.

MIC Gain 2

The transmitted audio of the Speaker-Microphone that's connected to the front RJ45-socket will be amplified according to value defined by 'MIC Gain 2'. dity

Default:		8 dB
	Stepping:	1 dB
	Minimum:	0 dB
Option:	Maximum:	+43 dB

Radioddity

Notes: This option is effective ONLY when 'MIC Gain 2 ON/OFF' is set to 'ON'.

12.8 Quick Msg 🕕

6 71-

The users can pre-program up to 100 messages, each message content up to 40 characters. Valid characters include alphanumeric characters, spaces, and special characters. Users can access the function through the Message menu function.

Serial Number	Quick Msg(Max=40Bytes)	lim 1 a
1	Hello	
2		
3		- C L
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		1
18		me - 1 -
19		17.2

12.9 DMR Service ①

Users are allowed to turn on or off the advanced services through DMR Services, if required.

	DMR service				
	Remote monitor duration	108 -	GPS	On •	
	Remote Monitor Decode	Off •	GPS Interval		
	Remote Kill Decode	Off •	GPS Channel	Current Channel Se -	1
	Radio Detection Decode	Off •	Mandown		ml.
	Radio Revive Decode	On •	Mandown Interval	255min -	11%
	Call Alert	On •	Mandown Angle	90°	101
	Group call hang time	7000ms •	Mandown Alarm Duration		1
	Private call hang time	7000ms •	Inactive time		
	Import Delay	200ms •	Pre-alarm Time		
	DTMF Duration (On-time)	60ms •	Response transmission interrupt		
	DTMF Interval (Off time)	60ms •	Scrambling frequency		
(0)	DTMF Volume (Local)				
ARC R	DTMF ON/OFF	1234	Keypad Password		
			J		
- C	The second		No most		2
	1 and		10	Pal.	
	401-			101_	
	~/0	\sim		-00	1
		UN.		- 0	Nº
		41%.			414
			1		10
		1			/

Remote monitor duration 🕕

By programming, users can program how long the radio will keep the microphone and transmitter on after it receives the remote monitor command from another radio. No visual or audio indication will be shown to your radio. Oddity

Default:		10s
	Stepping:	10s
	Minimum:	10s
Options :	Maximum:	120s

Notes: The functionality may also be accomplished by pressing the preset [Scan *On/Off]-key to turn the scan On or Off.*

Remote Monitor Decode 🕕

Radioddity

Radioddity

It allows the radio to receive and deal with the 'Remote Monitor' command. The radio will activate the microphone and transmitter and send the audio activities of the surroundings for the specific time programmed after receiving the 'Remote Monitor' command. No indication will be shown.

Allow other users to activate and start remote monitor function Options: On Do not allow users to access to the remote monitor function Off Default: Off

Notes: The function may be assigned to one of the function keys. For more details, please check chapter 0

Radioddity

Preset Keys on page 121.

Remote Kill Decode

It allows the radio to receive and deal with the 'Remote Kill' command. The radio will be forbidden to be used, which would be useful to protect a stolen or missing radio from being used by others.

Options: On Allow and accept to be killed by other radios

Off Forbid to be killed by others

Padioddity

Radioddity

Radioddity

Default: Off

Notes: The function may be assigned to one of the function keys. For more details, please check chapter 0

Radioddity

Radioddity



Radio Detection 🕕

Users or base station operators can send a 'Radio Detection' command to a target radio to see whether it is active in the system, and without showing any indications.

Options:OnAllow and accept to be detected by other radiosOffForbid other radios to detect this radio**Default:Off**

Radioddit

Radioddity

Radioddity

Notes: The function may be assigned to one of the function keys. For more details, please check chapter 0

Radioddity

Radioddity

Preset Keys on page 121.

Radio Revive

It allows the radio to receive and deal with the 'Radio Revive' command, and activate itself to be used again.

D . (~ ~ ~	
	Off	Forbid other radios to revive this radio
Options :	On	Allow and accept to be revived by other radios

Inl.

Radioddity

Radioddity

Radioddity

Default: Off

Notes: The function may be assigned to one of the function keys. For more details, please check chapter 0

Radioddity

Radioddity

Preset Keys on page 121.

Call Alert 🕕

It allows the radio to receive and deal with the 'Call Alert' command, and will reply to it at its convenience. Jity

Allow the radio to receive the call alert command **Options**: On Forbid the radio to receive call alert command Off Default: Off

Group Call Hang Time 🕕

The duration that the radio will reply back to a received call or continues the transmitted Talk within a Group Call of the received or transmitted digital Group ID. This allows to answer on a call, although the active TalkGroup is not selected within the current channel, but is a member of the RX group that is associated with the current channel. After the specified time has expired, the channel will transmit to the designated contacts (digital group) as programmed for the current channel.

Default:		3000 ms
	Increment:	500 ms
	Minimum:	0 ms
Options :	Maximum:	7000 ms

Private Call Hang Time 🕕

The free time for Talk Around Private Call after releasing [PTT]-key, which can prevent more calling when you press [PTT] to transmit every time. In this period, as the channel is free, other radios can still transmit. After the specified time has expired, the channel will transmit to the designated contact as programmed for the current channel.

Default:		3000 ms	
	Increment:	500 ms	
	Minimum:	0 ms	
Options :	Maximum:	7000 ms	l

Import Delay 🕕

By setting this parameter, user can set the duration time from the [PTT] pressed Jioddity to the first DTMF code sent, when radio call is issued.

Default:		200 ms	
	Increment:	10 ms	ľ
	Minimum:	50 ms	
Options :	Maximum:	500 ms	

DTMF Duration (On-time) ①

To change the duration of each DTMF code send by setting this parameter. adioddity

Default:	4	60 ms
	Recommendation:	100 ms
	Increment:	10 ms
1	Minimum:	50 ms
Options :	Maximum:	500 ms

DTMF Interval (Off-time)

To change the time interval between the end of each DTMF code and the next DTMF code by setting this parameter.

Default:	·VN-	60 ms
	Recommendation:	100 ms
10	Increment:	10 ms
$r \rho$	Minimum:	50 ms
Options :	Maximum:	500 ms

DTMF Volume

To adjust the volume of local playback sound of the DTMF code issued by the radio, by setting this parameter.

Options :	Maximum:	12
	Minimum:	off
	Increment:	1
T	Recommendation:	8
Default:	40;	7

DTMF code ①

Radioddi By setting this parameter, users can make the radio send out a set of DTMF codes in advance when [PTT] is pressed, so as to achieve the effect of a phone ring.

DTMF code supports 11-character (0-9, ABCD*#) composition.

'ddit

De	fault	: 1	234
_			

Notes: Enabling and disabling of that function may be assigned to one of the function keys. For more details, please check chapter 0

ddity

Oddity

Radioddity

Radioddity

Preset Keys on page 121.

GPS

By setting this parameter, users can turn on the GPS module.

Options:OffClose the GPSOnOpen the GPSDefault:Off

Radioddity

Radioddity

Radioddity

Notes: The function may be assigned to one of the function keys. For more details, please check chapter 0

Preset Keys on page 121.

GPS interval

Once the GPS feature is activated, the Radioddity DB25-D or GD-88 will send the dity GPS data whenever the 'GPS interval' has elapsed.

Options: Max: 250 min (No interval) Min: Off Default: 1 min

GPS channel

Once GPS activated, the Radioddity DB25-D or GD-88 will send the GPS data to others from the appointed channel. It can be any digital channel including the adioddity channel selected by channel selector.

Default: off

Mandown b

By setting this parameter, the Mandown alarm can be turned On or Off.

Default: On

Mandown Interval

By setting this parameter, the user can make the Radioddity GD-88 still send out the alarm at a certain interval before it exits the mandown state.

Recommended: 5 min

Mandown Angle

oddity By setting this parameter, when the Angle between the falling and the horizontal surface of the Radioddity GD-88 is less than this parameter, an alarm will be given.

Recommended: 60°

Notes: When the radio is perpendicular to the ground, it is 90°.

Mandown Alarm Duration

By setting this parameter, user can specify the length of time for the Radioddity GD-88 to send a mandown alarm in the analog channel.

Recommended: 10 s **Notes:** The alarm duration of the digital channel is configured by the parameters of the digital alarm list corresponding to the channel.

Inactive Time

This option and its value are not applicable for the Radioddity DB25-D or the GD-88. Please ignore it.

Pre-alarm Time

This option and its value are not applicable for the Radioddity DB25-D or the GD-88. Please ignore it.

Response transmission interrupt

This option and its value are not applicable for the Radioddity DB25-D or the GD-88. Please ignore it.

Scrambling frequency

This option and its value are not applicable for the Radioddity DB25-D or the GD-88. Please ignore it.

Keylock Password On/Off

This option and its value are not applicable for the Radioddity DB25-D or the GD-88. Please ignore it.

Keypad Password

This option and its value are not applicable for the Radioddity DB25-D or the Radioddity GD-88. Please ignore it.

12.10 APRS


The APRS (Automatic Packet Reporting System) protocol has first been used back in the early 80s and got lot of extensions since then. Within amateur radio and in combination with a GPS receiver it is mainly used to publish the current geographic position to a repeater or an iGate whereas those do forward the information to other sites, such as <u>https://aprs.fi</u>. More details on APRS to be found at <u>http://www.aprs.org/</u>.

The Radioddity DB25-D and GD-88 are both capable of analog and digital transmission of GPS position data (called 'APRS beacon') using the APRS protocol. Those parameters in common are specified within the topmost block of the APRS parameters.

adi

2	Manual TX Intervals[s] 30 • APRS Auto TX Intervals[s] 30 • Beacon GPS Location •	Latitude (degrees)	2	
0	Radi	9	Radi	
An		1.	910	dd:

For Analog APRS data, check which frequency and further parameters are to be used for your region. Within the CPS, those settings required for analog APRS are specified within the following block:

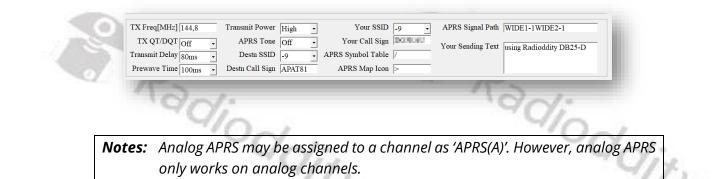

Digital APRS

For Digital APRS a DMR network is required and the APRS-message is sent to a certain TalkGroup either as Private or as Group call, depending on the DMR network and country/region. A total of 8 possible Digital APRS settings may be defined. Within the channel definition one of those 8 digital APRS settings or the analog APRS setting may be selected for APRS.

No	Report Channel	APRS TG	Report Slot	Call Type	PTT
1	Current channel	0	Current Slot	Private call	Off -
2	Current channel	0	Current Slot	Private call	Off
3	Current channel	0	Current Slot	Private call	Off
4	Current channel	0	Current Slot	Private call	Off

Manual TX Interval[s] \odot

When using analog APRS, an APRS packet (beacon) will be send out on the very first use of the [PTT]-key. This also triggers the 'Manual TX Interval timer'. As long as the timer has not reached its specified value, new APRS packets will not be send when [PTT] gets depressed. This APRS packet transmission is independent of the specified 'APRS Auto TX Intervals'. Jity

Interval period:

Maximum: 255 Minimum: 0 Increment:

Recommended:

1 30

APRS Auto TX Intervals[s]

It makes little sense to transmit the current position too often. This parameter defines the interval at which the current position is to be transmitted via APRS protocol.

Interval period:	Maximum:	7650
	Minimum:	0
	Increment:	30
Recommended:		120

Beacon

If the Radioddity DB25-D is mainly used as a radio station at home, we advise to not use GPS but set the GPS-data within the APRS protocol to the fixed location as specified with the parameters 'Latitude' and 'Longitude'. dity

December	GPS Location
Recommended:	GPS Location

Notes:	If set to 'Fixed location', the color of the icon indicating the GPS-status will
21	remain 'red'. If set to 'GPS Location', the icon indicating the GPS-status will
94	initially be colored 'red'. As soon as the GPS receiver has been able to receive
0	at least 3 satellites, the color of the icon will change to 'green'.

Latitude (degrees)

Latitude and Longitude define an exact position on earth. The parameters 'Latitude' and 'Longitude' are used when 'Fixed Location' had been selected for the APRS functionality. To get the required numbers for latitude and longitude you may want to use a service such as <u>https://www.latlong.net/</u> which allows even to enter a full address and not just the city.

Default: 0

Notes: This parameter is mandatory if using APRS with a 'Fixed Location'.

Longitude (degrees)

Longitude and Latitude define an exact position on earth. The parameters 'Latitude' and 'Longitude' are used whenever 'Fixed Location' has been selected for the APRS functionality.

Default: 0

Notes: This parameter is mandatory if using APRS with a 'Fixed Location'.

TX Freq [MHz] \odot

The frequency specified with this parameter for analog APRS is totally independent of the selected channels frequency. The APRS beacon is transmitted using 1200 Baud AFSK. The frequency data within the following table is subject to change without prior notice.

	Region	Frequency	
	Argentina, Uruguay	144.9300 MHz	
	Australia	145.1750 MHz	
	Austria (test)	433.8000 MHz	
O D	Brazil	145.5700 MHz	
Dav.	Chile	144.3900 MHz	2-1-
-91-	China	144.6400 MHz	910
-0	Colombia	144.3900 MHz	"Odata
	Europe	144.8000 MHz	qioddity
	Germany	432.5000 MHz	1 CV
	Indonesia	144.3900 MHz	/
	Japan	144.6400 MHz	
	Malaysia	144.3900 MHz	
	Netherlands (test)	430.5125 MHz	
	New Zealand	144.5750 MHz	
	North America	144.3900 MHz	
R	Russia	144.8000 MHz	
90:	South Africa	144.8000 MHz	101:
4/0	Taiwan	144.6400 MHz	4000
	Thailand	145.5250 MHz	90:
Default: 0	YTY		dioddity

Default: 0

TX QT/DQT \odot

It may be required to setup CTCSS or DCS whenever transmitting your position on analog APRS to a repeater or iGate. This parameter is normally 'off' (no CTCSS/DCS used), but may be assigned any of the supported CTCSS frequencies or DCS/DCSdioddity I values. See Appendix A for supported CTCSS frequencies and DCS/DCS-I values. en, off

Default:

Transmit Delay \odot

1.1

7.

The two parameters 'Transmit Delay' and 'Prewave Time' are responsible for the delay between automatic [PTT] activation (for analog APRS) and the actual dioddity transmission of the APRS beacon.

Delay period:	Maximum:	5100 ms
	Minimum:	0 ms
	Increment:	20 ms
Recommended:		80 ms

Prewave Time \bigcirc

1~

The two parameters 'Transmit Delay' and 'Prewave Time' are responsible for the delay between automatic [PTT] activation (for analog APRS) and the actual adioddity transmission of the APRS beacon.

Time period:	Maximum:	2550ms
9	Minimum:	0ms
	Increment:	10ms
Recommended:	$\neg q_{I}$	100 ms

Transmit Power \odot

The output power for analog APRS can be set to either High or Low.

Options: High Use 20W output power whenever a stronger signal is required to enhance the transmit range.

Use the 5W option for short range communication

Low Default: High

APRS Tone \odot

If you want to hear the transmitted APRS packet (AFSK modulated) you may set this parameter to 'On'.

Options :	
Default:	Off
S.	
~ R	2-4
	1910-1
	q _{di}
	TIL

Radioddity

Tioda



Destn SSID \odot

The specified digit will be appended to the destination call sign adioddity

Value:	Maximum:	-15
	Minimum:	0
	Increment:	-1
Default:	-(0
Default:	~(0

Destn Call Sign \odot

Your SSID

This parameter is required to specify the destination call sign and may not be left empty for analog APRS.

Recommended: APAT81

To further specify the type of station that sends out an APRS beacon, 15 SSIDs have been assigned as follows:

	Definition	1/1
SSID	Definition	V
0	Your primary station usually fixed and message capable	
-1, -2, -3, -4	generic additional station, digi, mobile, wx, etc.	
-5	Smartphone user	
-6	Satellite or special operations (Camping)	
-7	walkie talkies, HT's or other human portable	
-8	boats, sailboats, RV's or second main mobile	
-9	Primary Mobile (usually message capable)	
-10	internet, iGate, echolink, winlink, AVRS, APRN, etc.	
-11	balloons, aircraft, spacecraft, etc.	
-12	APRStt, DTMF, RFID, devices, one-way trackers, etc.	
-13	Weather station	V:
-14	Truckers or generally full-time drivers	11/1
-15	generic additional station, digi, mobile, wx, etc.	· V

The specified digit will be appended to your own call sign as specified within the parameter 'Your Call Sign'.

-9

Value:

Minimum:

0 Maximum: -15

iena. Adioddity **Recommended:**

For using your DB25-D in a car For using your GD-88 handheld oddity

© Radioddity 2022

Your Call Sign \odot

This parameter is also mandatory for analog APRS as it does specify your own call adioddity sign

Default: <empty>

APRS Symbol Table

Initially APRS supported just 192 different symbols. This has recently been enhanced to several thousands. The selected 'APRS Symbol Table' in combination with the selected 'APRS MAP Icon' define the symbols that will be used within sites such as <u>https://aprs.fi</u> to visually show the type of station at its current location. More details on that topic to be found at http://www.aprs.org/symbols.html. Recommended setting for 'APRS Symbol Table': '/'.

Recommended:

Notes: This parameter is only relevant for analog APRS

APRS Map Icon

Initially APRS supported just 192 different symbols. This has recently been enhanced to several thousands. The selected 'APRS Symbol Table' in combination with the selected 'APRS Map Icon' defines the symbol that will be used within sites such as <u>https://aprs.fi</u> to visually show the type of station at its current location. More details on that topic to be found at <u>http://www.aprs.org/symbols.html</u>. The recommended setting for 'APRS Map Icon' will lead to a car being displayed on sites such as https://aprs.fi. adior

Examples:



Recommended:

Human person (to be used with Radioddity GD-88)

Notes: This parameter is only relevant for analog APRS

k

ſ

Radioddity

The following table lists the resulting icons according to the selected 'APRS Symbol Table' in combination with the selected 'APRS Map Icon'.

and the second se										1.0					
Table !	1	#	\$	%	&	l.	()	*	+	,	-		/	0
/	(1 -)	D	_)	DX	Ġ	ł	•	<u>ل</u> ے	1	1	alla	ŝ	X	•	0
		T	9	Ĥ	X	*			*			<u>h</u>		-	
\ 🔼	-	44	₽.			∕▲		75	200	Т	-		?	•	\bigcirc
			~	CZ.	. 1 .							~	α	11	
Table 1	2	3	4	5	6	7	8	9	:	;	<	=	>	?	@
/ 1	2	3	4	5	6	7	8	9	1	Ă	هک	.	a	1	\
	-		L L		1	-	-		$\overline{\triangleleft}$					2	
\ +	+	-	-	-	-	-	+	ł	\bigtriangledown	Æ		-		E.	
Table A	В	С	D	Ε	F	G	Н		J	Κ	L	Μ	Ν	0	Р
/	BBS	Ľ.	+	$\overline{\mathbf{Q}}$	5		يصدا	TCP	4	옑		é	NT S		æ
·	_] -			*						-			
	BLOW	0	${\color{black}{\sqcup}}$		FRZ RAIN	\sum		$\overline{\nabla}$	7	W		+	á	, 🖕	Ρ
	P				1	L		- 0,	1.0	D					
Table Q	R	S	Т	U	V	W	Х	Y	Ζ	1	\	1	٨		`
/	RV	4		-		wx				Ŕ		\boxtimes		wx	69
, 0															
)	400 I		Ń			.t/					1	T)		
۱ (O)		×	-	۲	Ŷ	ŏ	R	+	+	wc	+	+	ŤŦ	ĕ	
\)	X	,	ě	Ŷ	ŏ	R		+			+	Ť	ĕ	
	11	X	d	ě	f	ŏ			+	wc		Ŧ	$\frac{T}{t}$	Ņ	
Table a	b	c	d	e	f	g	h		j	wc k		+ m		0	p
	b 50	X	FIRE	ě	11	g			j ••••	k		m MIC		0 0	
Table a	b	X		ě	f	g	h		+ ; ;	wc k		+ m		0	p
Table a /	b 50	X	FIRE	e	f	g	h H			k		m MIC		0 0	p
Table a /	b 50	X	FIRE	e	f	g	h H			k		m MIC		0 0	p
Tablea/Image: Constraint of the second s	े हे हे हे हे हे हे हे हे	c A A S	t	e Kr	f Production Froduction V	g × F	h H M	+ 2 2 3 4 4 5 5 5 5 5 5 5 5 5 5 5 5 5	<u>∎</u> ^	k R				0 0	p
Table a / Image: Second seco	े हे जि	c A		e R	f Production Free	g ×	h H M	+	<u>∎</u> ^	k R				0 0	p
Tablea/Image: Constraint of the second s	े हे हे हे हे हे हे हे हे	c A A S	t	e Kr	f Production Froduction V	g × F	h H M	+ 2 2 3 4 4 5 5 5 5 5 5 5 5 5 5 5 5 5	<u>∎</u> ^	k R				0 0	p

By selecting the 'APRS Symbol Table' and 'APRS Map Icon', you define the resulting icon that will be displayed on APRS service pages such as <u>https://aprs.fi</u>. The following table list the most used icons and their corresponding 'APRS Symbol Table', 'APRS Map Icon' and 'SSID' that are applicable for your DB25-D.

Notes: We advise not to take any other combinations besides those listed.

Ŧ]

Description	APRS Symbol Table	APRS Map Icon	lcon	SSID
Human Person (with HT)	1		¥.	-7
Car	/	>>	-	-9
Truck	/	k		-14
Station	1	К	1	0

APRS Signal Path \odot

This parameter defines the path your APRS beacon packets should take.

Recommended: WIDE1-1WIDE2-1

Notes: There is no space or ',' between 'WIDE1-1' and 'WIDE2-1'. This parameter is only relevant for analog APRS

Your Sending Text \odot

Within this field a maximum of 60 alphanumeric characters may be defined. Those text will become part of the APRS beacon and will be displayed alongside the Call sign on maps such as https://aprs.fi.

Recommended:

using Radioddity DB25-D or

using Radioddity GD-88

No

A total of 8 APRS reporting channel definitions is possible for digital APRS. For each of those definitions, you may specify a different 'Report Channel', 'APRS TG', 'Report Slot', 'Call Type' and 'PTT' setting.

Notes: This parameter is only relevant for digital APRS

Report Channel

You may either specify a specific channel out of all channels that are within your various zone definitions or just use the current channel whenever APRS beacon data is to be transmitted. Sitv

Default: **Current channel**

Radioddity

Radioddity

adiod

APRS TG 🕕

In digital APRS the APRS data will be transmitted to the TalkGroup, specified by this parameter. The TalkGroup is depending on the network that is used by the defined APRS channel. The following table lists some of those TalkGroups as found on the DMR Brandmeister network.

	TalkGroup (TG)	Report Slot	Call Type
France	208999		Private C
Germany	262999	2	Private C
Greece	202999		Private C
Hungary	216950-216959		Private C
North America	310999		Private C
Norway	242999		Private C
Poland	260099	2	Private C
Portugal	268999	0/ /	Private C
United Kingdom	234999	2	Private C

Report Slot (11)

As digital APRS makes use of DMR repeaters we need DMR Tier 2 with its support for Time Slots. This parameter defines the Time Slot to be used for transmitting your APRS beacon data. You may either specify a specific Time Slot or just use the Time Slot of the currently selected digital channel.

Default: **Current Slot**

Call Type 🕮

Depending on the digital network used by the specified APRS channel, the transmission of the APRS beacon is either established as a 'Private Call' or as a 'Group Call'. Check with your digital network provider on the required setting. As for digital DMR Brandmeister network, APRS calls are transferred as 'Privat Call'.

Default: Private call

PTT ①

Define if [PTT] should trigger the transmission of an APRS beacon

Options: Off Do not send an APRS beacon when radio is keyed up on s. off loddity Send an APRS beacon when radio is keyed up

Default:

dity

12.11 Encryption ^①

Users are allowed to program a maximum of 10 encryption key names and their 2 Byte encryption key values. The encryption level (low, middle and high) should be programmed to be the same. Otherwise, the encryption value can't be used. If the encryption level is programmed to be 'off', this function can't be used.

Notes: This feature only works with radios of same brand and model. **This feature may not be used by HAM operators!**

12.12 Contacts (1)

Contact list

It is convenient for users to create, modify, edit, add and delete digital Contacts in the current channel, or to copy ham contacts or Ham groups to the contact list, which is convenient for you to call an associated contact or TalkGroup on a specified channel for communication. If necessary, you can create, modify, edit, add, delete the contacts and groups that are in your 'Contact list'. The capacity of this contact list can reach up to 2000 private contacts or groups, including 'Contact name' (call sign or TalkGroup), 'Contact ID' (DMR ID) and 'Call Type' (mainly 'Private Call' or 'Group Call').


	ADD QTY Delete QTY		
Serial No	Contact name	Contact ID	Call Type
1	Parrot	262997	Private call
2	local	9	Group Call
3	regional	8	Group Call
4	Ruhrgebiet	26243	Group Call
5	NRW	2624	Group Call
6	DE	262	Group Call
7	EU	92	Group Call
8	WW	91	Group Call

You may grab lists of currently available TalkGroups as follows:

- Brandmeister network (BM): <u>https://www.pistar.uk/dmr_bm_talkgroups.php</u> or via the BM API at <u>https://api.brandmeister.network/v1.0/groups/</u>
- ThankGodItsFriday (TGFM) network: <u>https://www.pistar.uk/dmr_tgif_talkgroups.php</u>
- DMR+ network: <u>https://www.pistar.uk/dmr_dmr+_talkgroups.php</u>

ddity

 Sitv






If you press the button 'Import', you will be directed to the default file path of the system, and you can directly import a CSV file of digital contacts. For your convenience we have included a sample file 'contacts 2000.csv '. This sample file has a couple of sample contacts their 'Serial No', 'Contact ID', 'Contact name' and 'Call Type', whilst the following assignment is valid for the different call types:

Call Type #	Call Type
1	Group call
2	Private call
3	All call
4	No-address call
5	RawData
6	Define Data
7	SPDATA

Normally only Call Type 1 (Group call) and Call Type 2 (Private call) are used. If you need to update the imported contacts CSV file, you need to re-import the updated digital contacts CSV file to replace the previously imported contacts.

The format of the CSV file is as follows:

Serial No,Contact ID,Contact name,Call Type

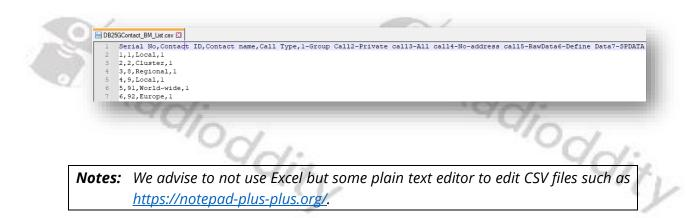



What 'Import' is for getting CSV file data into the CPS is 'Save' for storing it into a CSV file. If you press the 'Save' button, you will be directed to the default file path of the system in order to directly save the current content of your 'Contact list' to a CSV file of your choice.

v2.0



To manually add one or more records ('Serial No's) to the 'Contact list', first specify the total number of records you want to add within the field labeled 'ADD QTY' before you push the button '+ Add'. Be careful as to not exceed the maximum number of allowed records. Jity



To manually delete one or more records ('Serial No's) from your current 'Contact list', first specify the total number of records you want to delete within the field labeled 'Delete QTY', then position the cursor at the Serial No you want to start the delete-process at before you push the button '- Del'. Be careful as to not try dioddity deleting more records than actually do exist.



To save the 'Contact list' to the radio, click on 'Write' within the top menu selection of the CPS. Do not forget to do that.

Dddit 1

Ham contacts 🕕

The 'Ham contacts' is mainly used for high-end users or amateur groups. At the same time, it allows users to create, modify, edit, add and delete the ham contacts list through a CSV file, or download the CSV file of the ham contacts from a designated website or other ways directly import or copy it to the CSV file and then import. This 'Ham Contacts' can hold up to 300,000 Contacts with details such as 'Contact Alias' (call sign), 'Contact ID' (DMR ID), 'Name' (Name of operator), 'City', 'State/Province' and 'Country'.

Getting the Ham contacts into the radio is a 2-step process, Notes: 1. **El Inport** sorted Ham contacts from a file to the CPS 2. Write the Ham contacts from the CPS to the radio Radioddity

Radioddity

	1		~	1		
		9.9			0	16Bytes
		R			c	128Byte
- 9				-	□Se	rial
		$c \gamma$				1
						2
						3
						4
						5
						6

_					100	1000	
	16Bytes	ाह्यो म	port	🚽 Write	Copy		
•	128Bytes			•			
□S	erial No	Contact Alia:	Contact ID	Name	City	State	Country/Region
	1	W	1	Flox M.	American Ca	nye National Capit	a Philippines
	2	W	1	Flox M.	American Ca	nyc National Capit	a Philippines
	3	KI 👘	3	B. Anno Anno	Seffner	All Regions	Puerto Rico
	4	KI	3	B. Anno Can	Seffner	All Regions	Puerto Rico
	5	Y	7	Rodhige	Valencia	Aragua	Venezuela
	6	Y	7	Rodhige	Valencia	Aragua	Venezuela
	7	Y	7.1	Waterch	Valencia	Carabobo	Venezuela
	8	Y	7.1.1	Waterch	Valencia	Carabobo	Venezuela
	9	H	3	Maximiliane Valdes	Coson	Samana	Dominican Repu
	10	H	3	Maximiliane Valdes	Coson	Samana	Dominican Repu
	11	LU	7	Boberts	Olivos	Buenos Aires	Argentina Reput
	12	LU	7	Boberts	Olivos	Buenos Aires	Argentina Reput
	13	LU	7	Boberts	Olivos	Buenos Aires	Argentina Reput
	14	K	1	Berne A	St. Thomas		U.S. Virgin Islan
	15	Kl	3	Berne A	St. Thomas		U.S. Virgin Islan
	16	N	3	Prestan	San Juan		Puerto Rico

If you press the 'Import' button, you will be directed to the default file path of the system in order to directly import a CSV file of digital contacts. For your convenience we have included a sample file 'Ham contacts_ALL_20200505193301 max 200000.csv ' within the installation directory of the Radioddity CPS. This sample file has more than 160000 records with their 'DMR ID', 'Call sign', 'Full name', 'City', 'State/Province' and 'Country'.

If you need to update the imported contacts CSV file, you need to re-import the updated digital contacts CSV file to replace the previously imported contacts.

The format of the CSV file is as follows:

Import

Radio-ID (DMR ID), Alias (Call sign), Name, City, State/Province, Country;

		~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	
1	Radio-ID,Callsign,First-Name,City,State/	Prov, Country;	
2	1023001,VE3		
3	1023002,VA3	(7)	1
4	1023003,VE3		$\bigvee$
5	1023006,VA3	in Cambra 11	
6	1023007,VA3	A &	
7	1023008,VE3	in the second second	
8	1023009.VA3	and the second se	
1			

Notes:The 'HAM contacts' CSV-Format does not require a serial number like the<br/>normal 'Contact List'.<br/>We advise to not use Excel but some plain text editor to edit CSV files such as<br/><br/>https://notepad-plus-plus.org/.<br/>Due to a bug within the CPS/firmware, the file needs to be sorted with<br/>ascending DMR IDs.



When you have imported the digital contacts CSV file, you can press the 'Write' button to write the list to the radio. Only The 'Ham contacts' will be written to the radio. This is the only way to write the 'Ham contacts' to the radio.

Tip: You can choose what information and details to write using these two options:

		1 1 1
I6Bytes	Choose this option, to just write the 'Contact ID' (DMR ID) and the 'Contact alias' (call sign) of the ham contact to the	Y
C 128Bytes	radio. This option significantly minimizes the time to write the contacts to the radio.	
<ul> <li>○ 16Bytes</li> <li>● 128Bytes</li> </ul>	Choose this option, to write all details of the ham contacts including 'Contact ID' (DMR ID), 'Contact alias' (call sign), Name, City, State, Country/Region and address etc. to the radio. This is very convenient for the user to browse and view detailed contact information. However, this option <u>significantly</u> increases the required time to transfer the contact details to the radio. For 200.000 Ham contacts this currently takes about an hour.	1.
🚯 Copy	YITV STATE	1tv
		1

## 🅼 Сору

When you have imported the digital contacts CSV file, you can select your desired friend contacts from it, and then tick ' $\square$ ' in the ' $\square$ ' box next to serial number. After all the required contacts have been selected, press the 'copy' button to copy the name and number of the selected contacts to the 'Contacts list' which make it more convenient for you to call an associated contact on a specified channel for communication. Once copy successes, 'Has copied to Contacts list successfully' will pop up. If necessary, you can modify, create, edit, add, delete contacts in the contacts list. The 'Contacts list' capacity can be up to 2000 private contacts (or TalkGroups) including name, number and call attributes. Itv

## Ham groups ①

The ham groups is mainly used for high-end users or amateur groups. At the same time, it allows users to create, modify, edit, add and delete the ham groups through the CSV file, or download a CSV file of the ham groups through a designated website or other ways directly import or copy it to a CSV file and then import. 'Ham groups' can hold up to 20,000 groups, including details such as digital adioddity ie (ic ioddity group name (TalkGroup Name) and Group ID (TalkGroup ID).

Ser	ial No	Groups name	Groups ID	
	1	Worldwide	1	
	2	Local 2 (SW FL Regional)	2	
	3	North America	3	11
	4	Local 9	9	0
	5	Worldwide German	10	-//
	6	Worldwide English	13	
	7	Worldwide Spanish	14	
	8	Brandmeister WW	91	
	9	Brandmeister NA	93	
	10	UA German 1	110	
	11	UA English 1	113	
	12	UA Spanish 1	114	
	13	UA All Lang 1	119	
	14	UA German 2	120	
	15	UA English 2	123	
	16	UA Spanish 2	124	



If you press the 'import' button, you will be directed to the default file path of the system in order to directly import a CSV file of Ham groups. If you need to update the imported 'Ham group' CSV file, you need to re-import the updated 'Ham group' CSV file to replace the previously imported 'Ham groups'.

Titv

The format of the CSV file is as follows:

## TG #,TalkGroup,TS

Ham g	groups max 20000.csv 🔀
1	TG #,Talkgroup,TS
2	1,Worldwide,1
3	2,Local 2 (SW FL Regional),2
4	3,North America,1
5	9,Local 9,2
6	10,Worldwide German,1
7	13,Worldwide English,1
8	14,Worldwide Spanish,1
9	91,Brandmeister WW,1
10	93,Brandmeister NA,1
	and the second s

**Notes:** The 'HAM Groups' CSV-Format does not require a serial number like the normal 'Contact List'. We advise to not use Excel but some plain text editor to edit CSV files such as <u>https://notepad-plus-plus.org/</u>.

dity

ditv

## 🚯 Сору

When you have imported the ham groups CSV file, you can select your desired groups from it, and then tick ' $\square$ ' in the ' $\square$ ' box next to serial number. After all the required groups have been selected, press the 'Copy' button to copy the Groups name and Groups ID of the selected ones to the 'Contact list' which is convenient for you to call an associated group on a specified channel for communication. Once copy has completed, 'Has copied to Contacts list successfully' will pop up. Then, you can check the 'Contact list'. If necessary, you can modify, create, edit, add, delete contacts and groups within the 'Contact list'. The 'Contact list' capacity can be up to 2000 private contacts, including Contact name, Contact ID and Call Type.

# 🔶 Write

After you have imported the 'Ham groups' CSV file, you can press the button 'Write' to transfer the data to the radio. Only the hams groups will be written to the radio. This is the only way to write 'Ham groups' to the radio.

**Notes:** This function only applies to the digital 'Group call' type.

## 12.13 Digital Alarm List ^①

The user can create, modify, edit, or delete the set of alarm system in the digital alarm list. The digital alarm system list is the signaling protocol used to communicate in an emergency in digital mode. Up to 4 digital alarm systems can be created

Serial	List name	Alarm type	Alarm mode	Alarm Channel	Impolite Attempts	Emergent MIC Duration
1	A1	Standard	Emergency Alarm	Off	2	6S
2	A2	Standard	Emergency Alarm	Off	2	6S
3	A3	Standard	Emergency Alarm	Off	2	6S
4	A4	Standard	Emergency Alarm	Off	2	6S

otes: The alarm type cann mode.	ot be set as disable. This function only applies to digite
R	P
adion	"adiod
-90	lit.

### 12.14 Scan List

 
A Scan/Roaming list can be associated with each channel. Once scan is 'On', this Scan/Roaming list will be monitored for activity on the current channel. If Roaming is turned 'On' within the 'Basic Parameters' menu, the radio will scan the repeater channels on the roaming list to search for an available repeater station. To perform a roaming scan, the list must contain repeater channels. Every channel can only enable either scan or roaming scan. A maximum of 250 groups of scan lists can be setup, with a maximum of 50 members per group.

	1_A1 2_B2 3_	2_B2 Scan List B2 Talkback Off	Scan TX Mode Current Channel     Appointed Channel Off	•
20		Optional Channels Zone 1 Ch 8 -OHL-WW	Selected Channels Zone 1 Ch 1 -OHL-Parrot Zone 1 Ch 2 -OHL-local Zone 1 Ch 3 -OHL-rubrg. Zone 1 Ch 4 -OHL-Rubrg. Zone 1 Ch 4 -OHL-NRW Zone 1 Ch 6 -OHL-NRW Zone 1 Ch 6 -OHL-DE Zone 1 Ch 7 -OHL-EU	
		- CV		

**Notes:** When Scanning is turned on and VFO A is currently selected, the radio will no longer monitor VFO B. When Scanning is turned on and VFO B is currently selected, the radio will no longer monitor VFO A.

## Scan List

The user can edit, rename, or delete the name of the scan/roaming list. The maximum length of the Scan list name may need exceed 10 characters, using letters, numbers, spaces and special marks. Leaving the name empty is not allowed. It is possible, to set up a maximum of 250 San lists, each containing up to 50 Channels.



Press the button '+ Add' to add a new scan list with the name specified by the input field 'Scan List' to the existing scan lists. The total number of scan lists will increase by 1.



Mark one of the existing scan lists. Its name will be displayed in the input field 'Scan List'. Now press the button '- Del' to delete than scan list from the existing scan lists. The total number of scan lists will decrease by 1. lity

## **Talkback**

The feature allows the user to press [PTT]-key to transmit on the current received channel, during scanning or within 3s after the received signal has disappeared.

<b>Options</b> :	On	Activate Talkback
	Off	Deactivate Talkback. Talkback/reply will be based on the setting
0 ~		of 'Scan TX Mode'.
Default:	Off	a P

**Notes:** When the talkback is set 'ON', the setting of 'Scan TX Mode' will be ignored. When the talkback is set 'Off', the setting of 'Scan TX Mode' will be evaluated.

### Scan TX Mode

During scanning process, it is allowed to initiate a call or reply back on the current channel by pressing the [PTT]-key when a scanned signal disappeared or scanning stops.

**Options**: Current channel Transmit only in the initial channel before the

scan starts. Last Operated Channel Transmit only in the last operated channel

where the radio stays lastly or scan stops. Transmit only on the selected channel.

Appointed channel default: Appointed channel

Notes: The 'Scan TX Mode' is only valid when 'Talkback' function set 'off' or after scanned signal disappears within 3s.

## Appointed Channel

To select a specific channel out of all channels that are within your various zone definitions for transmitting and replying during scanning. When set to 'Off', the channel won't be available for transmitting and replying during scanning.

#### Default: Off

**Notes:** The setting is only used, when the 'Scan TX Mode' is set to 'Appointed Channel'.

## **Optional Channel**

Displays all available channel members that can be added to the scan/roaming list.

**Notes:** When you add a member shown in the 'Optional Channels' window to the scan/roaming list, the selected channel member information will no longer appear in the 'Optional Channels' window, unless you delete the channel member from the 'Selected Channels' window.

## **Selected Channels**

Lists all channel members selected and added to the scan/roaming list. You can add up to 50 channel members. You can review the available scan/roaming list member information in the 'Selected Channels' window. You can also remove any of the channel members from the 'Selected Channels' window, and the removed channel members will no longer participate in any activity of the scan/roaming list members. Any available channel can optionally be associate to the scan/roaming ddity dity list.



Click on one of the members within the 'Optional Channels' window and press the button '+ Add' to add that member from the 'Optional Channels' window to the Radioddity 'Selected Channels' window.



Click on one of the members within the 'Selected Channels' window and press the button '- Del' to remove that member from the 'Selected Channels' window. It will then be listed within the 'Optional Channels' window.

Notes: When you remove members of the 'Selected Channels' windows from the scan/roaming list, the information of that channel will no longer be displayed in 'Selected Channels' windows but they will again be listed within the 'Optional oddity Channels' windows. Oddity

## 12.15 RX Group 🕕

An RX Group needs to be setup for the user to listen to group calls to members with the same configuration. You can set or select any group from the available lists (1-250) as a 'RX Group List' (up to 100 RX Group Lists).

1_TS1 2_TS2	RX Group List TS1	🕂 Add 🕒 Del	917
3_	Optional Digital Contacts 2 _ local 3 _ regional 4 _ Ruhrgebiet 5 _ NRW 9 _ Worldwide 10 _ Local 2 (S 11 _ North Amer 12 _ Local 9 13 _ Worldwide 14 _ Worldwide 15 _ Worldwide 16 _ Brandmeist 17 _ Brandmeist 18 _ UA German	Selected Digital Contacts          6 _ DE         7 _ EU         8 _ WW	
	201.		

Within the Channel settings a RX Group should be assigned to each channel.

Notes: This feature is available only in digital mode.

## 12.16 Zone [Channel]

Zone is a collection of channels. The user can customize the zone and channel capacity according to the actual needs. A zone supports 1~3999 digital or analog channels.

**Notes:** When editing channel information, the user can select digital or analog channels based on the type of channels.

## Zone name

Users can edit, modify and delete the zone name. A maximum of 10 characters can be entered. Valid characters include numbers, symbols, letters, spaces and special characters.

## **13 Setup of channels**

A channel is defined by several parameters. Some of them apply both, to analog as well as digital channels, others apply to analog or digital channels only. The following 25 chapters do explain all those parameters in more detail.

## 13.1 Z-1

The number within this column of the channel definition is just an internal number and designates the position of that channel within the selected zone. Currently it is not possible to alter a channels position, except if you use the 'Import' and 'Safe' functions and resort the channels within a CSV file. Whenever a channel is been deleted, all other channels following to the position that got deleted will be shifted upwards and such getting decreased 'Z-1' numbers.

## 13.2 CH mode

User could choose the current channel working mode from the following options.

Possible modes:	Analog	Channel will become an analogue channel
	Digital	Channel will become an analogue channel
	A&D,TX-A	Channel can receive both digital and analogue
		signal, but will transmit analogue
	A&D,TX-D	channel can receive both digital and analogue
		signal, but will transmit digital
Default:	Analog	

# 13.3 CH Name

The display will show channel the channel name. Users can create, edit, rename or delete the channel name. The maximum length for the channel name is 10 characters. Those can be numbers, symbols, letters, space or Chinese characters.

## 13.4 RX Freq

Users can set the channels receive frequency (in MHz). The possible frequency depends on the available frequency ranges of the DB25-D.

In 'Digital' mode, the Radioddity DB25-D and GD-88 do not support simplex DMR Tier 1 operation with different TX and RX frequency. Whenever the RX and TX frequencies are different, the channel will be defined as a repeater channel (using DMR Tier 2), using Time Slots to communicate with the repeater.

#### 13.5 **TX Freq**

Users can set the channels transmit frequency (in MHz). The possible frequency depends on the available frequency ranges of the Radioddity DB25-D or GD-88.

In 'Digital' mode, the Radioddity DB25-D and GD-88 do not support simplex DMR Tier 1 operation with different TX and RX frequency. Whenever the RX and TX frequencies are different, the channel will be defined as a repeater channel (using DMR Tier 2), using Time Slots to communicate with the repeater.

#### 13.6 **Power**

For each channel the transmit output power can be set independently. You can edit it through programmable buttons of short key or long key (H/L Power) or the menu for power function ('Menu' -> 'Parameters -> 'Power').

Options: High Use high output power whenever a stronger signal is required to enhance the transmit range.

> Use the low option for short range communication Low

**Default:** High

#### 13.7 **Only RX**

ddity Each of the channels defined within a zone may be set for receive only.

**Options**: On Limit the channel to only receive

Off

Transmitting and receiving is possible for that channel Off

#### Default: Off

#### 13.8 Alarm

Users can decide to show a visual notification when they received an alarm call. If the function is disabled, the radio will not respond when it receives an alarm call. dity This option is based per channel.

**Options**:

Off Disable decoding of alarm call Enable decoding of alarm call On Off

**Recommended:** 

#### 13.9 Prompt

The radio will not respond when it receives an alarm call. The call prompt is requesting the receiver either to call back the transmitter when they can ie cai. communicate. It is only available in the channel to receive the call tone. This option is based per channel.

**Options**:

Off Disable alarm call prompt On Enable alarm call prompt

**Recommended:** 

## 13.10 PCT (Private Call Type) 🕕

This function sets the Private Call Type of the current channel either to PATCS (Press And Talk Call Setup) or OACSU (Off Air Call Set Up).

**Options:**PATCSThere is no need to give the radio a respond, they can send<br/>the voice to the radio directly.OACSUIt needs to give the radio a respond, then it will send the

CSU It needs to give the radio a respond, then it will send the voice to the radio.

Default: PATCS

Notes: This parameter is only available in digital mode.

## 13.11 RX TS

The Radioddity DB25-D and GD-88 are based on TDMA technology and can divide a 12.5kHz channel into two alternate Time Slots.

When operating a digital repeater or duplex-hotspot with the Radioddity DB25-D or GD-88, normally the digital repeater does have a TX-frequency different to its RX-frequency and uses DMR Tier 2 for transmission. DMR Tier 2 makes uses of the Time Slot technique, allowing two separate information channels to be transmitted using the very same physical channel. Normally the Time Slots (TS) for TX and RX must be set to the very same Time Slot, either 1 or 2.

Whereas, when operating a simplex station (such as a simplex hotspot), normally, DMR Tier 1 is in place. DMR Tier 1 does not make use of those Time Slots.

Whenever TX and TX-frequency are identical (which is the case in simplex mode), a third option 'On' (for direct simplex mode) becomes available for such channel.

Options:Slot 1Use DMR Tier 2, Time Slot 1 for RXSlot 2Use DMR Tier 2, Time Slot 2 for RXOnUse DMR Tier 1 for RX without any Time SlotsDefault:On

**Notes:** This parameter is only available in digital mode.

## 13.12 TX TS 🛈

The use of this parameter is identical to 'RX TS', except that it refers to transmit mode of the DB25-D.

Options:Slot 1Use DMR Tier 2, Time Slot 1 for TXSlot 2Use DMR Tier 2, Time Slot 2 for TXOnUse DMR Tier 1 for TX without any Time Slots

Default: On

Notes: This parameter is only available in digital mode.

'ddirl

aditv

## DMR use with simplex hotspot (1)

Most Ham operators nowadays do have their own personal hotspot. Some of those hotspots do support 'full duplex', others only support 'simplex' operation. In order to successfully use a simplex hotspot with your Radioddity DB25-D or Radioddity GD-88, the digital channel definition needs to be different than for duplex repeaters or duplex hotspots. Whilst duplex-systems use DMR Tier 2, simplex systems do use DMR Tier 1 or Tier 2 but requiring to use just one fixed Time Slot (often TS 2).

In order to instruct the radio to use DMR Tier 1 (which is only possible when TX and RX frequency are both the same), select the option 'On' for 'RX TS' and 'TX TS' within the channel definition.

On

Unconfirme Impolite

All other required parameters are identical to those of a duplex channel.

Pates

On

Notes: The option to set 'RX TS ' and 'TX TS' to 'On' is only available if RX and TX frequency are both the same and 'CH Mode' is set to 'Digital'

#### RX CC (Color Code) ① 13.13

RX FreqTX FreqPowerOnly RXAlarn436.00000436.00000LowOffOn

Users can assign a color code for a RX channel. The channel Color Code can be same or different, but a repeater can have only one Color Code.

A single Color Code is used to identify a single system. Different Color Codes are used to identify multiple systems sharing the same frequency. This feature can be switched between channels using the same operating frequency but with different Color Codes. dity

Normally the Color Code RX and TX must be set to the very same value.

#### Option range: Maximum: 15 Minimum: 0 Increment: 1 1

Default: Radioddity

Radioddity

## 13.14 TX CC 🛈

Users can assign a color code for a TX channel. The channel Color Code can be same or different, but a repeater can have only one Color Code.

A single Color Code is used to identify a single system. Different Color Codes are used to identify multiple systems sharing the same frequency. This feature can be switched between channels using the same operating frequency but with different Color Codes.

Normally the Color Code RX and TX must be set to the very same value.

<b>Option range</b> :	Maximum: 15	5
	Minimum: (	)
	Increment: 1	
Default:	1	1

**Notes:** This parameter is only available in digital mode.

## 13.15 Msg Type 🕕

This parameter allows user to decide which message type to be used when they send a message to another radio.

<b>Options</b> :	Unconfirmed data	When the radio received the message from the
		transmitter, it will not reply.
	Confirmed data	When the radio received the message from the
0		transmitter, it will reply automatically.

## Default: Unconfirmed data

Notes: This parameter is only available in digital mode.

## 13.16 TX Policy ①

The Transmit Limit is represented by the TX Policy. It feres to the behavior when pressing the [PTT]-key at the radio. The activity status of the current channel determines how the radio will react.

Options:ImpoliteRegardless of the current channel activity, pressing<br/>the [PTT]-Key immediately triggers a transmission.Polite to CCRegardless of the channel being available, if the Color<br/>Code (CC) matches, pressing the [PTT]-Key will trigger<br/>a transmission.Polite to ALLOnly of the current channel is available, pressing the<br/>[PTT]-Key will trigger a transmission.Default:Impolite

## 13.17 RX Group 🕕

In order to be able to receive a group call within the channel, a 'RX Group' should be defined and assigned to the channel. Only those groups, that are listed with their Digital Contact (TalkGroup ID) within the assigned 'RX Group' may be heard when listening to the channel. If set to 'Off' you will not hear any group calls on this channel, unless the group ID is the same as the TX Contact ID (TalkGroup ID). This function is used to receive more than just the group selected by the specified entry of the 'Contact List' when listening to the channel.

### Default: Off

### 13.18 Encryption List ^①

Users can use this feature to encrypt the selected digital channels. Encryption is a kind of software based scrambling solution and not very reliable, thus only to prevent eavesdropping. Part of the transmitted signal and user identification is not encrypted. The receiver must have the same encryption key and encryption type as the transmitter, in order to decrypt the encrypted voice calls and receive encrypted data. You can enable or disable the encryption of the channel by using a short press or by long press custom button ('Encryption On/Off'). The radio uses the encryption settings of the selected channel to transmit encrypted signals, but the receiver does not need to do so. The encrypted channel is still capable for receiving a clear transmit signal (After decryption).

Before Using an 'Encryption List' please configure its key ID and digital encryption key initialization, otherwise it will use the default values.

## Default: Off

**Notes:** In Amateur radio networks using encryption techniques is not allowed.

## 13.19 Scan List

A predefined 'Scan List' may be assigned to the channel. During the scan, all members on the specified list will be scanned for activity. If the parameter is set to 'Off', the scan function on this channel will be disabled, (Including auto scan).

**Notes:** If set to 'Off', auto scan will be disabled.

Radioddity

Radioddity

## **13.20** Contacts ①

Each digital channel may be assigned a specific Contact. Whenever the [PTT]-key is pressed, the radio will start to transmit a call on the selected channel and targeted to the specified contact our group. If a group call is initiated and another Contact ID (group ID) is already active within that channel, the call will be terminated to signal that a call may currently not be initiated.

If this parameter is set to 'Off', a call on the channel will not be possible, making it a RX-only channel. Only those Contacts, defined within the 'Contact list' may be selected.

**Notes:** This parameter is only available in digital mode.

## 13.21 EAS (Emergency Alarm System) ⁽¹⁾

Connect all available digital emergency systems to this channel for emergency usage. To disable the use of the digital Alarm List, select 'Off'.

Before using the Emergency Alarm System, it needs to be defined within the 'Digital Alarm list'.

**Notes:** This parameter is only available in digital mode. Digital Alarm systems are not supported within Ham radio networks.

## 13.22 Relay Monitor

Users can set the radio to output the received signal to the speaker during the repeating operation. The option applies only for the specific channel.

Options:OnReceived signal will be heard if matching the specified<br/>settings for digital RX-GroupOffNo voice will be heard

Default: Off

settings for digital RX-Group No voice will be heard

#### 13.23 Relay mode

The user can set the working mode of the current channel when the channel is in relay mode.

<b>Options</b> :	Off	The channel may not be used for Relay operation.
	Only RX	Only receive is enabled when the channel is in relay
		mode.
199	Only TX	Only transmitting is enabled when the channel is in
		relay mode.
K	RX and TX	Receive and transmitting are enabled when the
100	701:	channel is in relay mode.
Default:	Off	400
	~0	N. QN.
		917. 917.
		The second secon

### Crossband analog to analog

Input channel: Set one channel for Ch Mode 'A&D, TX-A' and set it for Relay mode 'Only RX' or 'Rx and TX'. The frequency specified for RX will be used for either cross repeating the analog signal received.

**Output channel**: Set another channel for Ch Mode 'Analog'

**Operation:** Select one of those two channels for VFO A and select the other channel as VFO B. The analog signal as received on the selected input channel will be repeated on the selected output channel. On the top line of the display, you will see either A - >B (if VFO A is the input channel and VFO B is the output channel) or B ->A (if VFO B is the input channel and VFO A is the output channel)

Sample settings (only relevant parts shown):

Z-3         CH mode         CH Name         RX Freq         TX Freq         Power         RX Only         TX Policy         RX Group         Relay Monitor         Relay mode           1         A&D,TX-A         1_X-A2A         144.10000         High         Off         Impolite         Off         On         Only RX           2         Analog         3_X-A2A         433.10000         High         Off         Impolite         Off         On         Only TX			1. 1. 1.							1 M AT 1	
	Z-3	CH mode	CH Name	RX Freq	TX Freq	Power	RX Only	TX Policy	RX Group	Relay Monitor	Relay mode
2 Analog 3_X-A2A 433.10000 433.10000 High Off Impolite Off On Only TX	1	A&D,TX-A	1_X-A2A	144.10000	144.10000	High	Off	Impolite	Off	On	Only RX
	2	Analog	3_X-A2A	433.10000	433.10000	High	Off	Impolite	Off	On	Only TX

The Radioddity GD-88 will receive on VFO-A (144.100 MHz) and transmit the received signal on VFO-B (433.100 MHz), acting as an analog crossband-repeater.



**Notes**: If a channel is set for CH mode of 'Analog', Relay mode will not be available for that channel. That's why it needs to be set to 'A&D, TX-A' for cross-band repeating to work.

Do not forget to activate Repeater-Mode as described in chapter 10.6 Local Set (2) - ABRepeat (2) on page 77. The upper display line should state 'A->B'.

### Crossband digital to analog

**Input channel**: Set one channel for Ch Mode 'Digital' and set it for Relay mode 'Only RX' or 'Rx and TX'. The frequency specified for RX will be used for analog cross repeating the digital signal received. Only those digital signals will be repeated that match the settings for RX TS and RX CC.

Output channel: Set another channel for Ch Mode 'Analog'

**Operation**: Select one of those two channels for VFO A and select the other channel as VFO B. The analog or digital signal as received on the selected input channel will be repeated on the selected output channel.

Sample settings (only relevant parts shown):



The Radioddity GD-88 will digitally receive on VFO-A (144.100 MHz), TS 1, CC1 and analog transmit the received signal on VFO-B (433.100 MHz), acting as a digital to analog crossband-repeater.

Notes: If 'Relay Monitor' is turned on for the input channel, only those signals will be monitored that do match the RX-group settings. Do not forget to activate Repeater-Mode as described in chapter 10.6 Local Set Set - ABRepeat on page 77. The upper display line should state 'A->B'.

Crossband analog	to digital
Input channel:	Set one channel for Ch Mode 'A&D, TX-D' and set it for Relay mode 'Only RX' or 'Rx and TX'. The frequency specified for RX will be used for cross repeating the analog signal received.
Output channel:	Set another channel for Ch Mode 'Digital' and for Relay mode 'Only TX' and its required settings for TX TS and TX CC and Contact.
Operation:	Select one of those two channels for VFO A and select the other channel as VFO B. The analog or digital signal as received on the selected input channel will be repeated on the selected output channel
Sample settings (	only relevant parts shown):

Z-5	CH mode	CH Name	RX Freq	TX Freq	Power	RX Only	PCT	TX TS	RX CC	TX CC	Msg Type	TX Policy	Contacts	Relay Monitor	Relay mode
1	A&D,TX-	1_X-A2D	144.10000	144.10000	High	Off	Pates	Slot 1	1	1	Unconfirme	Impolite	Off	On	Only RX
2	Digital	3_X-A2D	433.10000	433.10000	High	Off	Pates	Slot 1	1	1	Unconfirme	Impolite	Contact 1	On	Only TX

The Radioddity GD-88 will analo receive on VFO-A (144.100 MHz) and digitally transmit the received signal on VFO-B (433.100 MHz), TS 1, CC1 acting as an analog to digital crossband-repeater.



**Notes:** If no contact has been selected for the digital output channel, repeating will fail and a message, stating 'No Contact' will be displayed on the radio screen.

ddit

Do not forget to activate Repeater-Mode as described in chapter 10.6 Local Set 🙆 - ABRepeat 📰 🕯 on page 77. The upper display line should state 'A->B'.

litz

v2.0

### Crossband digital/analog to analog

**Input channel**: Set one channel for Ch Mode 'A&D, TX-A' and set it for Relay mode 'Only RX' or 'Rx and TX'. The frequency specified for RX will be used for either cross repeating a digital or an analog signal received. Only those digital signals will be repeated that match the settings for RX TS and RX CC.

Output channel: Set another channel for Ch Mode 'Analog'

**Operation**: Select one of those two channels for VFO A and select the other channel as VFO B. The analog or digital signal as received on the selected input channel will be repeated on the selected output channel.

Sample settings (only relevant parts shown):



The Radioddity GD-88 will receive analog/digital on VFO-A (144.100 MHz) and analog transmit the received signal on VFO-B (433.100 MHz) acting as an analog/digital to analog crossband-repeater.



Whenever an analog signal is been received, only the channel name will be shown on the left of the receiving VFO



Whenever a digital signal is been received, the DMR ID of the received station will be shown on the left of the receiving VFO

Radioc

Notes: If 'Relay Monitor' is turned on for the input channel, only those signals will be monitored that do match the RX-group settings.
 Do not forget to activate Repeater-Mode as described in chapter 10.6 Local Set ⁽²⁾ - ABRepeat ⁽²⁾ on page 77. The upper display line should state 'A->B'.

### Crossband analog/digital to digital


Input channel: Set one channel for Ch Mode 'A&D, TX-D' and set it for Relay mode 'Only RX' or 'Rx and TX'. The frequency specified for RX will be used for either cross repeating a digital or an analog signal received. Only those digital signals will be repeated that match the settings for RX TS and RX CC.

- **Output channel**: Set another channel for Ch Mode 'Digital' and the required settings for TX TS and TX CC.
- **Operation**: Select one of those two channels for VFO A and select the other channel as VFO B. The analog or digital signal as received on the selected input channel will be repeated on the selected output channel.

Sample settings (only relevant parts shown):

		100										10		and the second s	
Z-7	CH mode	CH Name	RX Freq	TX Freq	RX Only	RX TS	TX TS	RX CC	TX CC	Msg Type	TX Policy	RX Group	Contacts	Relay Monitor	Relay mode
1	A&D,TX-D	1_DA2D	144.10000	144.10000	Off	Slot 1	Slot 1	1	1	Unconfirme	Impolite	RX all	Off	On	Only RX
-	Digital	2 0420	422 10000	433,10000	06	Slot 1	Slot 1	1	1	Unconfirme	Impolito	Off	Contact 1	0.0	Only TX

The Radioddity GD-88 will receive analog/digital on VFO-A (144.100 MHz), CC 1, TS 1 and digital transmit the received signal on VFO-B (433.100 MHz) with the CC, TS and Contact as specified acting as an analog/digital to digital crossband-repeater.

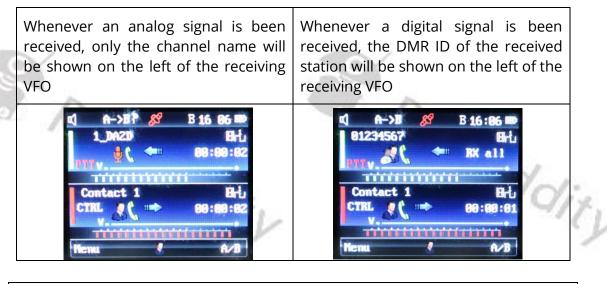

**Notes:** If a channel is set for CH mode of 'Analog', Relay mode will not be available. That ´s why it needs to be set to 'A&D, TX-D'.

If no contact has been selected for the digital output channel, repeating will fail and a message, stating 'No Contact' will be displayed on the radio screen. If 'Relay Monitor' is turned on for the input channel, only those signals will be monitored that do match the RX-group settings.

 
Do not forget to activate Repeater-Mode as described in chapter 10.6 Local Set <a>Particle</a> - ABRepeat <a>Particle</a> - ABRep

Crossband digital to digital

Input channel: Set one channel for Ch Mode 'A&D, TX-D' and set it for Relay mode 'Only RX' or 'Rx and TX'. The frequency specified for RX will be used for either cross repeating the digital signal received. Only those digital signals will be repeated that match the settings for RX TS and RX CC.

- **Output channel**: Set another channel for Ch Mode 'Digital' and the required settings for TX TS and TX CC.
- **Operation**: Select one of those two channels for VFO A and select the other channel as VFO B. The analog or digital signal as received on the selected input channel will be repeated on the selected output channel.

Sample settings (only relevant parts shown):



The Radioddity GD-88 will receive digital on VFO-A (144.100 MHz), CC 1, TS 1 and digital transmit the received signal on VFO-B (433.100 MHz) with the CC, TS and Contact as specified acting as a digital to digital crossband-repeater.



The DMR ID of the received station will be shown on the left of the receiving VFO

The transmitted DMR ID will be shown on the left of the transmitting VFO

**Notes**: If no contact has been selected for the digital output channel, repeating will fail and a message, stating 'No Contact' will be displayed on the radio screen. If no contact has been selected for the digital output channel, repeating will fail and a message, stating 'No Contact' will be displayed on the radio screen. If 'Relay Monitor' is turned on for the input channel, only those signals will be monitored that do match the RX-group settings.

Do not forget to activate Repeater-Mode as described in chapter 10.6 Local Set <a>[@] - ABRepeat</a> on page 77. The upper display line should state 'A->B'.

Sitv

lity


## Digital Same Frequency Repeater

The Radioddity GD-88 comes a special feature called 'SameFrequencyRepeater', abbreviated as 'SFR'. This functionality allows a single Radioddity GD-88 to act as a DMR-repeater for a specific frequency and a specific TalkGroup. This function is ideal for flexible emergency networks as multiple Radioddity GD-88 allow to setup a kind of mesh-network. Whilst receiving on one timeslot, the radio transmits the very same signal on the very same frequency but on the other timeslot. So, RX TS1  $\rightarrow$  TX TS2 and RX TS2  $\rightarrow$  TX TS1. As the Radioddity GD-88 has two fully independent VFOs (A and B) it is best to setup two SFR-channels with one of them using TX TS1 and RX TS1 and the second one using TX TS2 and RX TS2. Both VFOs do share the same frequencies for TX and RX, the same ColorCode for TX and RX, the same digital contact (of type GroupCall) and the same RX-Group containing at least that digital contact.

Then assign VFO A the SFR-channel with TX TS1 and RX TS1 and VFO B the SFRchannel with TX TS2 and RX TS2.

If you have multiple Radioddity GD-88, set all of them up the very same way. Normal, non-SFR-capable dual VFO radios should also be setup the same. Single-VFO radios such as the Radioddity GD-73 may of course only monitor one SFR-channel at a time. So, if there is already a QSO ongoing, that single VFO-radio may need to select the proper SFR-channel whenever only one of the two SFRchannels is within coverage. But if the radio is located in the middle of two GD-88 (thus hearing one Radioddity GD-88 TX on TS1 and hearing the other Radioddity GD-88 TX on TS2) it may select either SFR-channel.

Sample settings (only relevant parts shown):

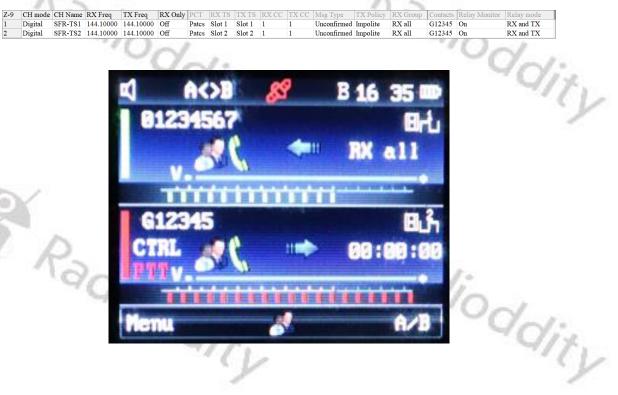

The corresponding Radioddity DB25-D configuration for those two required SFRchannels would be as follows (only those parameters are shown that are of relevance). Keep in mind that the Radioddity DB25-D is not capable of acting as a repeater using SFR, but of course it can be a station within a Radioddity GD-88 based SFR mesh-network.

			118.7	1								18 3	
Z-1	CH mode	CH Name	RX Freq	TX Freq	Power	PCT	RX TS	TX TS	RX CC	TX CC	RX Group	Contacts	APRS
1	Digital	SFR_TS1	433.10000	433.10000	Low	Pates	Slot 1	Slot 1	1	1	RX-SFRgrp	SFR-Group	Off
2	Digital	SFR_TS2	433.10000	433.10000	Low	Pates	Slot 2	Slot 2	1	1	RX-SFRgrp	SFR-Group	Off
					15. 57	100							

#### 13.24 Bandwidth $\odot$

11.

For each channel it is possible le to specify the working bandwidth for TX and RX frequency. Narrow band has a bandwidth of 12.5 kHz whereas Wide band has a bandwidth of 25 kHz. In digital mode, the channel bandwidth is set for 12.5 kHz regardless of what's displayed and cannot be changed or adjusted.

#### 13.25 CTCSS sub audio and DCS signaling $\odot$

For analog channels the Radioddity DB25-D and GD-88 support a total of 51 CTCSS (Continuous Tone Coded Sub audio Squelch) frequencies and 103 normal DCS codes and additional 103 inverted DCS codes. CTCSS is often also called PL tone (PL® for Private Line, a trademark of Motorola) or just tone squelch.

A DCS (Digital-Coded Squelch) - often also called DPL (Digital Private Line) -code in fact is a 134.4 bps (sub-audible) bitstream of 12 data bits followed by 11 check bits. This allows to detect and correct up to 3 buggy bits. The last 3 data bits are a fixed '001', this leaves 9 code bits (512 possibilities). Those are represented as 3-digit octal numbers. The Telecommunications Industry Association has standardized 83 DCS codes.

0	S codes.				0	P			
Su	pported C	TCSS free	quencies			10	$q_i$		
	62,5	67,0	69,3	71,9	74,4	77,0	79,7	82,5	1.
	85,4	88,5	91,5	94,8	97,4	100,0	103,5	107,2	114
	110,9	114,8	118,8	123,0	127,3	131,8	136,5	141,3	11
	146,2	151,4	156,7	159,8	162,2	165,5	167,9	171,3	1
	173,8	177,3	179,9	183,5	186,2	189,9	192,8	196,6	
	199,5	203,5	206,5	210,7	218,1	225,7	229,1	233,6	
	241,8	250,3	254,1		A	ll figures in H	lz		
0						X			
15					1 3				
0	D				0	D			
	12	-le				1	Jal.		
	~~	Qi_					$'O_i$		
		10	$\sim$					Sal	
			40	2.2				40	1:0
			~//	11.					The
		dio		1					lity
				0.75					

## Supported CTCSS frequencies

## Supported DCS codes

porteu		3			$\sim$		
0nn	1nn	2nn	3nn	4nn	5nn	6nn	7nn
D017N	D114N	D205N	D306N	D411N	D503N	D606N	D703N
D023N	D115N	D212N	D311N	D412N	D506N	D612N	D712N
D025N	D116N	D223N	D315N	D413N	D516N	D624N	D723N
D026N	D122N	D225N	D325N	D423N	D523N	D627N	D731N
D031N	D125N	D226N	D331N	D431N	D526N	D631N	D732N
D032N	D131N	D243N	D332N	D432N	D532N	D632N	D734N
D036N	D132N	D244N	D343N	D445N	D546N	D645N	D743N
D043N	D134N	D245N	D346N	D464N	D565N	D646N	D754N
D047N	D143N	D246N	D351N	D465N		D654N	
D050N	D145N	D251N	D356N	D466N		D662N	
D051N	D152N	D252N	D364N			D664N	
D053N	D155N	D255N	D365N	0			
D054N	D156N	D261N	D371N		5	\$	
D065N	D162N	D263N		9	R		
D071N	D165N	D265N			10	in	
D072N	D172N	D266N				41	2
D073N	D174N	D271N					d.
D074N		D274N	1%.				- (
		AT	Y				

## Supported DCS-I values (reverse DCS)

0nn	1nn	2nn	3nn	4nn	5nn	6nn	7nn	
D017I	D114I	D205I	D306I	D411I	D503I	D606I	D703I	
D023I	D115I	D212I	D311I	D412I	D506I	D612I	D712I	
D025I	D116I	D223I	D315I	D413I	D516I	D624I	D723I	
D026I	D122I	D225I	D325I	D423I	D523I	D627I	D731I	
D0311	D125I	D226I	D331I	D431I	D526I	D6311	D732I	
D032I	D131I	D243I	D332I	D432I	D532I	D632I	D734I	
D036I	D132I	D244I	D343I	D445I	D546I	D645I	D743I	10
D043I	D134I	D245I	D346I	D464I	D565I	D646I	D754I	112
D047I	D143I	D246I	D3511	D465I		D654I		11
D050I	D145I	D251I	D356I	D466I		D662I		1
D051I	D152I	D252I	D364I			D664I		
D053I	D155I	D255I	D365I					
D054I	D156I	D261I	D371I		<			
D065I	D162I	D263I			$\sim$			
D0711	D165I	D265I		100				
D072I	D172I	D266I			2	8		
D073I	D174I	D271I			R	5		
D074I	$O_i$	D274I				70;		
	0	D274I	ity			-10	Ddc	lit

## **13.26 RX SQ** ⊙

The user can select decoder type or decoder value of CTCSS, DCS or DCS-I when the radio receives the effective carrier signal. The function can avoid the interference of the same frequency or independent carrier signal.

Options:QTOnly if the CTCSS decoding frequency of the DB25-D<br/>or GD-88 is consistent with the CTCSS frequency of<br/>the transmitting radio, squelch will be opened.DQTOnly if the DCS decoding value of the DB25-D or GD-<br/>88 is consistent with the DCS encoding of the<br/>transmitting radio, squelch will be opened on the<br/>DB25-D.Reverse DQTOnly if the DCS inverted decoding value of the DB25-<br/>D or GD-88 is consistent with the DCS inverted<br/>encoding of the transmitting radio, squelch will be

opened on the DB25-D or GD-88. Squelch will be opened regardless of the CTCSS, DCS or DCS-I values received from the transmitting radio.

Default: Off

## 13.27 RX QT/DQT (RX CTCSS/DCS) $\odot$

Depending on the option selected as 'RX SQ', this is the place to specify the CTCSS frequency or DCS/DCS-I code.

## Default: Off

## 13.28 TX SQ 🗢

The user can select ^the encoder type or encoder value of CTCSS, DCS or DCS-I when the radio transmits the effective carrier signal. The function can avoid the interference of the same frequency or independent carrier signal.

Options:	QT	Only if the CTCSS encoding frequency of the DB25-D or GD-88 is consistent with the CTCSS frequency of the receiving radio, squelch on the receiving radio will be opened.
	DQT	Only if the DCS encoding value of the DB25-D or GD- 88 is consistent with the DCS encoding of the receiving radio, squelch on the receiving radio will be opened.
S D	Reverse DQT	Only if the DCS inverted encoding value of the DB25- D or GD-88 is consistent with the DCS inverted
10	adion	decoding of the receiving radio, squelch on the receiving radio will be opened. DCS inverted values are displayed as 'Dxxxl'.
	Off	Squelch will be opened regardless of the CTCSS, DCS or DCS-I values received from the transmitting radio.
Default:	Off	9

## 13.29 TX QD/DQT (TX CTCSS/DCS) $\odot$

Depending on the option selected as 'TX SQ', this is the place to specify the CTCSS frequency or DCS/DCS-I code.

## Default: Off

### 13.30 APRS

Specify the APRS channel to be used when transmitting the APRS beacon. Either one of the 8 digital APRS channels or the analog APRS definition may be assigned for APRS of this channel.

<b>Options</b> :	maximum:	8	
	Minimum:	1	
	Increment:	1	
		APRS(A)	Transmit the APRS beacon using analog APRS
R	-	Off	Turn off APRS for this channel
Default:	70:	Off	`9 <i>d</i> ;
	40		7/0-1

**Notes:** Analog APRS ('APRS(A)') is currently only possible if the channel is an analog channel as well (CH Mode set to 'analog').



dio

## **14 Firmware Update**

## 14.1 Firmware update

In general, an update of PC-software (CPS) or radio-firmware should only be done if it is really required, following the golden rule '**If it isn´t broken**, **don´t fix it!**'.

**Notes:** Prior to performing a firmware update, save the current codeplug to a file. After doing so, the firmware update may be applied. Finally, the previously saved codeplug should then again be written to the radio using the corresponding CPS.

## 14.2 Install program for firmware update


To install the updater, just unzip the archive you downloaded from Radioddity support and double click on the file, named 'IAP(setup).exe'. This will install the firmware update program on your Windows machine and place a shortcut on your desktop.



## 14.3 Perform Firmware update

In order to perform a firmware update, the radio needs to be put into firmware upgrade mode first. To do so:

- 1. Turn off the radio
- 2. Close the CPS (in case it had been running) in order to make sure the virtual COM-port of your programming cable is not occupied.
- 3. Connect your Radioddity DB25-D or GD-88 via the supplied programming cable to your Windows PC
- 4. Press the [P1]-key on top of the Radioddity DB25-D and keep it depressed, For the Radioddity GD-88 it is the upper sidekey [P2] that needs to be kept depressed.
- 5. Additionally turn on the radio either by turning the volume key clockwise (Radioddity GD-88) or by pressing the 'power key' **U** left to the [P1]-key (Radioddity DB25-D).
- 6. The status-LED will constantly light up red
- 7. On the Radioddity DB25-D, the display will stay blank and backlight will be on, regardless of your normal settings. On the Radioddity GD-88 a special screen will be displayd with either 'IAP_A' or 'IAP_B' shown in the top line.
- 8. Release the [P1]-key (Radioddity DB25-D) or the upper sidekey [P2] (Radioddity GD-88).

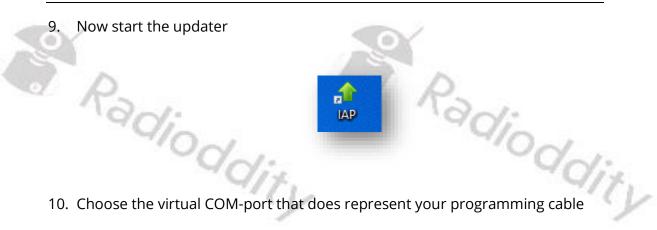

10. Choose the virtual COM-port that does represent your programming cable

11. Click on 'Open'	IAP     COM5 \DEVICE\PROLIFICSERIAL0     COM5 \DEVICE\PROLIFICSERIAL0     COM1 \DEVICE\SERIAL0     COM5 \DEVICE\PROLIFICSERIAL0     Version: 1.0.51     Tone
Rad:	AP     COM5 \DEVICE\PROLIFICSERIAL0     ♥     Open Close Seek-Com

12. If the updater can connect to your Radioddity DB25-D or GD-88, it will output 'IAP Successfully'. If it isn't able to connect to the radio, it will stay on 'CommPort:COMx' (where 'x' represents the selected virtual COM-port number of your programming cable ). If you forgot to shut down the CPS, you will get a 'The COMM port is occupied or doesn't exit!' error.

Radioddity Radioddity

v2.0

13. Next click on	the button 'Open APP file'.	2	
D	1AP	- 🗆 ×	
Nan	COM5 \DEVICE\PROLIFICSERIAL0		1-
4	Open Close Seek-Com	Refresh	ON
	Version: 1.0.51 Tone	Atuo	"qitv
	CommPort:COM5 Addr(Hex)E ^g	Checksum£ª	Y
	Current Page£®	End Page£ [®]	· · ·
	Open Flash File	Write Flash	
R.	Open Flash File	Write Flash	
190	Open APP File 🔓	IAP	ba .
	- CITE		"gitv

14. Now navigate to the path that does contain the update file that is intended to be transferred to the Radioddity DB25-D or Radioddity GD-88, such as:



'C7000_DR300UV_Ham_DB25D_20210902.bin'.

**Notes**: Do not use update files intended for other radios, even if those radios may be looking like the Radioddity DB25-D or Radioddity GD-88. Using files not intended to be put on a Radioddity DB25-D or a Radioddity GD-88 may result in a loss of any guarantee.

15. Whereas a firmware update for the Radioddity DB25-D consists of just one file, the Radioddity GD-88 does require two separate files. One for each independent VFO (A and B). To select the target location of the file, long press the upper side key [P2] of the Radioddity GD-88 to switch between 'IAP_A' and 'IAP_B'. The firmware files are normally marked with 'HAM_A' and 'HAM_B'.

Radioddity Radioddity

v2.0

16. To start the actual update process, click on the 'IAP' button.

	🛊 IAP	- 0 X	
Radi	COM5 \DEVICE\PROLIFICSERIAL0    Open Close Seek-Com	C DM850 ⊂ NC550 Refresh	1
9910	Version: 1.0.51 Tone	Atuo	9/0.
9	CommPart-CDM5 Addq(Hex)L ^a Current PageL ^a Current PageL ^a	ChecksumE#           0           End PageE#           368	dir.
	Open Flash File	Write Flash	- J
	Open Flash File	Write Flash	
	D:\Users\MichaeNDesktop\Radioddiy D825D \users\MichaeNDesktop\Radioddiy D825D \users\MichaeNC7000_DR300UV_Ham_D825D_E\$_20210729_ bin		
		QY	

17. Do not press any key on the radio, do not remove power, just wait until the radio has finished the update process and turns off! During the update process, the status-LED will flash green and red and the application shows the progress by the increasing number of 'Current Page'.

1-1

	▲ IAP	- 🗆 X	-CV
	COM5 \DEVICE\PROLIFICSERIAL0	• DM850 ( NC550	
	Open Close Seek-Com	Refresh	
	Version: 1.0.51 Tone IAP Version:	Atuo	
	Erase ok Addr(Hex)£º	Checksum£ [®]	
		14DB9D	
Rad	Current Page£ ^e	End Page£ [®] 368	1.
491	Open Flash File	Write Flash	lod .
	Open Flash File	Write Flash	"dity
	D:\Users\Michael\Desktop\Radioddity DB25-D update\C7000_DR300UV_Ham_DB25D_ES_20210729 bin	IAP	

- 18. As soon as the update has finished on the Radioddity DB25-D, the radio will automatically shut down, whereas the Radioddity GD-88 will state the following on its screen 'Status: Rec Done!'. If you have just updated one of the two GD-88 VFOs it is now time to select the second VFO (long press of the upper side key) and update it with its corresponding firmware file as well. After you have updated both VFOs of the Radioddity GD-88 turn off the radio.
- 19. You may now normally power on the radio again.

20. To check which firmware version currently is installed, click: MENU  $\rightarrow$  Device Info → Version Radioddity 21. The output will look similar to: 901 Radioddity Radioddity Radioddity Radioddity Radioddity Radioddity © Radioddity 2022 page 178 of 209

## **15 Release notes**

The following table lists the details that had been changed with new versions of the firmware.

Attention: Never update your radio unless it is really required or with other words 'Don't fix it, if it isn't broken'! This cannot be stressed often enough.

#### Firmware Release notes for DB25-D 15.1

revision	Changes	released
909E.D4.EARSAB.014	<ul> <li>Additional icon  whenever promiscuous mode is active</li> <li>Memory assignment for channels and zones now handled dynamically</li> <li>APRS now also transmits whenever under simulation.</li> <li>Added a volume control method:</li> <li>Do not push down the knob, turn the knob to change the channel</li> <li>Push down the knob, turn the knob to change the volume</li> </ul>	2022-12-11
909E.D4.EARSAB.008	<ul> <li>Improved single VFO display (full screen now utilized)</li> <li>Factory reset reverts to the factory settings saved from the CPS</li> <li>Record number / max record number no longer displayed during transfers</li> </ul>	2021-09-02
909E.D4.EARSAB.007	This has been the initial release	2021-05-12

#### 15.2 **Firmware Release notes for GD-88**

Radioddity

15.2	15.2 Firmware Release notes for GD-88			99/	it.
	revision	Changes		released	1
B49E.	.D64.EHRSAB.005.	This has been the initial release		2022-06-30	

Radioddity

15.3 CPS Release notes

The following table lists the details that had been changed with new versions of the CPS.

12.	(12)	
revision	Changes	released
CPS 3.3	<ul> <li>Functionality for full support of</li> </ul>	2022-07-01
DMR CPS_DRS [9.2.11]	Radioddity GD-88 added	2022-07-01
CPS 3.3 DMR CPS_DRS [9.2.9]	<ul> <li>New function 'FactoryReset' for saving personal factory defaults to the radio</li> <li>Additional 'Group call hang time' of 30s and 60s</li> <li>Startup logo exchanged</li> </ul>	2021-09-06
CPS 3.2 DMR CPS_DRS [9.2.1]	<ul> <li>No more unwanted changes of parameters</li> <li>Additional shortcut 'Ctrl+S' for saving the codeplug to the PC</li> <li>Display of readable text instead of codeplug block numbers within the communications window</li> <li>Update of built-in help texts</li> <li>Headlines in channel definitions shortened and no longer truncated</li> </ul>	2021-08-17
Radio	<ul> <li>Renaming of 'GCL' to 'RX Group' within channel settings</li> <li>Correction of popups</li> <li>Proper display of APRS(A) within channel settings</li> <li>Using 'Del' within the 'Contact list' now deletes, starting at the current cursor position</li> </ul>	
CPS 3.1 DMR CPS_DRS [9.1.178]	This has been the initial release	2021-06-01

Radioddity Radioddity

# 16 Quickstart for common use cases

This chapter is rather intended for those users, new to HAM-radio. If you are familiar with analog ham-radio but new to DMR, we suggest to take a closer look at the document we did prepare some time ago (not specific for the DB25-D or GD88 but most topics applicable for the Radioddity DB25-D and GD-88as well. You find the document via our Blog entry at:

https://www.radioddity.com/blogs/all/radioddity-getting-on-air-with-your-dmr-radio

The next subchapters describe the most common use cases for the Radioddity DB25-D and GD-88. Only those CPS menus that are mandatory for the specific operation mode will be covered in the explanations.

If you do not understand all specified parameters that are mandatory for a certain use case, we advise you to read the corresponding paragraphs of this manual. Yes, the manual is quite comprehensive, but it is intended to make it easier for you to get the best results out of your Radioddity DB25-D and Radioddity GD-88.

## 16.1 Simplex analog FM operation with other station

In order to setup the radio for simplex analog FM operation, follow these steps:

- 1. Add a new zone via 'Zone[Channel]' → '+Add' and give it a 'Zone Name' of 'simplex FM'. The new zone will be created and will already contain a channel of either 'CH mode' being 'analog' or 'digital'.
- 2. Setup the channel for 'CH mode' being 'Analog'.
- 3. Give the channel a 'CH Name' of some name, e.g., 'FM simplex'.
- 4. Set both frequencies 'RX Freq' and 'TX Freq' to the very same value (e.g., 145.500 MHz or 432.100 MHz). You may choose any frequency that is allowed for your type of ham radio license, for analog FM operation and not occupied by some other station. Make sure the other station you want to call is setup for the very same simplex frequency.

**Notes:** Do not use GMRS-frequencies or other frequencies that are not allowed to be used for analog FM with an output power of more than allowed for the specific frequency band.

- 5. Set the output 'Power' to 'Low' if the other station is close to yours. If the other station is some miles away, you may need to set it to 'High'.
- 6. Set 'Scan List' to 'off' in order to avoid unexpected behavior.
- 7. Set Bandwidth to either '12.5' or '25' (kHz), depending on your personal requirements. If unsure on that one, set it for '12.5' (kHz).

8. Optional, set 'RX QT/DQT' and 'TX QT/DQT' for any CTCSS or DCS encoding that might be required for connection to the other station. If unsure, set both parameters to 'Off' for not using any CTCSS/DCS decoding and encoding. That will at least allow you to hear the other station, regardless of its CTCSS/DCS settings.

Notes: Within a future version of the CPS the names of those two parameters will be changed to 'RX CTCSS/DCS' and 'TX CTCSS/DCS'.

9. Set APRS to 'Off' for now

Write your settings to the radio. Do not forget to switch to Zone 'simplex FM' and select Channel 'FM simplex' at your Radioddity DB25-D or GD-88. Now you are ready for your very first simplex analog FM QSO.

#### 16.2 **Duplex analog FM operation with a local analog FM-repeater**

First, collect all information that is available for your local FM repeater that you want to connect to. Best source for such is to check with your local HAM radio club ddity or some other local ham operator.

You will need the following details:

- TX frequency of repeater (becomes your RX frequency)
- RX frequency of repeater (becomes your TX frequency)
- Any CTCSS or DCS encoding or decoding required?
- Pilot tone required? Which frequency (e.g., 1750 Hz)?

In order to setup the radio for operating your local FM repeater, follow these steps:

- 1. Add a new zone via 'Zone[Channel]'  $\rightarrow$  '+Add' and give it a 'Zone Name' of 'duplex FM'. The new zone will be created and will already contain a channel of either 'CH mode' being 'analog' or 'digital'.
- 2. Setup the channel for 'CH mode' being 'Analog'.
- 3. Give the channel a 'CH Name' of some name, e.g., 'DB0OHL rpt' (with DB0OHL being the call sign of your local repeater).
- 4. Set the 'RX Freq' equal to the TX-frequency of your local repeater.
- 5. Set the 'TX Freq' equal to the RX-frequency of your coal repeater.
- 6. Set the output 'Power' to 'Low' if the local repeater is close to your location. If the local repeater is some miles away, set it to 'High'. dity
- 7. Set 'Scan List' to 'off' in order to avoid unexpected behavior.

v2.0

- 8. Set Bandwidth to '12.5' (kHz).
- 9. Optional, set 'RX QT/DQT' and 'TX QT/DQT' for any CTCSS or DCS encoding that might be required for connection to the local repeater. If unsure, set both parameters initially for 'Off' for not using any CTCSS/DCS decoding and encoding. That will at least allow you to hear the local repeater.

**Notes:** Within a future version of the CPS the names of those two parameters will be changed to 'RX CTCSS/DCS' and 'TX CTCSS/DCS'.


- 10. Set Encryption to 'Off'
- 11. Set APRS to 'Off' for now
- 12. If a pilot tone is required to activate the repeater, assign the Pilot tone function [1750Hz] to one of the [P]-keys.

CPS_DRS	Preset Buttons-					
Device Info		Long Press Dr	aration	0.58	-	
Basic Parameters					_	
Common Menus						- CORDE
Prompt Tone	Radio Buttons	Long Press Function	ins.	Short Press Functions		
Indicator	P1 key	Undefined	-	Zone switch		
Preset Buttons 🚺	P2 key	Undefined		Promiscuous		
MIC Gain	P3 key	Scan Mode	•	Scan ON/OFF	•	
Quick Msg	P4 key	Scan Mode	•	Scan ON/OFF		
DMR Service	P5 key	Undefined	• 0	1750Hz	ī.	8
APRS	P6 key	Undefined		Undifined	-	T
Encryption			-		-	
Contacts	P7 key	Undefined	•	Undefined	•	
a consta						

13. Write your settings to the radio. Do not forget to switch to Zone 'duplex FM' and select channel 'DB0OHL rpt' (or equivalent) at your Radioddity DB25-D or GD-88. Now you are ready for your very first QSO routed via your local repeater.

### 16.3 Analog FM operation including analog APRS

Using analog APRS does require a bunch of settings to be made within the APRS menu of the Radioddity DB25-D / GD-88 CPS. For initial testing, we advise to use a beacon with a fixed location (1) representing the latitude and longitude (2) of your current QTH. This will make the APRS system available immediately after power up. If you set the beacon for 'GPS Location' (1) you need to wait until the GPS receiver of your Radioddity DB25-D or GD-88 has successfully established a connection to at least 3 satellites. This will be indicated by a green sign  $\heartsuit$  in the middle of the topmost line of the radios display.

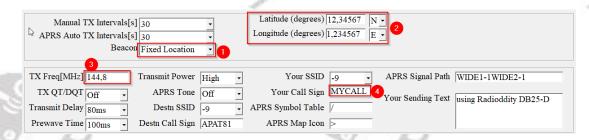

Furthermore, set the analog APRS reporting frequency (3) according to your local requirements. For the US that frequency is 144.3900 MHz, for Europe it is 144.8000 MHz. For all other countries see the details on 'TX Freq [MHz]' regarding that parameter.

Of course, also define your call sign (4) to be used for APRS-reporting. The defined SSID will automatically be added to your call sign. For details on the other parameters, please refer to the chapter on APRS within this addendum.

For analog APRS to work, an analog channel needs to be selected and 'APRS (A)' needs to be assigned as 'APRS' reporting channel for that analog channel.

RX QT/DQT TX QT/DQT '/DQT APRS APRS(A) **Notes:** Only analog channels are supported by analog APRS. Only digital channels are supported by digital APRS.

#### 16.4 Simplex digital DMR operation with other station

In order to setup the radio for simplex digital DMR operation, follow these steps:

1. Within the 'Contacts' menu define a 'Contact Name' with the corresponding 'Contact ID' (DMR ID) of the other station you plan to call. Set the 'Call Type' to

'Private	Call'.	e.g.,	Serial No	Contact name	Contact ID	Call Type
			1	John Doe	1234567	Private call

- 2. Add a new zone via 'Zone[Channel]'  $\rightarrow$  '+Add' and give it a 'Zone Name' of 'simplexDMR'. The new zone will be created and will already contain a channel dity of either 'CH mode' being 'analog' or 'digital'.
- 3. Setup the channel for 'CH mode' being 'Digital'.
- 4. Give the channel a 'CH Name' of some name, e.g., 'DMRsimplex'.

7/17

- 5. Set both frequencies 'RX Freq' and 'TX Freq' to the very same value (e.g., 433.45000 MHz). You may choose any frequency that is allowed for your type of ham radio license, for digital DMR operation and which is not occupied by some other station. Make sure the other station you want to call is setup for the very same simplex frequency.
- 6. Set the output 'Power' to 'Low' if the other station is close to yours. If the other s. Oddity station is some miles away, set it to 'High'.
- 7. Set 'PCT' to 'Patcs'

- 8. Set 'RX TS' and 'TX TS' both to 'On' in order to not use TDMA for dividing the channel into 2 slots
- 9. Set 'RX CC' and 'TX CC' both to the very same value as the other station
- 10. Set 'TX Policy' to 'Impolite'
- 11. Within the field 'Contacts' of the channel definition select the private contact as defined.
- 12. Set Encryption to 'Off'
- 13. Set APRS to 'Off' for now

Write your settings to the radio. Do not forget to switch to Zone 'simplexDMR' and select channel 'DMRsimplex' at your Radioddity DB25-D or GD-88. Now you are ready for your very first simplex digital DMR QSO with the selected station.

# 16.5 Simplex digital DMR operation with Single-HAT hotspot

In order to setup the radio for simplex digital DMR operation, follow these steps:

1. Within the 'Contacts' menu define a TalkGroup ('Contact Name') with the corresponding 'Contact ID' (DMR ID) you plan to use. Set the 'Call Type' to 'Group Call'. e.g.

Serial No	Contact name	Contact ID	Call Type
1	TG 99	99	Group Call

2. Next Create an RX Group that does contain the previously created TalkGroup. e.g.



- 3. Add a new zone via 'Zone[Channel]' → '+Add' and give it a 'Zone Name' of 'simplex HS'. The new zone will be created and will already contain a channel of either 'CH mode' being 'analog' or 'digital'.
- 4. Setup the channel for 'CH mode' being 'Digital'.
- 5. Give the channel a 'CH Name' of some name, e.g., 'HS TG 99'.
- 6. Set both frequencies 'RX Freq' and 'TX Freq' to the very same value (e.g., 433.45000 MHz). You may choose any frequency that is allowed for your type of ham radio license, for digital DMR operation and which is not occupied by some other station. Make sure the simplex hotspot is setup for the very same simplex frequency.

- 7. Set the output 'Power' to 'Low' as your hotspot is quite likely very close to your Radioddity DB25-D.
- 8. Set 'PCT' to 'Patcs'
- 9. Set 'RX TS' and 'TX TS' both to 'On' in order to not use TDMA for dividing the channel into 2 slots.
- 10. Set 'RX CC' and 'TX CC' both to the very same value as your hotspot (normally '1').
- 11. Set 'TX Policy' to 'Impolite'
- 12. Set 'RX Group' to the previously defined RX group 'My RX Grp'.
- 13. Within the field 'Contacts' of the channel definition select the TalkGroup as previously defined (e.g., 'TG 99').

adio

- 14. Set Encryption to 'Off'
- 15. Set APRS to 'Off' for now

Write your settings to the radio. Do not forget to switch to Zone 'simplex HS' and select channel 'HS TG 99' at your Radioddity DB25-D or GD-88. Now you are ready for your very first simplex digital DMR QSO using your hotspot.

#### **Duplex digital DMR operation with Dual-HAT hotspot** 16.6

In order to setup the radio for duplex digital DMR operation, follow these steps:

1. Within the 'Contacts' menu define a 'Contact Name' with the corresponding 'Contact ID' (DMR ID) of the other station or TalkGroup you plan to call. Set the 'Call Type' to the required Call Type. Normally other stations require a Private ddity Call, whereas TalkGroups require a Call Type of Group Call. e.g.

	Serial No	Contact name	Contact ID	Call Type
	1	WW	91	Group Call
	2	Germany	262	Group Call
	3	TG8->26243	8	Group Call
	4	Parrot	262997	Private call -
a Ra	diod	dit,		Radio

Radioddity

- 2. Next Create an RX Group that does contain the previously created TalkGroup(s).
  - e.g.

- <u>&amp;</u> 1_TS1 - <u>&amp;</u> 2_TS2	3_My RX Grp RX Group List <mark>My RX Grp</mark>	🔶 Xda 🕒 Dal	1
4_ 4_	Optional Digital Contacts	Selected Digital Contacts          1       WW         3       TG8>>26243         2       Germany	dity

- 3. Add a new zone via 'Zone[Channel]' → '+Add' and give it a 'Zone Name' (e.g. 'My Hotspot'. The new zone will be created and will already contain a channel of either 'CH mode' being 'analog' or 'digital'.
- 4. Setup the channel for 'CH mode' being 'Digital'.
- 5. Give the channel a 'CH Name' of some name, e.g., 'HS WW'.
- 6. Set the 'RX Freq' and 'TX Freq' to the values required by your duplex hotspot.
- 7. Set the output 'Power' to 'Low' as you are just operating your radio with a hotspot probably just a few meters apart from your DB25-D or GD-88.
- 8. Set 'PCT' to 'Patcs'
- 9. Set 'RX TS' and 'TX TS' both to the required Time Slot.
- 10. Set 'RX CC' and 'TX CC' both to the value required by your local hotspot.
- 11. Set 'TX Policy' to 'Impolite'
- 12. Within the field 'Contacts' of the channel definition select one of the contacts as defined.
- 13. Assign the previously assigned RX-Group to that channel. Make sure, that the contact you assigned in the previous step (if of Call Type 'Group Call') is also a member of that RX-Group.
- 14. Set Encryption to 'Off'
- 15. Set APRS to 'Off' for now

Write your settings to the radio. Do not forget to switch to Zone 'My Hotspot' and select channel 'HS WW' at your Radioddity DB25-D or GD-88. Now you are ready for your very first digital DMR QSO via your duplex hotspot.

### 16.7 Digital DMR operation with digital repeater

In order to setup the radio for duplex digital DMR operation, follow these steps:

1. Within the 'Contacts' menu, define a 'Contact Name' with the corresponding 'Contact ID' (DMR ID) of the other station or the TalkGroup you plan to call. Set the 'Call Type' to the required Call Type. Normally other stations require a Private Call, whereas TalkGroups require a Call Type of Group Call. e.g.

Serial No	Contact name	Contact ID	Call Type
1	WW	91	Group Call
2	Germany	262	Group Call
3	TG8->26243	8	Group Call
4	Parrot	262997	Private call -
-			

2. Next Create at an RX Group that does contain the previously created TalkGroup(s). We advise to create two RX-groups, one acting as a container for all TalkGroups that do require Time Slot 1 (name that one 'TS 1') and the second RX-group for those TalkGroups requiring Time Slot 2 (name that 'TS 2' accordingly). e.g.

	RX-Group 'TS 1'	RX-Group 'TS 2'		
2,152 3,1Mp RX Grp 4_	1.151       RX Group List       Optional Digital Contacts       3 _ TO8 ~ 26243       Image: Contact of the second	2. 152 RX Group Lie 22 3. My RX Grp 4. Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Contacts Con		
a R		Ro		

- 3. Add a new zone via 'Zone[Channel]' → '+Add' and give it a 'Zone Name' (e.g. name it according to the local repeater's call sign you plan to use, e.g., 'DBOOHL'. The new zone will be created and will already contain a channel of either 'CH mode' being 'analog' or 'digital'.
- 4. Setup the channel for 'CH mode' being 'Digital'.
- 5. Give the channel(s) a 'CH Name' of some name, e.g., 'OHL WW', 'OHL-German', 'OHL-TG8', 'OHL-Parrot, ....

Z	-1	CH mode	CH Name
1		Digital	OHL-WW
2		Digital	OHL-German
3		Digital	OHL-TG8
4		Digital	OHL-Parrot

- 6. Set the 'RX Freq' and 'TX Freq' to the values required by your local repeater.
- 7. Set the output 'Power' to 'Low' if your location is close to the local repeater. If you are not able to hit the repeater with the 'Low' setting, change it to 'High'.
- 8. Set 'PCT' to 'Patcs'

- 10. Set 'RX CC' and 'TX CC' both to the value required by your local repeater.
- 11. Set 'TX Policy' to 'Impolite'
- 12. Within the field 'Contacts' of the channel definition select one of the contacts as defined.
- 13. Assign the previously assigned RX-Group(s) to the channel(s). Make sure, that the contact you assigned in the previous step (if of Call Type 'Group Call') is also a member of the specific RX-Group.
- 14. Set Encryption to 'Off'
- 15. Set APRS to 'Off' for now

Radioddity

Radioddity

Write your settings to the radio. Do not forget to switch to Zone 'My Hotspot' and select channel 'HS WW' at your Radioddity DB25-D or GD-88. Now you are ready for your very first digital DMR QSO via your duplex hotspot.

The following shows an example of those main parameters (not all possible parameters are shown).

Z-1	CH mode	CH Name	RX Freq	TX Freq	Power	PCT	RX TS	TX TS	RX CC	TX CC	TX Policy	RX Group	Contacts	APRS
1	Digital	OHL-WW	438.23750	430.63750	High	Pates	Slot 1	Slot 1	1	1	Impolite	TS1	WW	Off
2	Digital	OHL-German	438.23750	430.63750	High	Pates	Slot 1	Slot 1	1	1	Impolite	TS1	Germany	Off
3	Digital	OHL-TG8	438.23750	430.63750	High	Pates	Slot 2	Slot 2	1	1	Impolite	TS2	TG8->26243	Off
4	Digital	OHL-Parrot	438.23750	430.63750	High	Pates	Slot 2	Slot 2	1	1	Impolite	TS2	Parrot	Off

Radioddity

Radioddity

The Radioddity DB25-D as well as the Radioddity GD-88 have various sockets for connecting power, antennas, speaker-microphone, programming cable and other accessories. Their internal connections are as follows:

### 17.1 Power connector of DB25-D

The connector is of so-called T-type and often used within cars for 2pin connections. Your Radioddity DB25-D comes with the proper counterpart, connected to a plug that does fit in a car's cigarette lighter socket in order to power your radio within seconds, without the hassle of any specific wiring for your car.

Attention: Do not power the Radioddity DB25-D with more than 13.8V DC.

## 17.2 HF Antenna connector of DB25-D

Socket of type SO-239, requiring a plug of type PL-259. Do not mount an antenna (without a cable) directly to the Radioddity DB25-D as radiated HF may have a negative impact on the radio's operation and may also influence your car's electronics. Make sure the antenna is matched for 2m & 70cm frequency band.

**Notes:** If using an external switching power supply for operating the Radioddity DB25-D at your home, make sure that the cable for the antenna and for the power supply are routed as far away from each other as possible. If you encounter sudden reboots of the radio, put an additional clip-on ferrite on the power cable, close to the radio.

# 17.3 GPS antenna connector of DB25-D

Socket of type SMA-female, requiring antenna with plug of type SMA-male. The GPS antenna that comes with the Radioddity DB25-D is a passive one and absolutely sufficient for use with the Radioddity DB25-D.

If you plan to add an external antenna to the Radioddity DB25-D you need to make sure that sufficient signal input level gets to the Radioddity DB25-D. This will more or less require the use of an active GPS antenna. The option of active antennas often requires a DC voltage coupled from the radio (here Radioddity DB25-D) via the antenna line to the GPS antenna. The Radioddity DB25-D does not provide such DC coupling. If your active GPS antenna comes with an external power supply, it should work. However, we do not recommend to use any other GPS antenna than the passive one that came with the Radioddity DB25-D.

### 17.4 RJ45 Speaker-Microphone connector of DB25-D

The Speaker-Microphone is connected via its RJ45-plug to the RJ45-socket of the Radioddity DB25-D.

The RJ45 socket may also be used for programming the radio. It is based on 3.3 V signals. The transmission speed is 115.2 kbaud.



Signal name	RJ45	Color	Speaker-Microphone*
Power Off (if connected to GND)	1	Grey	n.c.
PTT/Radio RXD (Data to Radio)	2	Blue	5
Microphone Audio	3	White	3
Cable Shield / analog ground	4	Silver	4
Radio TXD (Data from Radio)	5	Yellow	n.c.
Signal Ground	6	Black	6
+8V	7	Red	70~/
Speaker Audio	8	Green	8
*) Numbers as stated on th	a Craal	or Micron	hone internal DCD

*) Numbers as stated on the Speaker-Microphone internal PCB

# 17.5 K1 connector of DB25-D

At the left side of the radio there is a K1 socket with the following pin assignment:

Signal name	K1
PTT / Radio RXD (Data to Radio)	3.5 mm sleeve
Microphone+	3.5 mm ring
+5V via 100 Ω	3.5 mm tip
GND	2.5 mm sleeve
Radio TXD (Data from Radio)	2.5 mm ring
Speaker+	2.5 mm tip

oddity

### 17.6 HF Antenna connector of GD-88

Socket of type SMA-f, requiring a plug of type SMA-m.

# 17.7 Battery connector of GD-88

The battery is connected to the radio via a 2-pin spring-type connector that seals with the battery.

Attention: Do not charge the radio while operating as such may cause damage to the charger.

### 17.8 K1 connector of GD-88

At the right side of the radio there is a K1 socket with the following pin assignment:

Signal name	K1
PTT / Radio RXD (Data to Radio)	3.5 mm sleeve
Microphone+	3.5 mm ring
+5V via 100 Ω	3.5 mm tip
GND	2.5 mm sleeve
Radio TXD (Data from Radio)	2.5 mm ring
Speaker+	2.5 mm tip





# **18 Technical specifications**

All of the following technical specifications are subject to change without further notice.

#### 18.1 **General specifications of the DB25-D**

Parameter Frequency	<b>VHF</b> 136174 MHz	UHF 400480 MHz
Frequency Stability		5 ppm
Гуре		standby, Dual mode
Digital mode	TDMA 2-Time Slot technology (Tier 1 and Tier 2)	
Digital vocoder	AME	3E+2™
Digital agreement	ETSI-TS 102 361-1, -2, -3	
Zones	16	
Channel Capacity	Up to 4000 (250 Channels per Zone)	
PLL Channel Spacing		z / 25 kHz
Operating Temperature	-20° C +60° C	
Antenna Impedance	50 Ω	
Rated Voltage	13.8 V	DC ±10%
1	Standby: 0.1 A	
Current Consumption	Receive: 0.3 A	
	Transmit: 3 A	
Dimension (H x W x D)	121.5 mm x 65.5 mm x 42.5 mm	
Weight (without microphone)	15	00 g
Compatible With American Mil	itary Standard (MIL-	STD-810C/D/E)

Radioddity

Radioddity

#### **Receiver of the DB25-D** 18.2

Parameter	VHF UHF	
Frequency Range	136174 MHz 400480 MHz	
Channel Spacing	12.5 kHz / 25 kHz	
Operating Bandwidth	≤±5 kHz @ 12.5 kHz / ≤±7 kHz @ 25 kHz	
Frequency stability (-20 °C +25 °C)	± 1.5 ppm	
IFs	51.550 MHz	
FM modulation Type	12.5 kHz: 11KOF3E / 25 kHz: 16KOF3E	
Sensitivity (12 dB SINAD)	0.25 μV @ 12.5 kHz / 0.2 μV @ 25 kHz	
Squelch Selectivity	0.2 μV @ 12.5 kHz / 0.15 μV @ 25 kHz	
Analogue sensitivity	0.3 μV / 0.25 μV	
Digital sensitivity (5 % BER)	0.25 μV / 0.2 μV	
Intermodulation	≥70 dB	
Adjacent Channel Selectivity	≥65 dB @ 12.5 kHz / ≥70 dB @ 25 kHz	
Spurious rejection	65 dB	
Image Rejection	≥70 dB	
Rated audio	500 mW	
Audio Distortion @ rated audio	≤5 %	
FM hum & noise	-40 dB @ 12.5 kHz / -45 dB @ 25 kHz	
Audio response	+1 dB, -3 dB	
Conducted / radiated emission	-57 dBm	

#### Transmitter of the DB25-D 18.3

Parameter	VHF	UHF
Frequency Range	144148 MHz	420450 MHz
Channel Spacing	12.5 kHz / 25 kHz	
Frequency stability (-20°C, +25°C)	± 1.	5 ppm
Low Power	5 W	5 W
High Power	20 W	20 W
FM modulation Type	12.5 kHz: 11KOF3	E / 25 kHz: 16KOF3E
Modulation restriction	±2.5 dB @ 12.5 kHz / ± 5 dB @ 25 kHz	
FM hum & noise	-40 dB @ 12.5 kH	z / -45 dB @ 25 kHz
Conducted / radiated emission	-36 dBm < 1GHz	/ -30 dBm > 1 GHz
Adjacent channel selectivity	-60 dB @ 12.5 kH	z / -65 dB @ 25 kHz
Maximum Deviation	≤±2.5 kHz	z @ 12.5 kHz
Maximum Deviation	≤±5.0 kHz @ 25 kHz	
Spurious Emission	≤65 dB below carrier	
Modulation Distortion	≤5 % (3003000 Hz)	
Audio Response	+1 d	B, -3 dB
Audio Distortion		3%
	12.5 kHz data: 7K	60F1D and 7K60FXD
4FSK digital modulation	12.5 kHz audio:7k	60F1E and 7K60FXE
"Oddity	~	"Odd

## 18.4 General specifications of the GD-88

Parameter	VHF	UHF	
Frequency	136174 MHz	400470 MHz	
Tuno	Dual band, Dual	standby, Dual mode,	
Туре	Du	ial VFO	
Digital mode	TDMA 2-Time Slot technology		
	(Tier 1	and Tier 2)	÷.,
Digital vocoder	AM	1BE+2™	17
Digital agreement	ETSI-TS 10	)2 361-1, -2, -3	٠.
Zones		16	1
Channel Capacity	Up to 4000 (250	Channels per Zone)	
PLL Channel Spacing			
Operating Temperature	0° C	+40° C	
Antenna Impedance		50 Ω	
LiPo Battery	7.4V /	3000 mAh	
Rated Voltage	D	C 7.4V	
Dimension (H x W x D)	125 mm x 6	50 mm x 39 mm	
Weight		317 g	
Battery:		- Oc	12
The average battery life under 5/5/	'90 duty cycle, and u	sing carrier squelch	1.9
and TX high power with 3000mAh l	LiPo battery		6
Analog: 15 hours / Digital: 23 hours	5		1

### 18.5 Receiver of the GD-88

Parameter	VHF	UHF
Frequency Range	136174 MHz	400480 MHz
Operating Bandwidth	≤±5 kHz @ 12.5 kH	z / ≤±7 kHz @ 25 kHz
Frequency stability (-20 °C +25 °C)	±1.	5 ppm
IFS 901:	mixing 45 MH	Iz in segment A
IFS TYLO	mixing 51.550 N	VHz in segment B
FM modulation Type	12.5 kHz: 11KOF3	E / 25 kHz: 16KOF3E
Analogue sensitivity	0.3 μV	/ 0.25 μV
Digital sensitivity (5 % BER)	0.25 μV / 0.2 μV	
Intermodulation	65	5 dB
Adjacent Channel Selectivity	≥60 dB @ 12.5 kH	z / ≥65 dB @ 25 kHz
Spurious rejection	65 dB	
Rated audio	500 mW	
Audio Distortion @ rated audio		3 %
FM hum & noise	-40 dB @ 12.5 kH	z / -45 dB @ 25 kHz
Audio response	+1 dł	3, -3 dB
Conducted / radiated emission	-57	dBm
adioddity		adiodd

### 18.6 Transmitter of the GD-88

Radioddity

Radioddity

Parameter	VHF	UHF
Frequency Range	136174 MHz	400480 MHz
Frequency stability (-30°C, +25°C)	± 1.	5 ppm
Low Power	2.5 W	2.5 W
High Power	7.0 W	7.0 W
FM modulation Type	12.5 kHz: 11KOF3	E / 25 kHz: 16KOF3E
Modulation restriction	±2.5 dB @ 12.5 kł	Hz / ± 5 dB @ 25 kHz
FM hum & noise	-40 dB @ 12.5 k⊢	lz / -45 dB @ 25 kHz
Conducted / radiated emission	-36 dBm < 1GHz	: / -30 dBm > 1 GHz
Adjacent channel selectivity	-60 dB @ 12.5 kHz / -65 dB @ 25 kHz	
Maximum Deviation	≤±2.5 kHz @ 12.5 kHz	
Maximum Deviation	≤±5.0 k⊢	lz @ 25 kHz
Spurious Emission	≤65 dB below carrier	
Audio Response	+1 d	B, -3 dB
Audio Distortion	A P	3%
20	12.5 kHz data: 7K	60F1D and 7K60FXD
4FSK digital modulation	12.5 kHz audio:7k	K60F1E and 7K60FXE
"Odela	12.5 kHz data a	nd audio:7K60F1W

Radioddity


Radioddity

# **19 Certification**

The Radioddity DB25-D and Radioddity GD-88 are both certified according to FCC part 90. They may also be sold in the European Community as both radios are also conformant to the European regulations. This is attested by the following certificates.


### 19.1 FCC part 90 approval for DB25-D

Below you find a copy of the FCC part 90 approval for our Radioddity DB25-D mobile radio.

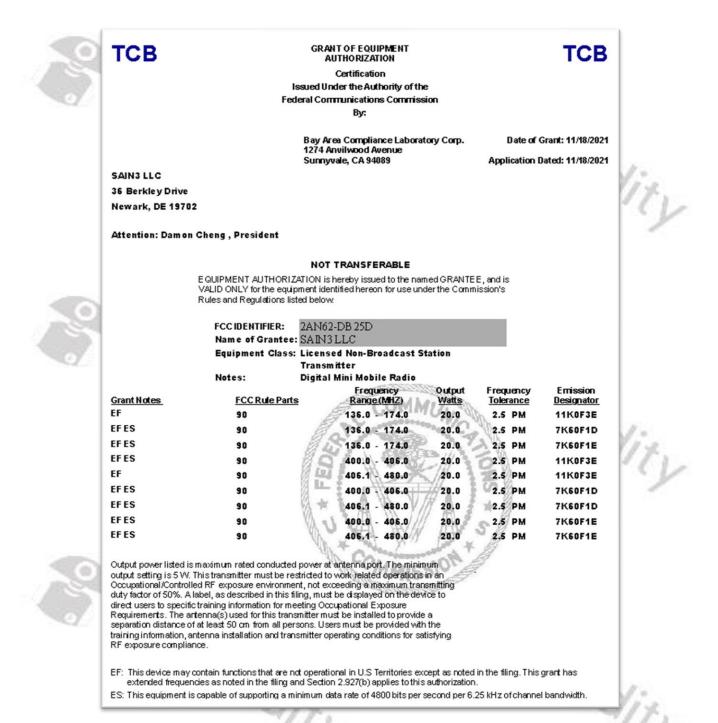



# FCC part 90 approval for GD-88 19.2 Below you find a copy of the FCC part 90 approval for our Radioddity GD-88 handheld radio. ľ., GRANT OF EQUIPMENT тсв TCB AUTHORIZATION Certification Issued Under the Authority of the Federal Communications Commission By: MICOM Labs Date of Grant: 06/30/2022 575 Boulder Court Pleasanton, CA 94566 Application Dated: 06/30/2022 SAIN3 LLC 36 Berkley Drive Newark, DE 19702 Attention: Damon Cheng , President NOT TRANSFERABLE EQUIPMENT AUTHORIZATION is hereby issued to the named GRANTEE, and is VALID ONLY for the equipment identified hereon for use under the Commission's Rules and Regulations listed below, FCC IDENTIFIER: 2AN62-GD88 Name of Grantee: SAIN3 LLC Equipment Class: Scanning Receiver Notes: Digital Mobile Radio Frequency Output Frequency Emission Range (MHZ) Grant Notes FCC Rule Parts Watts Designator To erance 15B 136.0 - 174.0 15B 400.0 - 480.0 adity dity

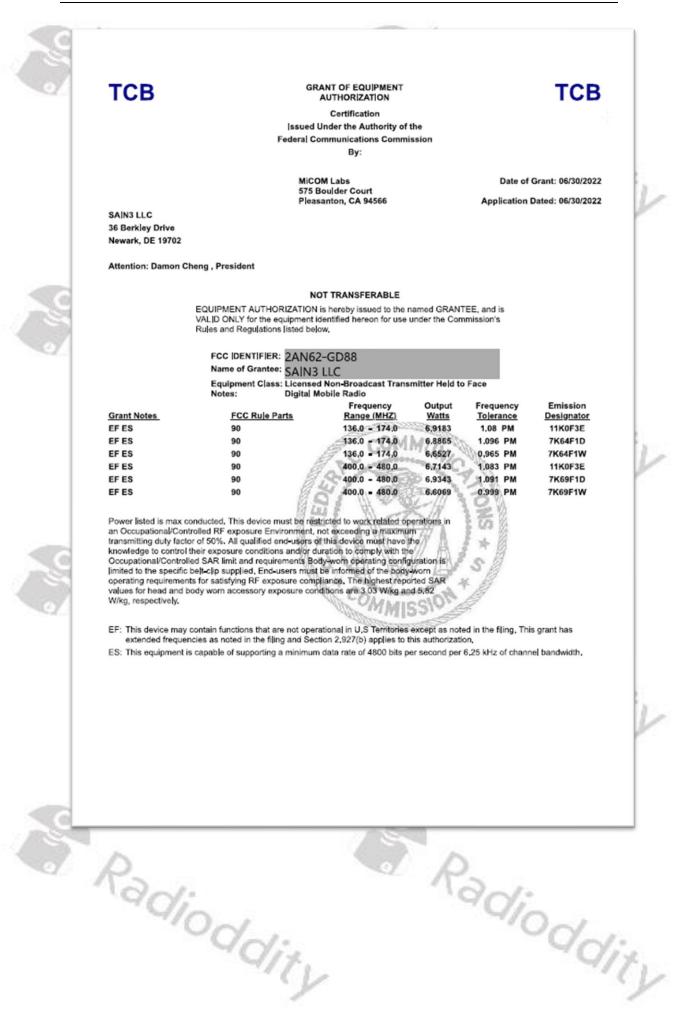

v2.0 19.3 CE certificate for DB25-D Below you find a copy of the CE certificate for our Radioddity DB25-D mobile radio. USA: TCB, ISED: FCB Japan: RCB, OFCA: FCB, IMDA: CAB **Type Examination Certificate** Notify Body RED Directive 2014/53/EU Notify Body EMCD Directive 2014/30/EU DIRECTIVE 2014/53/EU EU TYPE EXAMINATION CERTIFICATE NOTIFIED BODY: 1313 Certificate No.: B21120313 Date of Issue: 2021-12-22 SAIN3 LLC Manufacturer: 36 Berkley Drive, Newark, DE 19702, United States Trade Name: Radioddity Product Designation: DB25-D, DB20-D Product Description: Digital Mini Mobile Radio Essential Requirements **Examined Documentation** Results Web: www.baclcorp.com RED Safety Technical documentation & Test report Conform Article 3.1(a) RED Health Technical documentation & Test report Conform Sunnyvale, CA 94089, USA Article 3.1(a) Bay Area Compliance Laboratorics Corp. (BACL) 274 Anvilwood Avenue, Sunnyvale, CA 94089, US RED EMC Technical documentation & Test report Conform Article 3.1(b) RED Conform Radio Technical documentation & Test report Article 3.2 Fax: 1 (408) 732-9164 RED Delegated Not Applicable Technical documentation & Test report Article 3.3 Acts This EU-Type Examination Certificate is issued in according with Annex III, Module B of Council Directive 2014/53/EU of 16 April, 2014 and is only valid in conjunction with the attached Appendixes. The scope of EU Type Examination only relates to the submitted documentation. Marking: The product shall be marked with the CE marking as required in the Council Directive 2014/53/EU er of Appendixes to this certificate: 1 Tel: 1 (408) 732-9162 Jimm Xiao Authorized by: Jimmy Xiao Certifier Radioddity Radioddity

19.4

radio.


67568C4CE55E4E478277F6CFE77E1238






v2.0

568C4CE55E4E478277F6CFE77E12

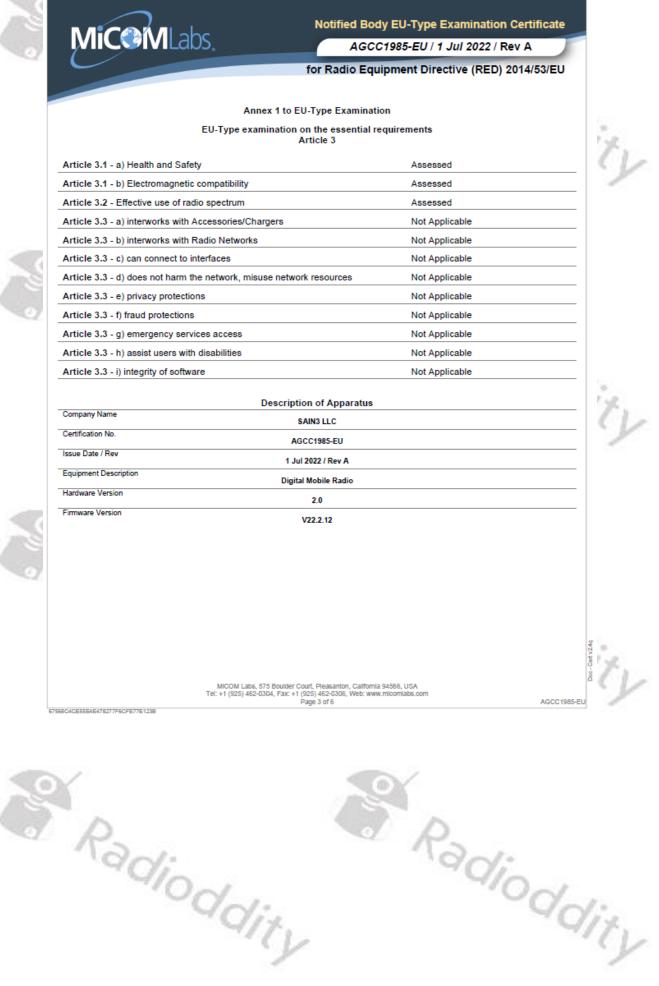

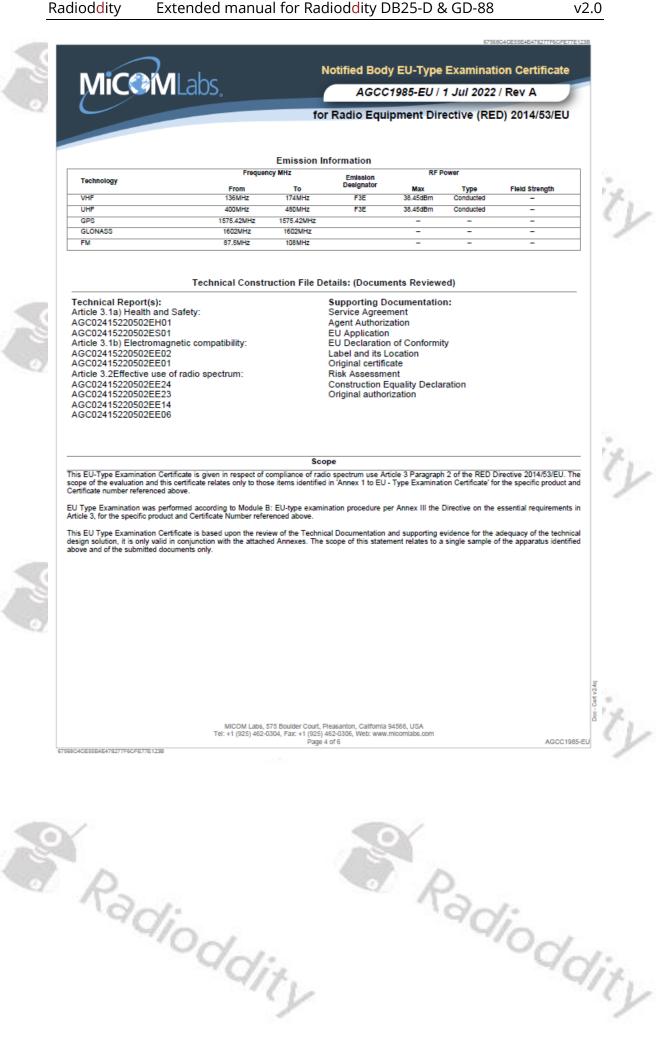

Problem	Solution
Radio fails to power on	12-in
Channel selector knob does	Turn on Channel Switch:
no longer allow to switch	MENU (press knob) $\rightarrow$ Local Set $\rightarrow$ Channel Sw
between the channels	→ SELECT (press knob to change setting)
4	When the indicator turns GREEN, you have
	again assigned the Channel select function to
	the knob.
Do not want to be	Turn off Dual-Channel mode: MENU (press
nterrupted by activity on	knob) -> Local Set -> DisplayMode -> S/D Mode
second channel (which is	Sw -> MENU (press knob to change setting)
not selected)	When the indicator turns GREEN, you have set
iot selected)	it for Single Channel Mode Display.
~	When the indicator turns RED, you have set it
NO	for Dual Channel Mode Display.
Contact details not shown	Make sure that the Ham contacts have been
	imported from a CSV file, sorted by ascending
during conversation 🛄	DMR IDs. If you want all details, make sure you
-0	did the 128 bytes/record import and turn off
0.704	Dual-Channel mode: MENU (press knob) ->
	Local Set -> DisplayMode -> S/D Mode Sw ->
	MENU (press knob to change setting)
	When the indicator turns GREEN, you have set
$\sim$	it for Single Channel Mode Display.
	When the indicator turns RED, you have set it
-	for Dual Channel Mode Display.
Activities on even not	Turn off any SCAN-mode as the scanning
selected VFO does activate	feature requires the unselected VFO.
squelch	40
Message 'The COMM port is	Currently the CPS as well as the IAP only
occupied or doesn't exit!' or	support virtual COM-ports 'COM1' up to 'COM8'.
DATA MISTAKE' when trying	You may change the assigned virtual COM-port
to connect the radio with	using the device manager of your Windows-OS.
the CPS or the IAP	
	Advanced Settings for COM13
	Image: FIFD buffers (requires 16550 compatible UART)         OK           Select lower settings to correct connection problems.         Count of the settings to correct connection problems.
1	Select higher settings for faster performance.
X.	Beceive Buffer: Low (1) High (14) (14)
	Iransmit Buffer: Low (1)
	COM Port Number: COMS
To-A	USB Selective Suspend Ide Timer (secs): 10
401	Disable DTR,RTS INIT signal (Ex: disable Serial Mouse/Modern detection)      Drange DTR,RTS INIT Level Shift (from TTL=H1GH,RS232=LOW to TTL=LOW,RS232=H1GH)
Radiod	Disable Device USB Serial Number in Windows Registry (uncheck to Enable) Driver Buffer State: 4096 (0 to 4096 bytes)
~0~	
4	

Problem	Solution
Sometimes a 'Run time	Make sure you did install the CPS as
error 6' is been thrown	administrator in order to avoid such.
Analog APRS does not work	Analog APRS currently only works if an analog
1 and	channel has been selected, the proper analog
9910	APRS settings have been applied and an analog
NO'	iGate is within RF-coverage.
40	Make sure 'Analog APRS' or 'DMR+Analog APRS'
4	is selected at the radio within the menu
	'Appendix $\rightarrow$ APRS $\rightarrow$ APRS Type'
Digital APRS does not work	Digital APRS only works if a digital channel has
	been selected and the proper TalkGroup has
	been assigned for the defined reporting
~	channel.
	Make sure 'DMR APRS' or 'DMR+Analog APRS' is
	selected at the radio within the menu
P	'Appendix → APRS → APRS Type'
Cannot use the Radioddity	If it is pistar-based and single-hat, you need to
DB25-D with my local	set both, 'TX TS' and 'RX TS' to 'On' within the
simplex hotspot	corresponding channel definitions of our CPS.
Radio reboots whenever I	• Use an external antenna (suitable for the 2m
press [PTT]	and 70cm band) connected via an antenna
	cable to the radio.
	• Use clip-on ferrites and place one of those on
	the power cord, close to the radio body.
	<ul> <li>Route the power cord and antenna cable</li> </ul>
	separate as far away from each other.
	<ul> <li>Directly wire the radio to the car battery</li> </ul>
-	without using the cigarette lighter socket.
P	Often the connection between a cigarette-
Radia	lighter plug and its socket causes such issue
-910	whenever a higher current is drawn.
100	<ul> <li>Make sure the battery is fully charged and</li> </ul>
40	provides sufficient voltage and power
If analog VFO-mode is	Check the setting of RXOnly using the Channel-
selected, transmitting is not	Edit function as described in chapter 10.12
possible	Channel Edit 🔕 on page 93.
l do not understand those	You are using an old version of our CPS. Please
CPS parameters such as RX	update the radio firmware and install the
Time, TX Time, GCL	newest CPS. Both to be found in our support
	area for the Radioddity DB25-D.
Cannot communicate with	Make sure the radio is turned on and the
the radio	supplied programming cable is plugged in on
an.	both, the radio and the PC. Make sure the
40	driver is installed.
OC-	· · · · · · · · · · · · · · · · · · ·
~0	12. 20
- V /	


Problem	Solution
Cannot hear the local DMR-	For each TalkGroup that you do want to
repeater	operate, you will need a separate channel. Each
	digital channel should have a reference to a
Ton	specific Contact (TalkGroup) and to a so-called
90;	RX-group that also does have the channels
Radiod	TalkGroup as a member. Ham operators often
~0~	
40	do place all TalkGroups that are assigned to
	Time Slot 1 within one TalkGroup and all
	TalkGroups that are assigned to Time Slot 2
	within another RX-group. If there is no RX-
	group assigned to a channel, you will only be
	able to receive direct calls to your own DMR ID.
Whenever I try to TX on a	'BS Failed' stands for 'Base Station failed' and
digital channel I get a 'BS	can have various reasons:
failed' message on the radio	<ul> <li>Wrong TX frequency</li> </ul>
screen	Wrong RX frequency
Radio~	Wrong Color Code
410	<ul> <li>No Contact (and its Call Type) defined within</li> </ul>
.00	call
40	Addressed timeslot currently occupied by
4	another caller
	<ul> <li>The radio had incorrectly programmed an</li> </ul>
	analog repeater in digital mode
l can no enter the radio	Make sure that you have not activated the
menu by using the channel	keypad lock. To unlock, long press the [ENC]
knob	button.
When operating in analog	Check if your currently selected channel is also
mode and releasing the	a member of a Scan List and you have activated
[PTT] there is a delay of	automatic scanning. The described behavior
about 30 seconds before I	exactly happens, whenever you have scanning
can hear someone else.	activated and there is no more signal detected
"ON	on the currently selected channel and thus
40	starting the scanning process again. Depending
4	on the number of channels that are member of
	the scan-list it may take some seconds until the
	channel in question will be checked again.
	Scanning an analog channel takes significantly
	longer, than scanning a digital channel.
In analog mode I am	The radio does support all 83 codes as
missing a lot of DCS tones	standardized by the Telecommunications
5	Industry Association plus additional 20 DCS
	codes. If it is not within those codes as listed in
Real	chapter 13.25 CTCSS sub audio and DCS
- Qi-	signaling on page 170 it is not supported.
-'0~	
40	12 40
	P
	1.1.

# 21 Where to find support material

Please kindly note that all the firmware, software, and user manuals can be found in the Support area of our official website by following these steps:

<u>https://www.radioddity.com/</u>  $\rightarrow$  Support  $\rightarrow$  Radioddity  $\rightarrow$  click on 'DB25-D' or 'GD-88'

As for the Radioddity DB25-D the resulting support page will look similar to the following:

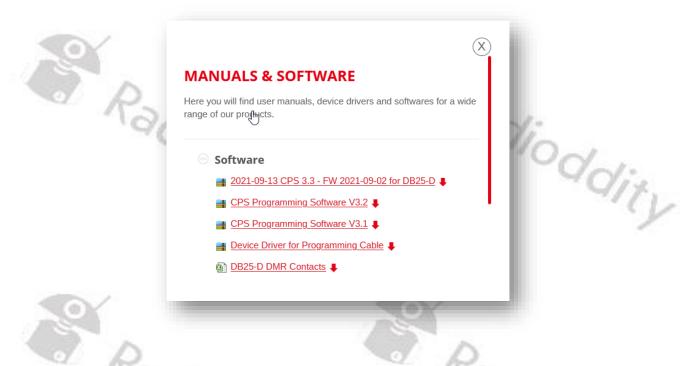

As soon as any new file becomes available (such as firmware updates, updated manuals or others), it will be published within our support area.

**Notes:** The 'Manual' paragraph is underneath the 'Software' paragraph. Use the red scroll bar to the right to navigate there.

Radioddity Radioddity

We would like to thank all Radioddity DB25-D customers for their constructive feedback.

If you do find any bug in the radio's firmware, our CPS, this documentation or if you are missing a feature, you would have expected, write an email to <u>support@radioddity.com</u>. In general, the software- and firmware-updates for your Radioddity DB25-D and Radioddity GD-88 are free of charge. Using a CPS or a firmware not originating from Radioddity may void your warranty.

Thank You for Shopping at Radioddity!

FIND TUTORIALS, SUPPORT AND MORE AT:



https://www.radioddity.com/

https://www.facebook.com/radioddity

You Tube

https://www.youtube.com/c/Radioddityradio

Radioddity Radioddity

'dioddity

dity