

Instruction Manual

RS68



Please read this instruction manual carefully before using and keep it safe for future reference.

WARNING



Use / Safety Instructions

Please read all safety instructions carefully before use.

Please keep the manual safe for future reference.

Please follow the instruction manual.


- * If there is any problem with the product, please contact the supplier and do not attempt to repair the product yourself.
- * Do not use the product under the following conditions, or it may cause electric shock, fire or other damage: in the bathroom, in a very hot or humid environment, near dripping water.
- * Do not use water to rinse or any corrosive liquid to wipe any part of the product, which may cause damage to the internal electronic components and appearance of the product.
- * Please cut the power off after the product is fully charged and place it in a cool and dry place. Please charge the product at least once every three months to avoid over-discharging of the battery.
- * It is forbidden to discard, incinerate or dissolve discharged batteries, they should be disposed of by a professional recycling agency.
- * If you need to transport the product, please make sure that the main unit is turned off and it is recommended to use the original packaging.

Battery charging and maintenance

This unit is able to operate on a built-in Li-ion battery that can be recharged with a power adapter.

- * When using it for the first time, please charge the unit for 3 to 4 hours to have it fully charged.
- * During use, if the sound or LED light starts to indicate that the battery is low, please recharge.
- * Do not let the product discharge completely when not in use for a long time. It should be charged every 3 to 4 months.
- * Ensure that the voltage and current settings of the power supply are appropriate for the battery pack being charged.
- * Recycle Li-ion batteries. Do not dispose of it in the trash.

Control Panel

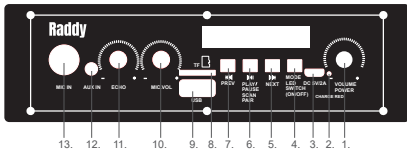

1. VOLUME/POWER: Rotate clockwise to switch speaker on and increase volume. Rotate counterclockwise to decrease volume and switch the speaker off.
2. CHARGE RED: The RED LED will be on when charging. It will turn off once the battery is fully charged.

Warning: Please use a 5V power supply only. Higher voltage can damage the speaker.

3. DC 5V/2A: Use a DC 5V/2A power adapter to charge the speaker. Please charge the speaker when the display indicates the battery is low.
Attention: Please turn off the unit when charging.
4. MODE/LED SWITCH(ON/OFF): Press to select Bluetooth, AUX, FM, keep pressing to cycle through possible functions.Hold to turn on/off speaker LED light.
5. NEXT: Press to play the next sound track. In FM mode,press to select next FM station.
6. PLAY/PAUSE/SCAN/PAIR: Press to play music, press again to pause music.
In FM mode, press to scan the FM stations and the station frequency will be saved automatically. In Bluetooth mode, hold the button to disconnect the Bluetooth connection.
7. PREV: Press to play previous sound track. In FM mode, press to select previous FM station.
8. TF: Insert a TF card to play music. When inserted, the unit will switch to TF mode automatically.
9. USB: Insert a USB to play music. When inserted the unit will switch to USB mode automatically. Please note: If a TF card and a USB are both inserted, the songs on both will keep looping.
10. MIC. VOL: Rotate to adjust microphone volume.
11. ECHO: Rotate to adjust echo sound effect.
12. AUX IN: Connect an external audio device to speaker.
13. MIC IN: Connect a microphone.

PAIRING A BLUETOOTH DEVICE

1. Turn on the Bluetooth on your device.
2. Turn on the speaker, it will enter Bluetooth mode and you will hear a voice prompt, then the unit will automatically go into pairing mode to search for Bluetooth device. You will know you are in pairing mode when the "bt" on the display is flashing.
3. Navigate to your device's Bluetooth setup, find "RS68" and connect it. "bt" will stop flashing if connected successfully.
4. If your device is not able to pair with the unit, check whether it has been connected with another device, break the previous Bluetooth connection and reboot the Bluetooth. Hold the PLAY/PAUSE button to disconnect the Bluetooth and re-enter pairing mode.
5. Note: You can connect the speaker with a smart phone, a tablet or a PC with Bluetooth.

TROUBLE SHOOTING

Power Failure

1. Please check if the VOLUME/POWER knob is turned on.
2. Please charge the unit to make sure it is not out of power.

No Sound

1. Please check the volume with the VOLUME/POWER knob.
 2. In AUX IN mode, please check your external audio device and the AUX cable.
 3. In MIC mode, please check your microphone.
 4. USB/TF No Sound: Please check if your TF/USB has music stored in it.
 5. FM No Sound Or Sound Weak: Please move your speaker to a different location, the FM station signal might be weak.
- * For more questions/problems about the speaker and the operation, please contact our support team via <support@radioddity.com>.

SPECIFICATION

POWER SOURCE : DC 5V ---2A

POWER CONSUMPTION: 15W

FM FREQUENCY: 87.5-108 MHz

RANGE OF FREQUENCY: 60Hz - 20KHz

ACCESSORY

- 1* User Manual
- 1* USB Charging Cable
- 1* Wireless Microphone