

Manual Straight Key (VK-5) Instructions


Instructions:

1. Methods of adjusting the feel:

1.1 Adjust the tightness of the spring:

Rotate①the high-head thumb nut and at the same time with the press.


②After finding an suitable spring tension, tighten it. ③Keep the round thumb screw in its same state.

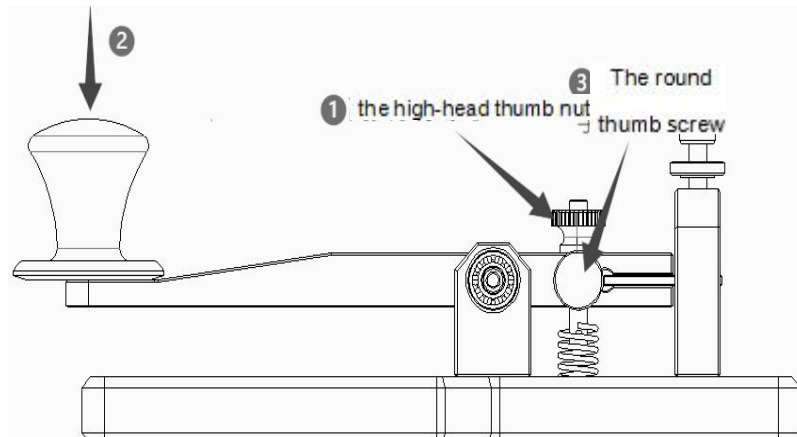

1.2 Adjust the distance between firing pin contacts:

1) Adjust the distance between contact 1 and contact 2 by rotating the contact screw.

2) The straight knurling thin nut should be pressed against the contact bracket and tightened. Then, secure the contact screw(maintaining the contact distance).

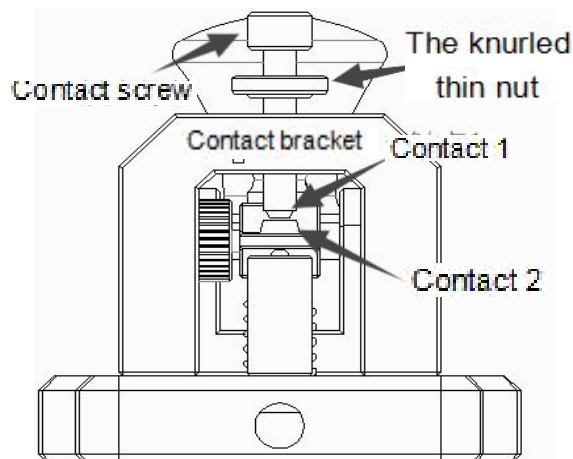

2. Connector Instruction:

Plug model: 3-core 3.5mm plug

